

Capore®

Shape Large

csl-001

Operating manual

Capore® Shape Large

Operating manual

Contents

1. General	4
1.1. Safety instructions	4
1.2. Cleaning information	5
1.3. Transport information	5
2. Troubleshooting	6
2.1. Manufacturer – Support	6
3. Annex	7
3.1. Technical drawings	7
3.1.1. Perspective	7
3.1.2. Top view	8
3.1.3. Right view	9

Notes

This manual is applicable for the following objects only:

- Capore® Shape Large (csl-001)

Information in this document is subject to change without notice.

©2019 Interactive Scape GmbH. All rights reserved.

The document or excerpts from the document may not be duplicated without the prior permission of Interactive Scape GmbH.

Interactive Scape GmbH shall not be liable for any errors contained in this document or any other incidental or consequential damages resulting from the delivery, use or application of this material.

All product names mentioned in this document are trademarks or registered trademarks of their respective owners.

1. General

This manual describes the proper use of **Capore® Shape Large** objects. Please be aware of any additional documents that may be required.

In order for the objects to function on a **Scape® Tangible** touchscreen, a pattern configuration file matching the respective object type must be activated in the **Capore® API Box** of the screen, if not already configured. For more information, refer to the **Capore® Touch and Object Assistant** manual.

Stable functionality of the objects is only guaranteed when used on **Scape® Tangible** touchscreens from Interactive Scape GmbH.

1.1. Safety instructions

Follow these safety precautions before and during the use of your **Capore® Shape Large** objects to protect yourself, your environment, and the **Capore® Shape Large** objects from damage.

Moisture, liquids and vapours

Moisture, liquids and vapours can impair the functionality of your **Capore® Shape Large** objects and your **Scape® Tangibles**. In particular, the undersides of the objects should always be kept completely dry during use.

- Use the **Capore® Shape Large** objects only inside buildings.
- Do not allow the **Capore® Shape Large** objects to come into contact with liquids.
- Protect your **Capore® Shape Large** objects from vapors and moisture.

Improper cleaning

Improper cleaning with strong detergents and solvents or dripping wet cloths can damage the **Capore® Shape Large** objects.

- Please observe the information on cleaning your **Capore® Shape Large** objects (Chapter 1.2 Cleaning information).

Improper opening and repair

Improper opening and repair can cause **Capore® Shape Large** objects to lose their functionality and damage the surface of the **Scape® Tangible**.

- Do not open the object housings.
- If repairs are required, contact the manufacturer or a specialist dealer.

Load and damage to the surface

Rough or sharp-edged materials can particularly damage the underside of **Capore® Shape Large** objects and impair object recognition.

- Do not place heavy items on top of the objects.
- Store objects only on smooth or soft surfaces.
- Do not use objects with a dirty underside or on dirty screens.

1.2. Cleaning information

Capore® Shape Large objects usually do not need to be maintained. Nevertheless, it is recommended to clean the surfaces regularly to avoid scratching the undersides of the **Capore® Shape Large** objects.

Clean the undersides of the **Capore® Shape Large** objects regularly before and during use to avoid scratching the screen surface.

- Commercially available plastic cleaner is suitable for cleaning the surfaces.
- Apply the solution to a soft, lint-free cloth. Avoid coarse materials.
- Do not use microfibre cloths to clean the glass surfaces.
- Moisten the cloth and clean the **Capore® Shape Large** objects from all sides. Apply the liquid only to the cloth and never directly to the object. This will prevent liquid from penetrating inside the object.

1.3. Transport information

Always transport your **Capore® Shape Large** objects adequately padded and protected against moisture. It is generally recommended to use the original packaging.

2. Troubleshooting

Do not open the housing of the **Capore® Shape Large** objects yourself.

If your **Capore® Shape Large** objects do not work as intended, contact **Interactive Scape Hardware Support**. You can reach them on weekdays at +49 30 698 094 150.

2.1. Manufacturer – Support

Interactive Scape GmbH
Wilhelmine-Gemberg-Weg 6
10179 Berlin

+49 (0)30 698 094 150


3. Annex

3.1. Technical drawings


3.1.1. Perspective



3.1.2. Top view

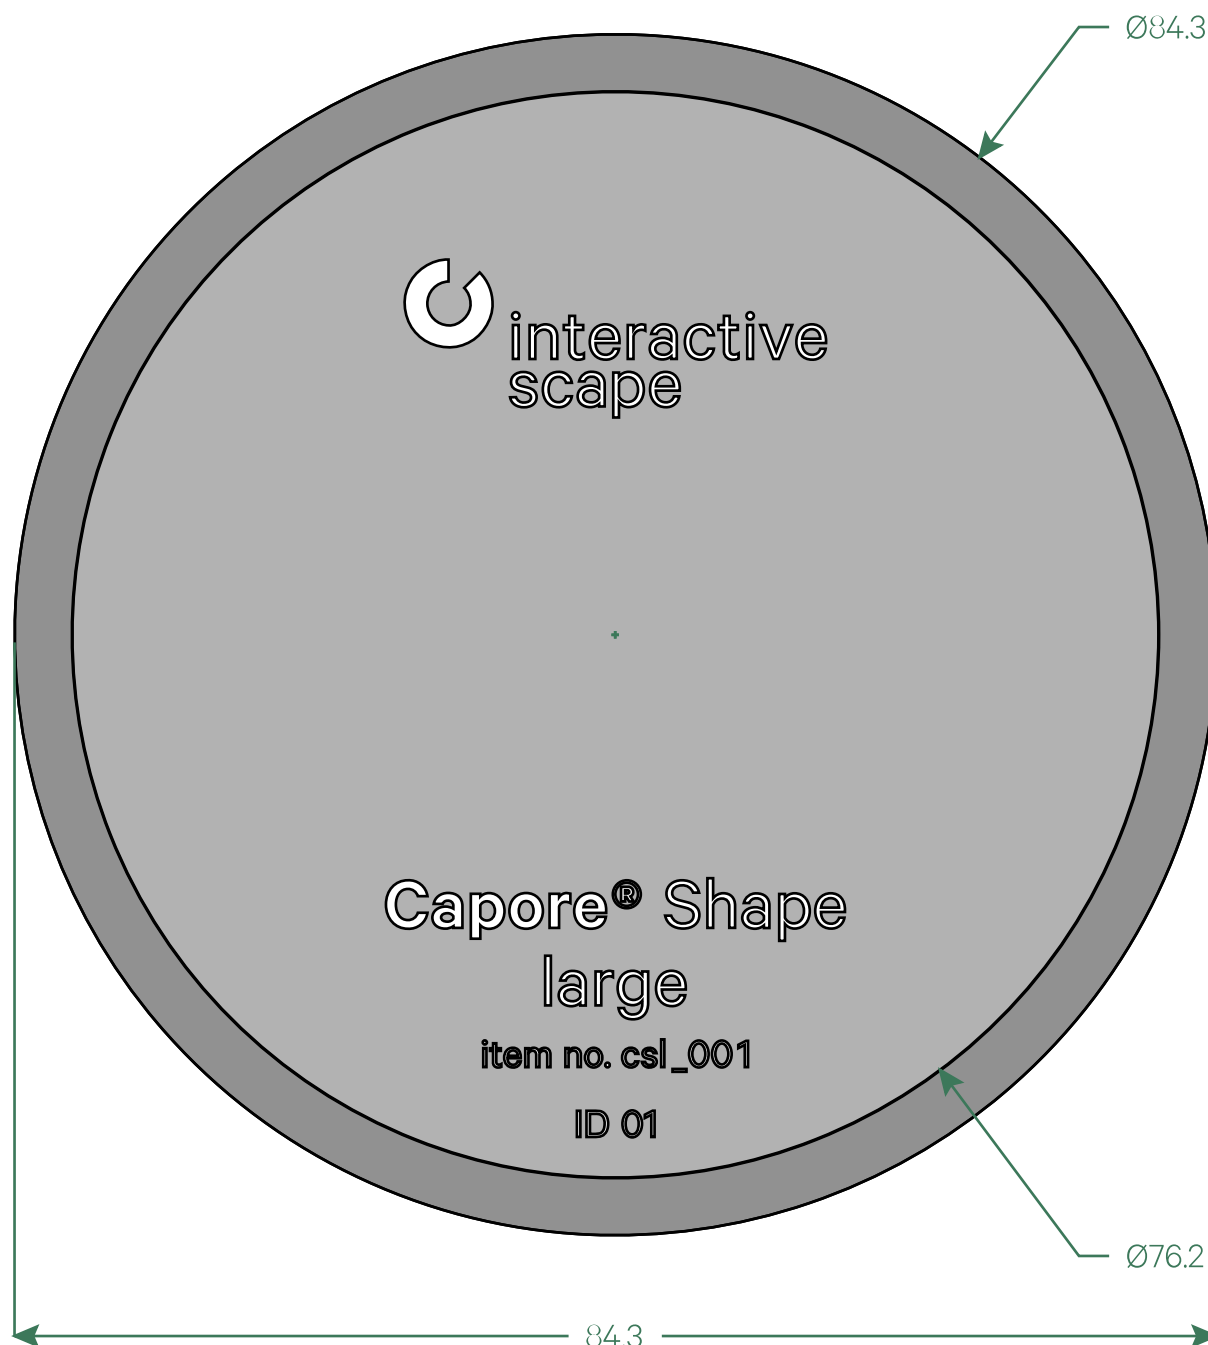

3.1.3. Right view

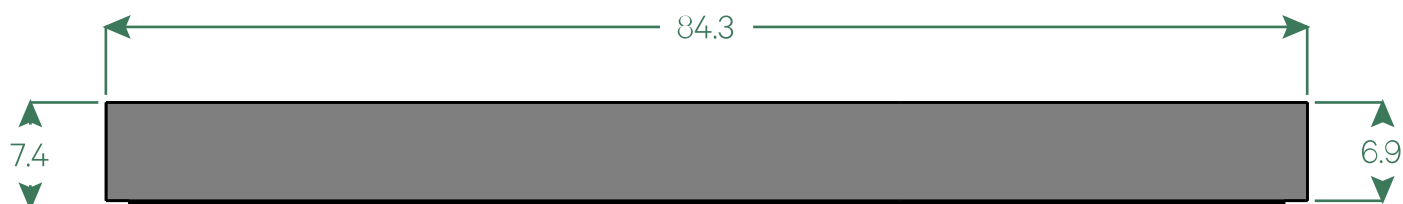

Interactive Scape GmbH

Wilhelmine-Gemberg-Weg 6, D-10179 Berlin

T +49 30 69 809 41-00, F +49 30 69 809 429

www.interactive-scape.com, info@interactive-scape.com