

Scape®

Hardware

stxx-004 & pcsi-005/6

Installation guide

Scape® Hardware

Installation guide

Contents

1. Connections and controls	4
1.1. Scape® Tangible	4
1.2. Silent PC	5
2. Wiring	6
2.1. Capore® touch and object recognition	6
2.2. Windows touch	7
3. Troubleshooting tips	8
3.1. Manufacturer – Support	8

Notes

This document provides graphics for the correct wiring of a Scape® Tangible with a Silent PC for operation with Windows Touch or Capore® Touch and object recognition.

This manual is applicable for the following devices:

- **Scape® Tangible** (stxx-004)
- Silent PC 2060 (pcsi-005)
- Silent PC 2070 (pcsi-006)

Information in this document is subject to change without notice.

©2019 Interactive Scape GmbH. All rights reserved.


The document or excerpts from the document may not be duplicated without the prior permission of Interactive Scape GmbH.

Interactive Scape GmbH shall not be liable for any errors contained in this document or any other incidental or consequential damages resulting from the delivery, use or application of this material.

All product names mentioned in this document are trademarks or registered trademarks of their respective owners.

1. Connections and controls

1.1. Scape® Tangible

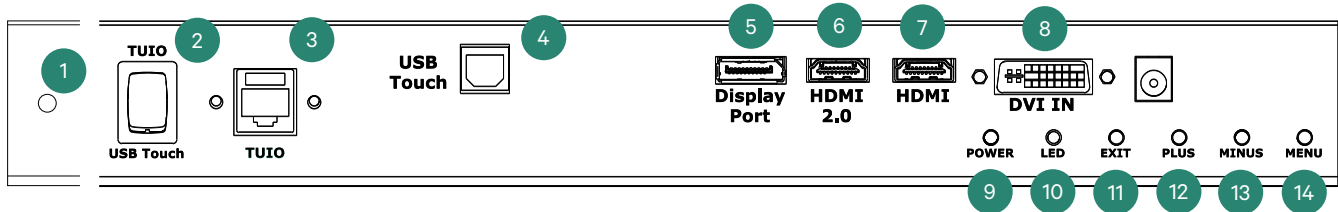


1	IR-Sensor for remote control
2	Switch between Touch TUIO / USB Touch
3	RJ-45 Lan interface – to use the Capore® Touch & Object Assistant
4	USB-Connection Type B – for direct connection of touch and PC
5	DisplayPort input
6	HDMI 2.0 input (UHD 60 Hz)
7	HDMI 1.4 input
8	DVI input
9	Stand-by
10	Status LED
11	Close OSD / > back / > show input selection
12	Plus / Right
13	Minus / Left
14	Open OSD / confirm selection




15	IEC socket for connection to 230V 50Hz
16	Main power switch

1.2. Silent PC

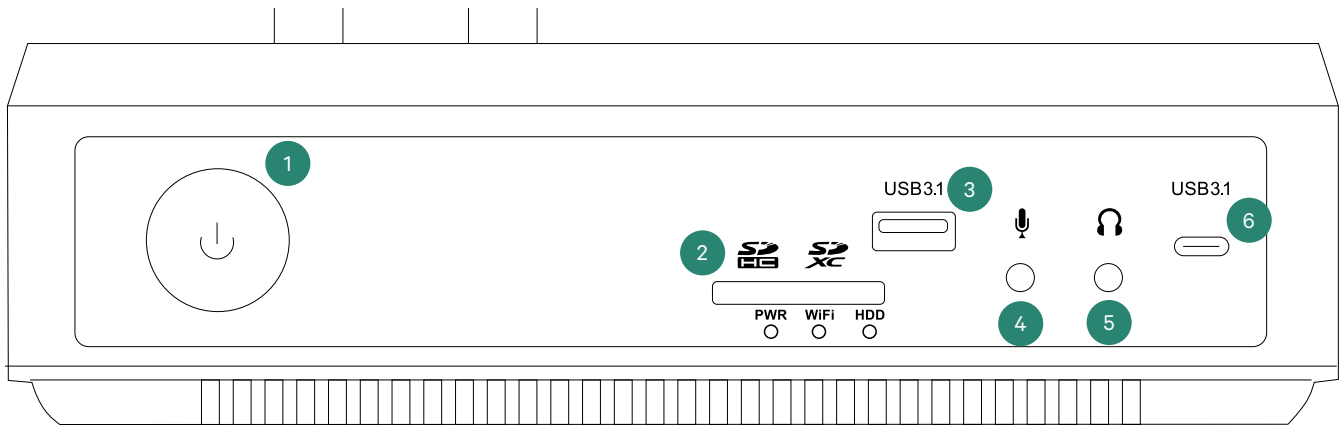


1	Switch PC on / off
2	SD(HC/XC)-Slot
3	USB 3.1 (type A)
4	Microphone input (3.5mm jack)
5	Audio output (3.5mm jack)
6	USB 3.1 (type C)

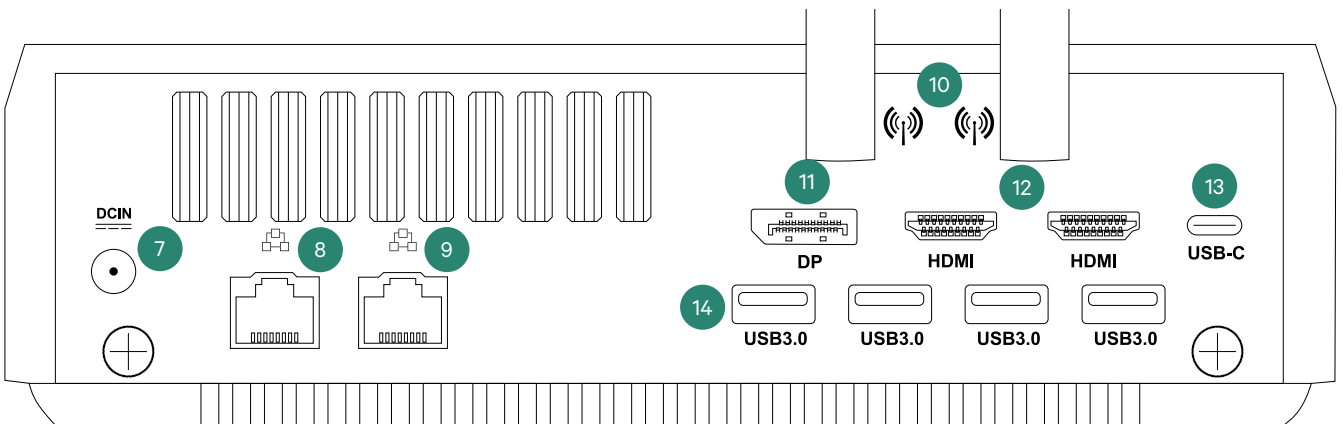

7	Power supply
8	Gigabit Ethernet (internal – Capore®)
9	Gigabit Ethernet (external)
10	2x external WIFI antennas
11	DisplayPort out
12	2x HDMI 2.0 out
13	USB 3.1 (type C)
14	4x USB 3.0 (type A)

2. Wiring


2.1. Capore® touch and object recognition

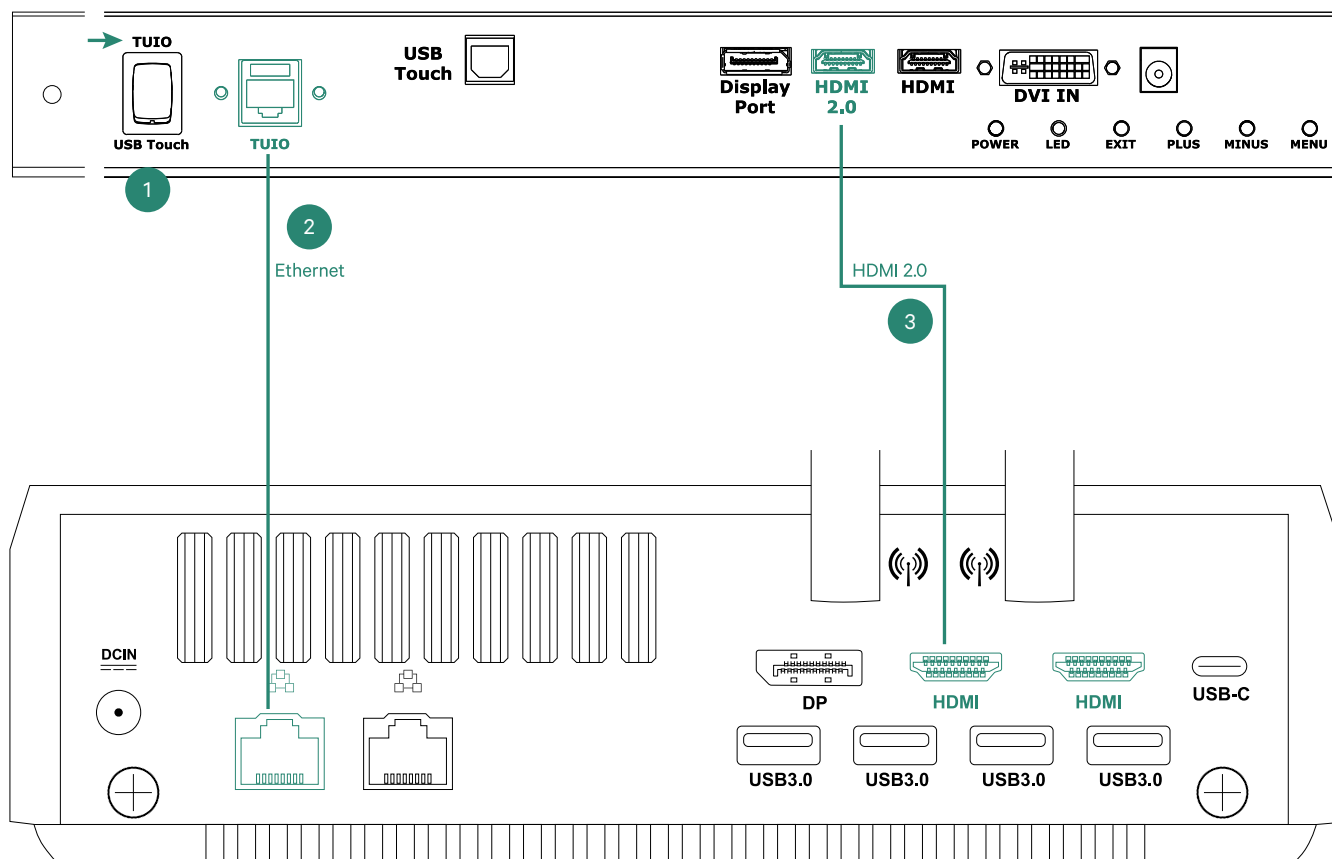

- | | |
|---|---|
| 1 | Set switch to TUIO |
| 2 | Establishing a network connection (RJ45 connector)* |
| 3 | Establishing an HDMI 2.0 connection |

* PC network settings:
IPv4 address: 10.0.0.21
Subnet mask: 255.255.255.0

2.2. Windows touch

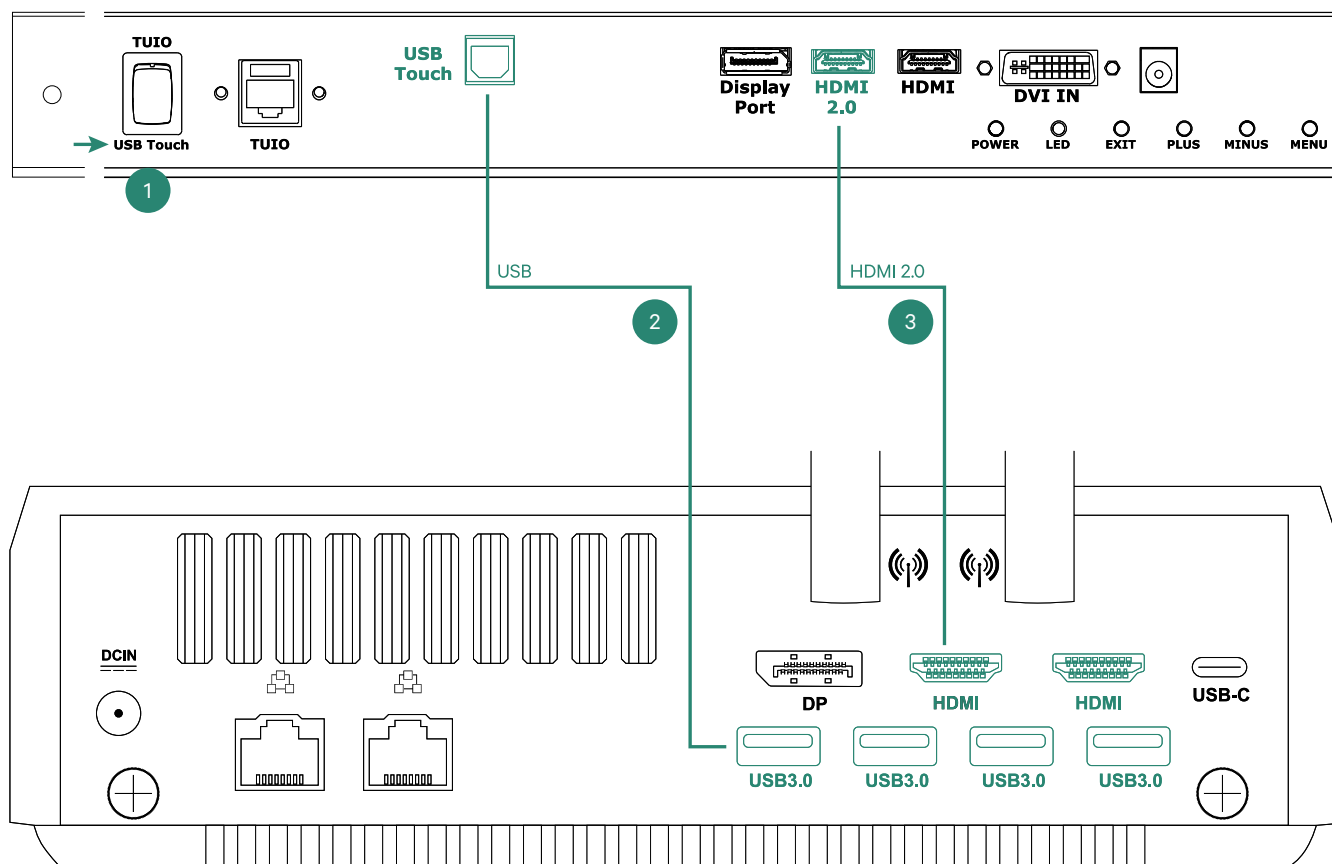

- 1 Set switch to USB Touch
- 2 Establishing a USB Connection (USB A-to-B Cable)
- 3 Establishing an HDMI 2.0 connection

3. Troubleshooting tips

Do not open the housing of the **Scape® Tangible** and Silent PC by yourself.

If your devices do not work as intended, contact **Interactive Scape Hardware Support**. You can reach them on weekdays at **+49 30 698 094 150**.

3.1. Manufacturer – Support

Interactive Scape GmbH
Wilhelmine-Gemberg-Weg 6
10179 Berlin
Germany

+49 (0)30 698 094 150

Interactive Scape GmbH

Wilhelmine-Gemberg-Weg 6, D-10179 Berlin

T +49 30 69 809 41-00, F +49 30 69 809 429

www.interactive-scape.com, info@interactive-scape.com