

# Silent-PC

pcsi-010

Installation guide

# Scape® Hardware

## Installation guide

### Contents

|                                                      |           |
|------------------------------------------------------|-----------|
| <b>1. Connections and controls</b>                   | <b>4</b>  |
| 1.1. Front                                           | 4         |
| 1.2. Back                                            | 5         |
| <b>2. Wiring</b>                                     | <b>6</b>  |
| 2.1. Capore® / Scape X® touch and object recognition | 6         |
| 2.2. Windows touch                                   | 7         |
| <b>3. Technical specifications</b>                   | <b>8</b>  |
| 3.1. Silent-PC 3060                                  | 8         |
| <b>4. Technische Zeichnungen</b>                     | <b>9</b>  |
| 4.1. Perspective                                     | 9         |
| 4.2. Top view                                        | 10        |
| 4.3. Front view                                      | 11        |
| 4.4. Back view                                       | 12        |
| 4.5. Left view                                       | 13        |
| 4.6. Right view                                      | 14        |
| <b>5. Troubleshooting tips</b>                       | <b>15</b> |
| 5.1. Manufacturer – Support                          | 15        |

# Notes

This document provides graphics for the correct wiring of a Scape® Tangible with a Silent PC for operation with Windows Touch or Capore® / Scape X® Touch and object recognition.

This manual is applicable for the following devices:

- Silent-PC 3060 (pcsi-010)



**The unit must not be disconnected from the power supply during operation.  
Be sure to shut down the operating system before disconnecting the power supply.  
Otherwise, you risk errors on the data carriers, data loss or failure of the unit.**

Information in this document is subject to change without notice.

©2022 Interactive Scape GmbH. All rights reserved.


The document or excerpts from the document may not be duplicated without the prior permission of Interactive Scape GmbH.

Interactive Scape GmbH shall not be liable for any errors contained in this document or any other incidental or consequential damages resulting from the delivery, use or application of this material.

All product names mentioned in this document are trademarks or registered trademarks of their respective owners.


# 1. Connections and controls

## 1.1. Front

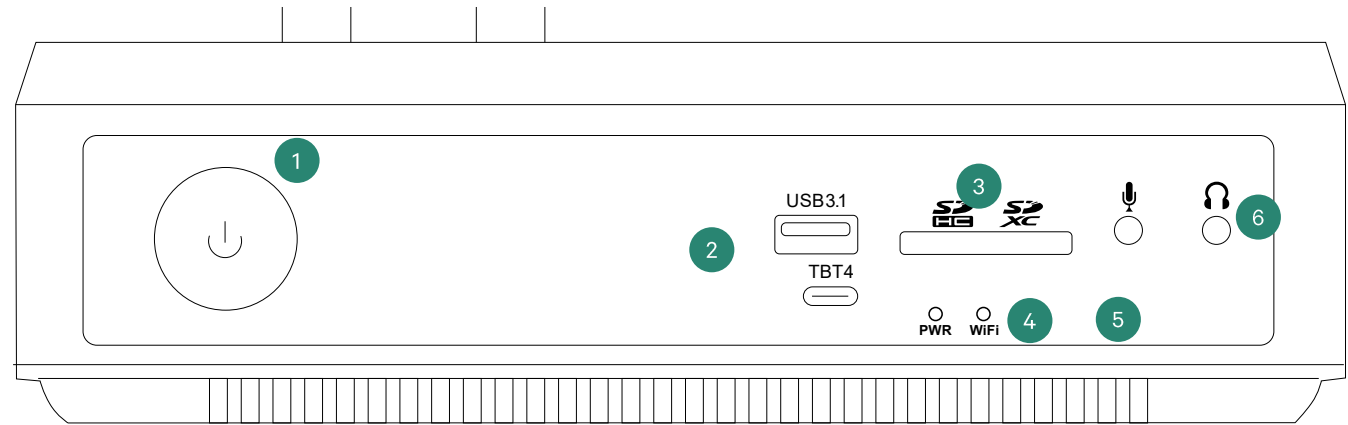

|   |                               |
|---|-------------------------------|
| 1 | Switch PC on / off            |
| 2 | SD(HC/XC)-Slot                |
| 3 | USB 3.1 (type A)              |
| 4 | Microphone input (3.5mm jack) |
| 5 | Audio output (3.5mm jack)     |
| 6 | USB 3.1 (type C)              |


1.2. Back

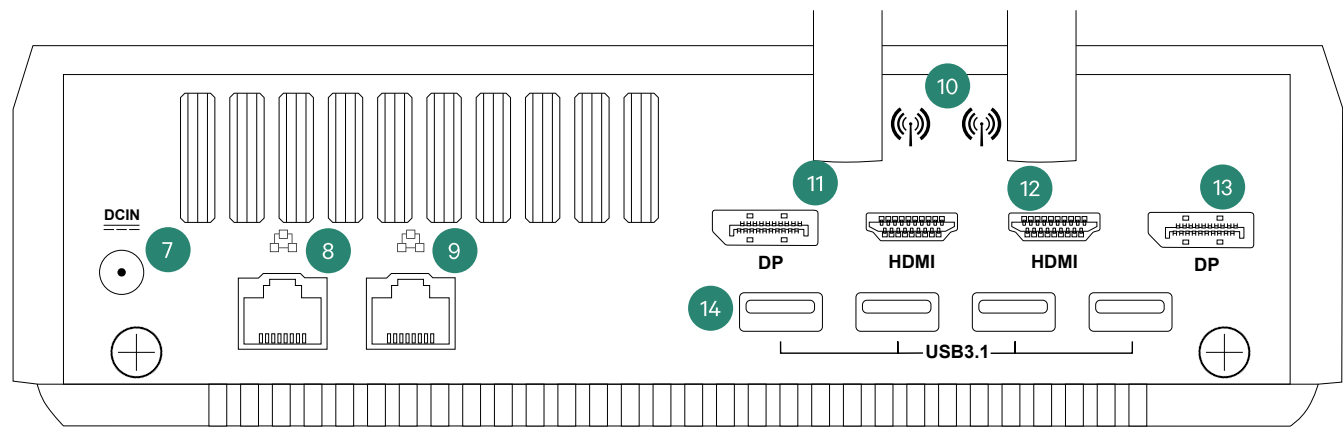

|    |                                       |
|----|---------------------------------------|
| 7  | Power supply                          |
| 8  | Gigabit Ethernet (internal – Capore®) |
| 9  | Gigabit Ethernet (external)           |
| 10 | 2x external WIFI antennas             |
| 11 | DisplayPort 1.4                       |
| 12 | 2x HDMI 2.0                           |
| 13 | DisplayPort 1.4                       |
| 14 | 4x USB 3.0 (type A)                   |

## 2. Wiring


### 2.1. Capore® / Scape X® touch and object recognition

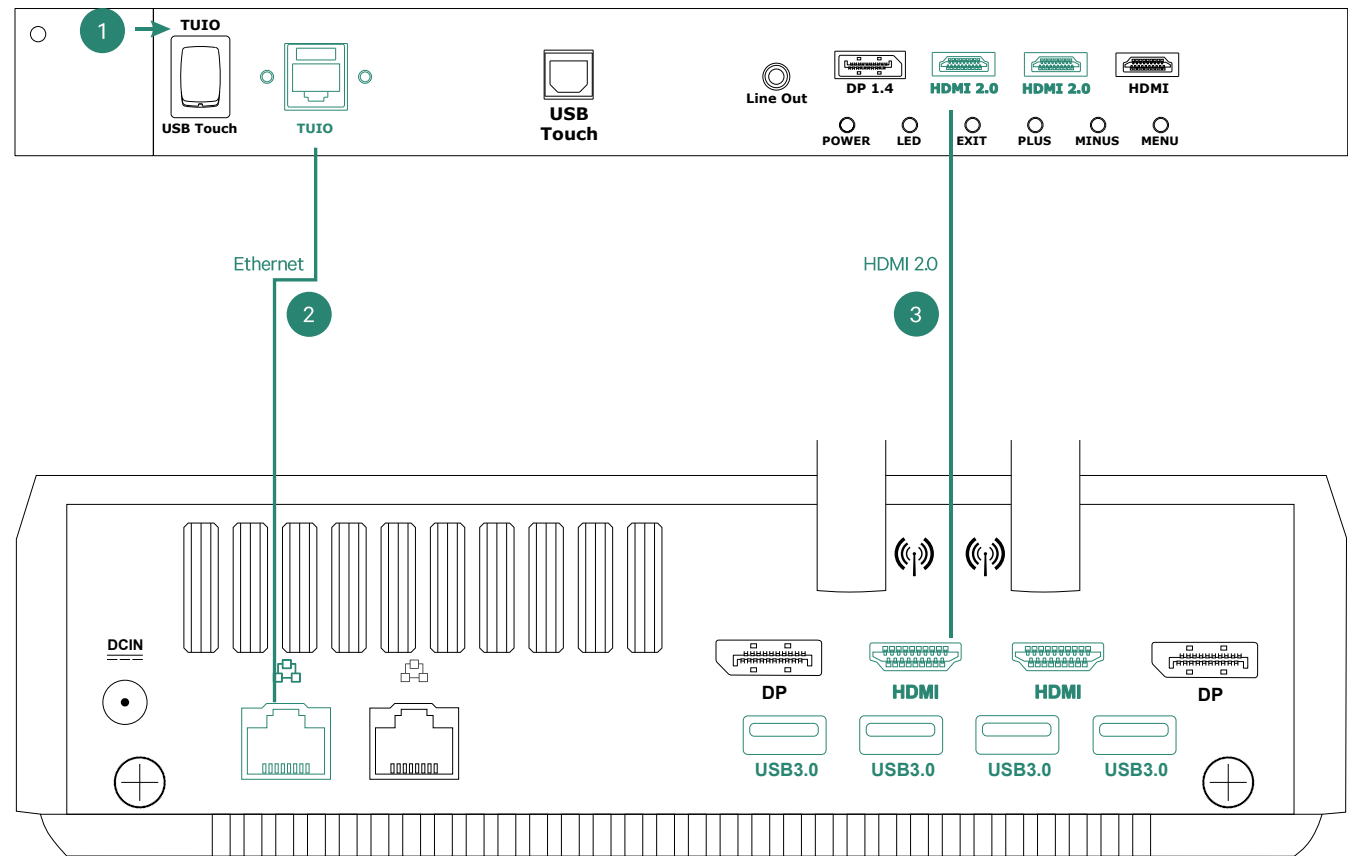

|   |                                                     |
|---|-----------------------------------------------------|
| 1 | Set switch to TUIO                                  |
| 2 | Establishing a network connection (RJ45 connector)* |
| 3 | Establishing an HDMI 2.0 connection                 |

\* PC network settings:  
IPv4 address: 10.0.0.21  
Subnet mask: 255.255.255.0

2.2. Windows touch

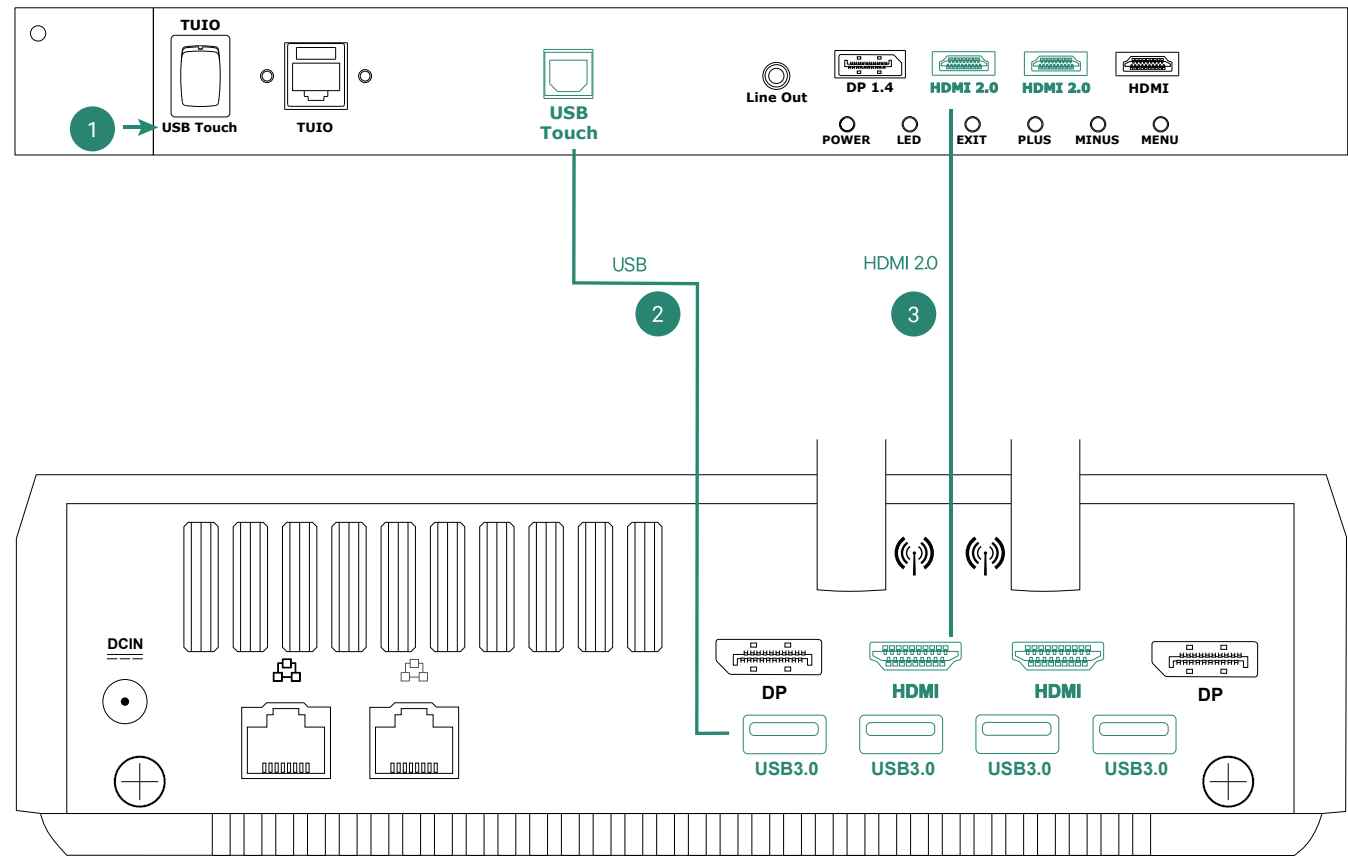

- |   |                                                  |
|---|--------------------------------------------------|
| 1 | Set switch to USB Touch                          |
| 2 | Establishing a USB Connection (USB A-to-B Cable) |
| 3 | Establishing an HDMI 2.0 connection              |


## 3. Technical specifications

### 3.1. Silent-PC 3060


|                       |                                                                              |
|-----------------------|------------------------------------------------------------------------------|
| Article Number        | pcsi-010                                                                     |
| <b>Specifications</b> |                                                                              |
| Processor             | Intel Core i5-11400H Six-core 2.7 - 4.5 GHz                                  |
| RAM                   | 16 GB (Dual Channel)                                                         |
| Hard drive            | 250 GB SSD M.2                                                               |
| Graphics Card         | NVIDIA Geforce RTX 3060 6GB GDDR6                                            |
| Sound                 | Onboard 8 Channel Digital Audio via HDMI Mic/Speaker output                  |
| <b>Ports</b>          |                                                                              |
| Display               | 2x HDMI 2.1 / 2x DisplayPort 1.4a                                            |
| Network               | WIFI 6 Killer AX1650 / 1x Killer 2.5 Gbps LAN / 1x Gigabit LAN / Bluetooth 5 |
| USB                   | 4x USB 3.1 Type A, 1x Thunderbolt 4                                          |
| <b>Other</b>          |                                                                              |
| Dimensions (LxWxH)    | 210 x 203 x 62.2 mm                                                          |
| Power Supply          | External power supply unit                                                   |
| Operating voltage     | 100 – 240 VAC                                                                |
| Power draw            | 330 W                                                                        |
| Operating System      | Windows 10 Professional                                                      |
|                       | not suitable for 24/7 operation                                              |

## 4. Technische Zeichnungen


### 4.1. Perspective

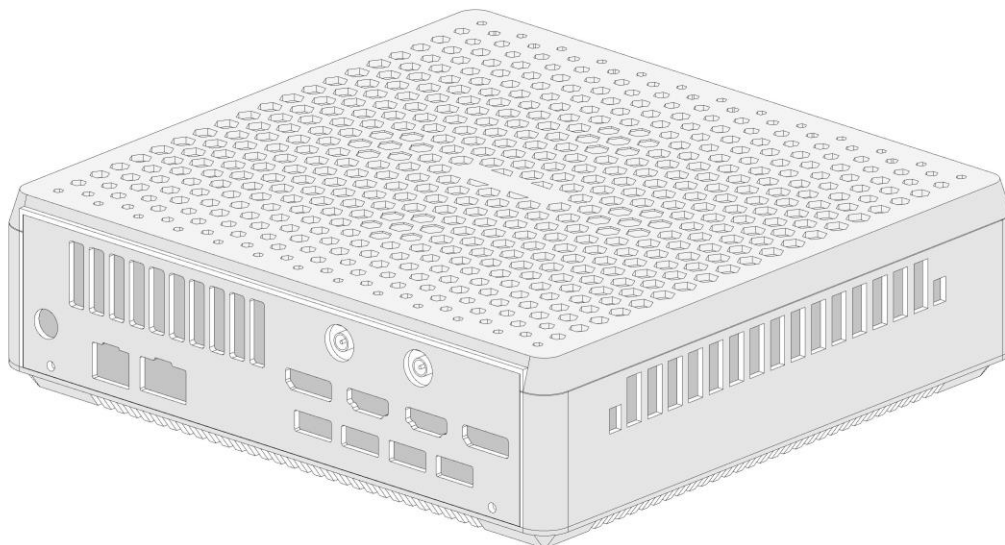


## 4.2. Top view

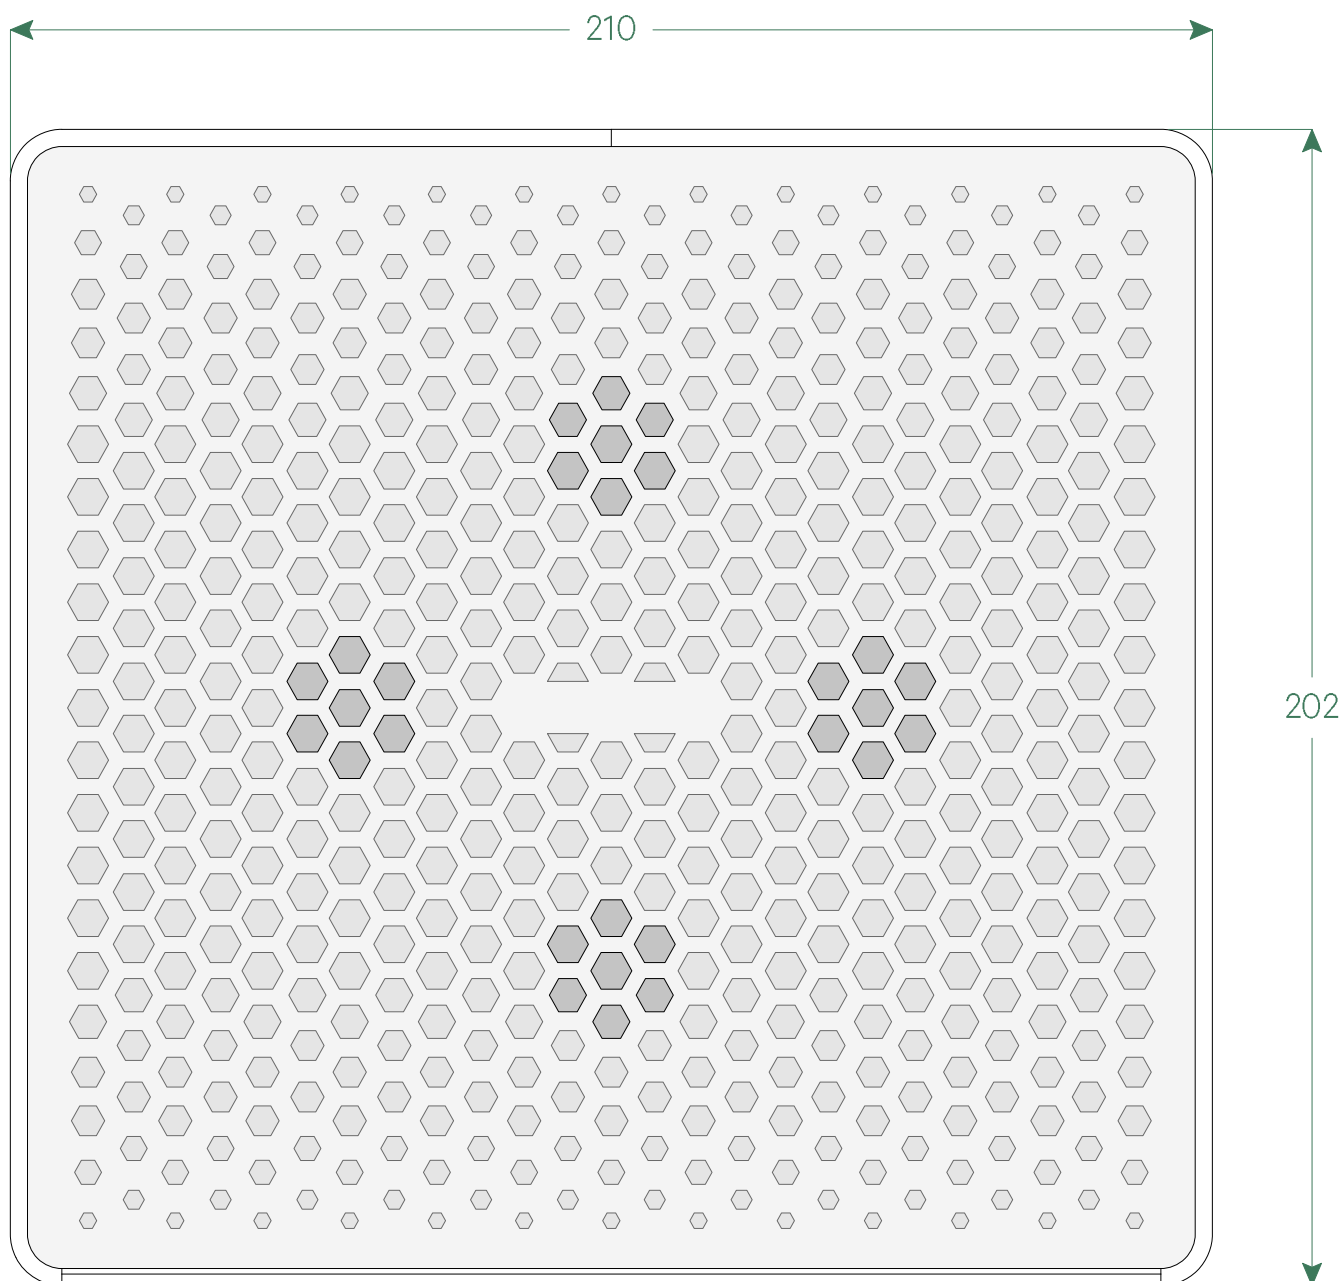


4.3. Front view

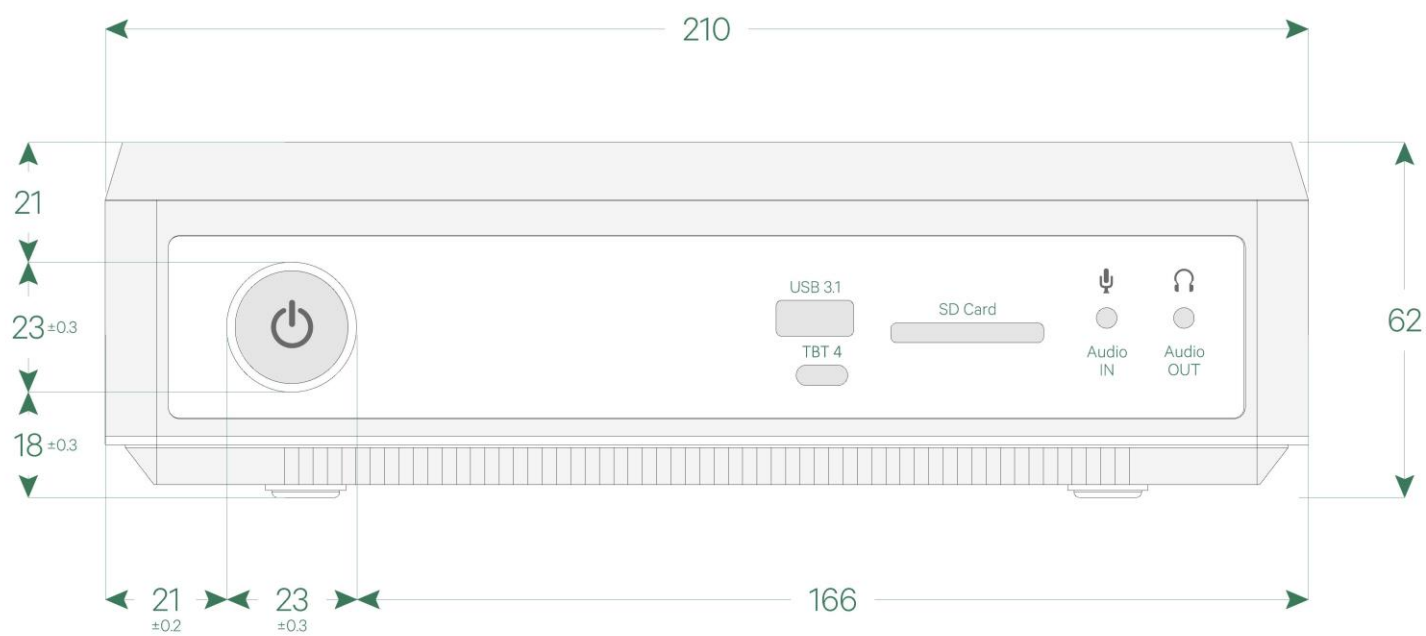


## 4.4. Back view

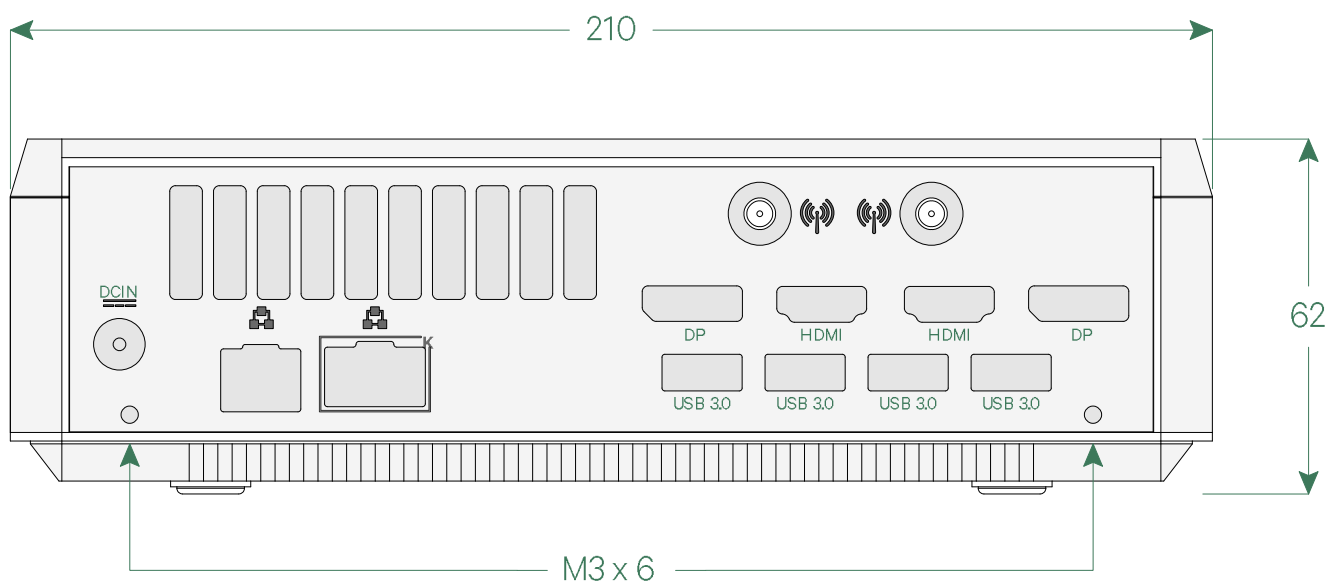

## 4.5. Left view

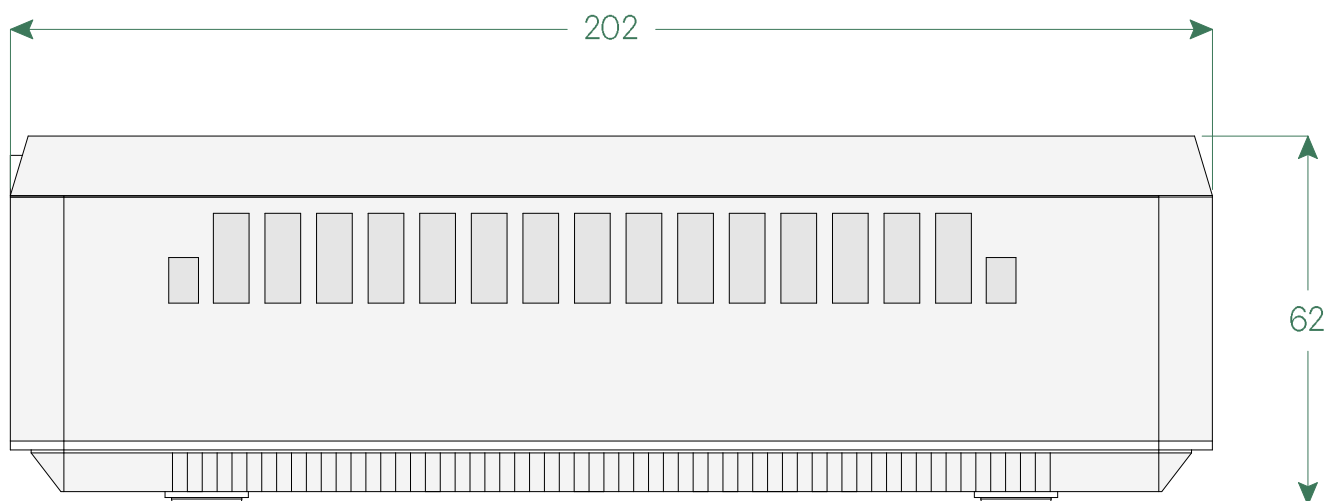

## 4.6. Right view

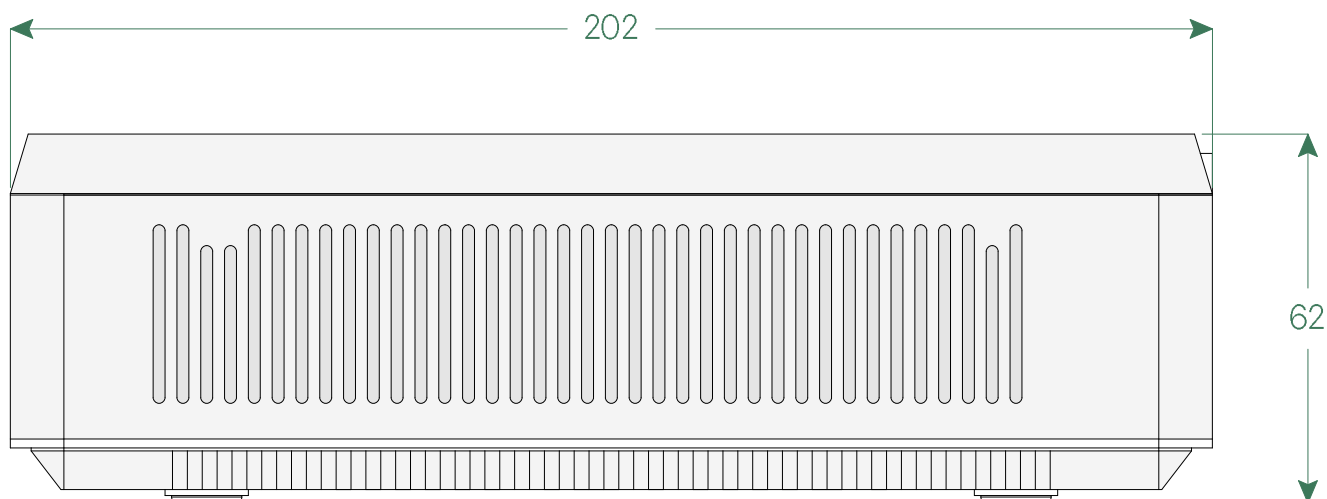

## 5. Troubleshooting tips

Do not open the housing of the **Scape® Tangible and Silent PC** by yourself.

If your devices do not work as intended, contact **Interactive Scape Hardware Support**. You can reach them on weekdays at **+49 30 698 094 150**.

### 5.1. Manufacturer – Support

Interactive Scape GmbH  
Wilhelmine-Gemberg-Weg 6  
10179 Berlin  
Germany

+49 (0)30 698 094 150

**Interactive Scape GmbH**

Wilhelmine-Gemberg-Weg 6, D-10179 Berlin

T +49 30 69 809 41-00, F +49 30 69 809 429

[www.interactive-scape.com](http://www.interactive-scape.com), [info@interactive-scape.com](mailto:info@interactive-scape.com)