

Scape® Tangible 55 & Silent PC

Installation Guide


Scape® Tangible 55 & Silent PC Installation Guide

Contents

1. Connections & controls	3
1.1 Screen	3
1.2 Silent PC	4
2. Cabling overview	5
2.1 Installation with Capore®	5
2.2 Installation with external Windows Touch	6
3. Troubleshooting tips	7
3.1 Manufacturer – Support	7

1. Connections and controls

1.1 Touch screen

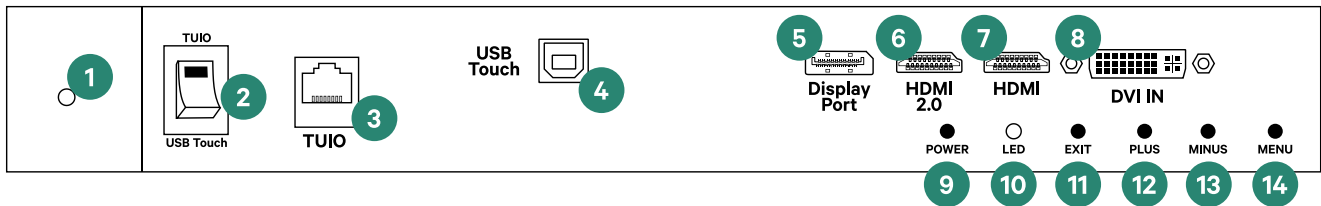


00	
1	IR-Sensor for remote control
2	Switch between Touch TUIO / USB Touch
3	RJ-45 Lan interface – to use the Capore® Touch & Object Assistant
4	USB-Connection Type B – for direct connection of touch and PC
5	DisplayPort input
6	HDMI 2.0 input (UHD 60 Hz)
7	HDMI input
8	DVI input
9	Stand-by
10	Status-LED
11	Close OSD / > back
12	Plus / Right
13	Minus / Left
14	Open OSD / confirm selection




15	IEC socket for connection to 230V 50Hz
16	Main power switch

1.2 Silent PC

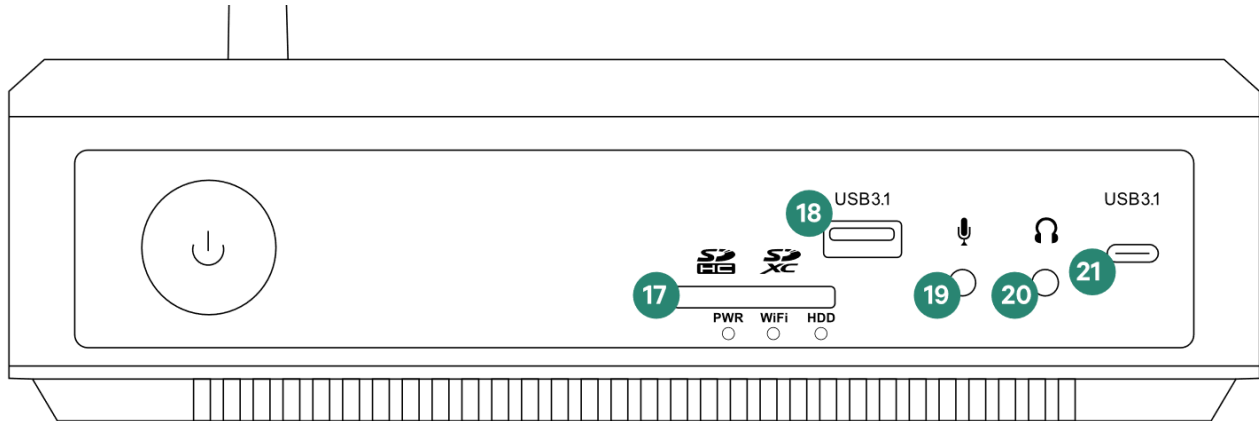


17	SD(HC) slot
18	USB 3.1 (type A)
19	Microphone input (3.5mm jack)
20	Audio output (3.5mm jack)
21	USB 3.1 (type C)

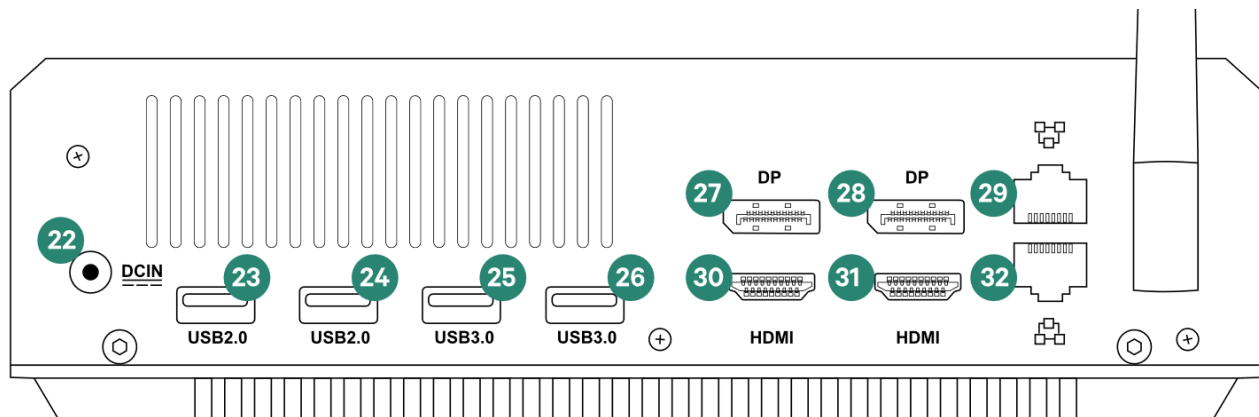


22	Power supply
23	USB 2.0 (type A)
24	USB 2.0 (type A)
25	USB 3.0 (type A)
26	USB 3.0 (type A)
27	DisplayPort out
28	DisplayPort out
29	Gigabit Ethernet (internal – Capore®)
30	HDMI out
31	HDMI out
32	Gigabit Ethernet (external)

2. Cabling overview

2.1 Installation with Capore®

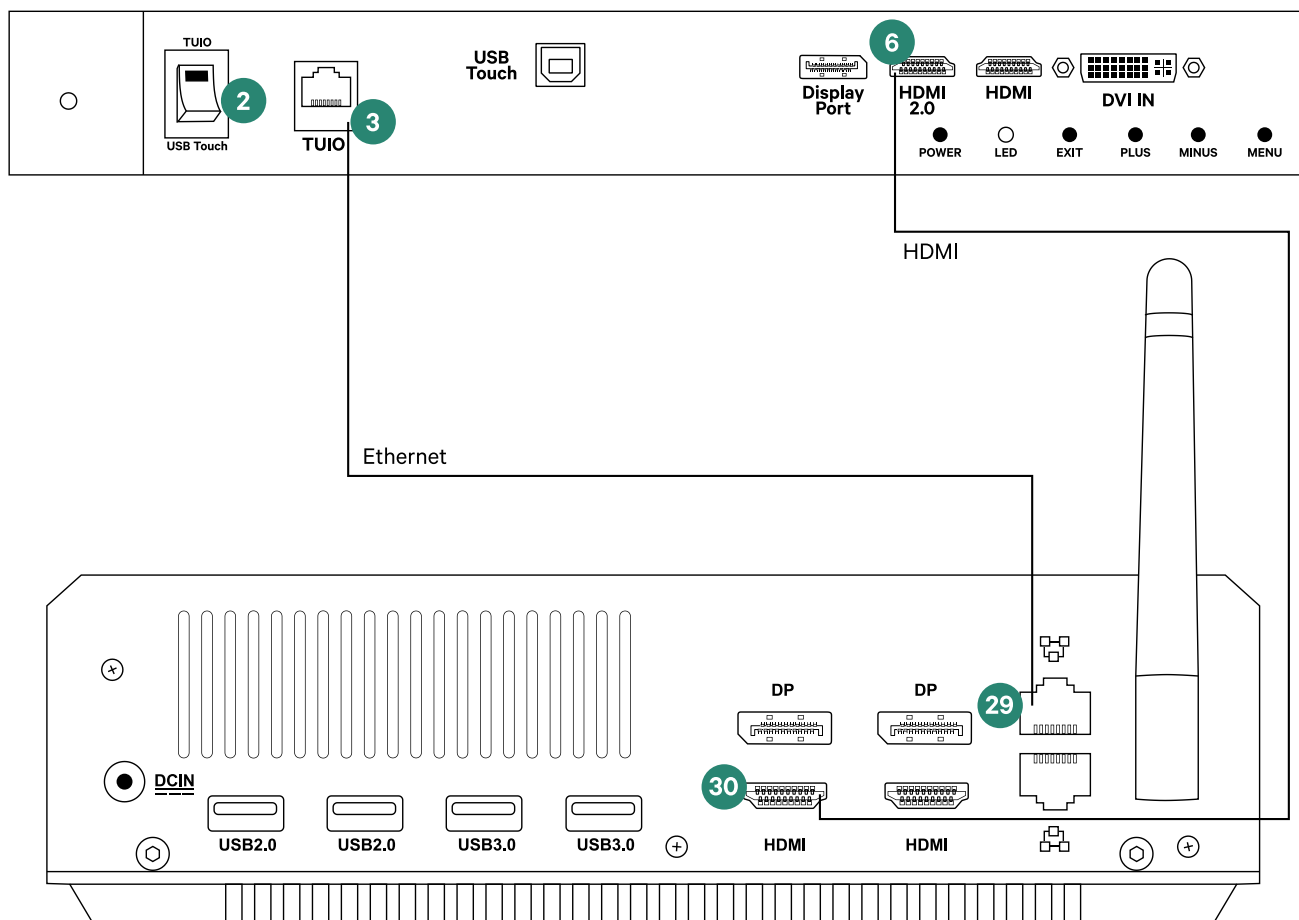

2.2 Installation with external Windows Touch

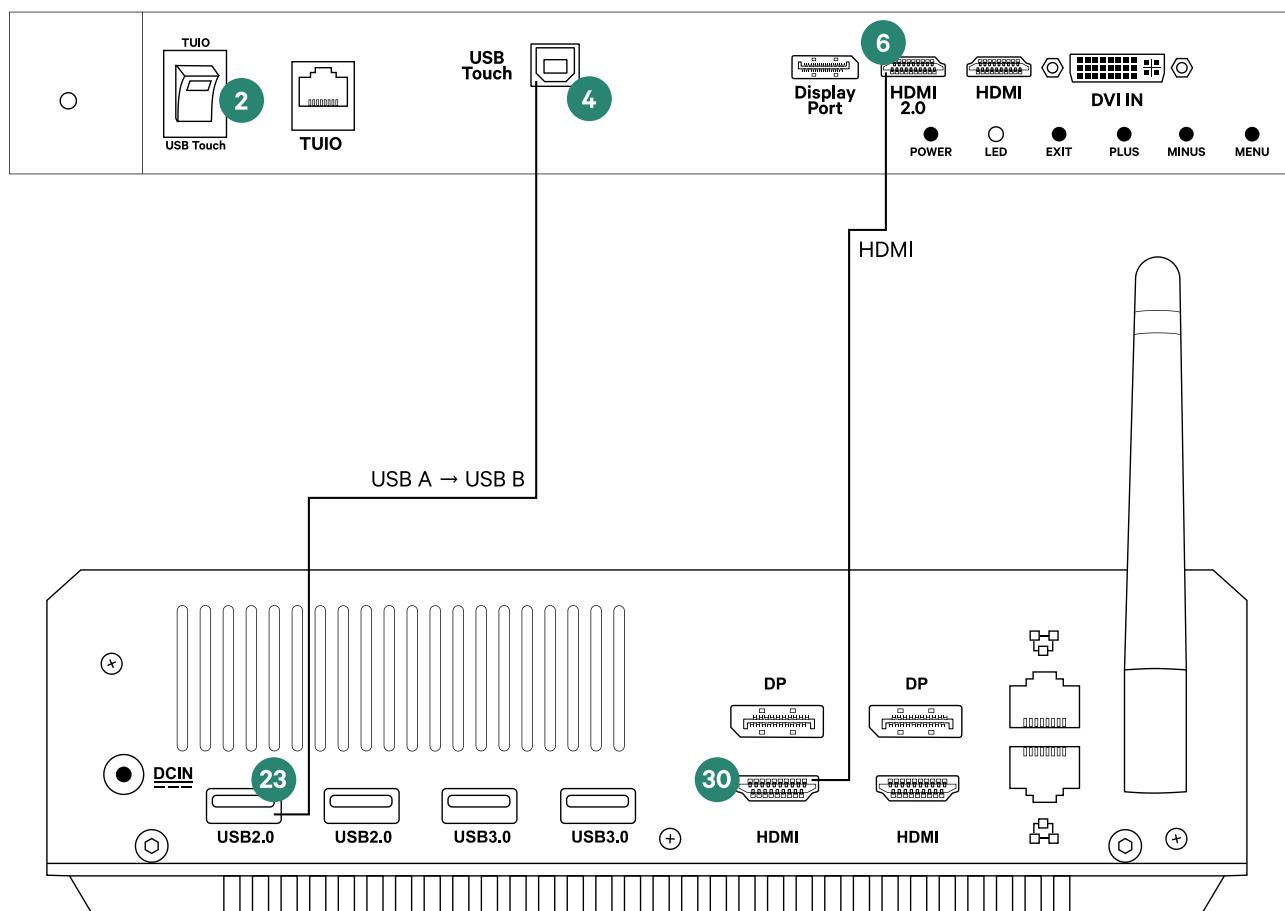

3. Troubleshooting tips

Do not open the housing of the Scape® Tangible or the Silent PC on your own.

If your devices do not work as intended, contact Interactive Scape Hardware Support, reachable on weekdays at +49 30 698 094 150.

3.1 Manufacturer - Support

Interactive Scape GmbH
Wilhelmine-Gemberg-Weg 6
10179 Berlin

+49 (0)30 698 094 150



Interactive Scape GmbH
Wilhelmine-Gemberg-Weg 6, D-10179 Berlin
T +49 30 69 809 41-00, F +49 30 69 809 429
www.interactive-scape.com, info@interactive-scape.com