

Scape®

Movable

Operating Manual

Scape® Movable Operating Manual

Contents

1. General	4
1.1. Safety instructions	4
1.2. Scope of delivery	6
1.3. Cleaning instructions	7
1.4. Transportation instructions	7
2. Specifications and set up	8
2.1. Specifications	8
2.2. Connections and controls	9
2.2.1. Lift frame	9
2.2.2. Integrated PC	10
2.2.3. Touch screen	12
2.2.4. Remote control	13
3. Installation	14
3.1. Notes	14
3.2. Connection to the power supply	14
3.3. Connection to the network	14
4. Switching on	15
5. Display settings – OSD	16
5.1. OSD usage	16
5.2. Select input source	16
6. Integrated PC	17
7. Troubleshooting tips	18
7.1. Manufacturer – Support	18
7.2. Problems and solutions	18
8. Appendix	19
8.1. Technical data	19
8.1.1. Scape® Movable	19
8.1.2. Touch screen	19
8.1.3. Silent PC	20

Notes

This is a class A device according to EN55022.

For more information, please refer to Chapter 1.1 - Radio interference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1 this device may not cause harmful interference, and (2 this device must accept any interference received, including interference that may cause undesired operation.



This Class A digital apparatus complies with Canadian ICES-003.

This manual is applicable for the following devices:

- Scape® Movable 43" (s_tsmo-002 with st43-004 R1.1)
- Scape® Movable 55" (s_tsmo-002 with st55-004 R1.1)
- Scape® Movable 65" (s_tsmo-002 with st65-004 R1.1)

Information in this document is subject to change without notice.

©2018 Interactive Scape GmbH. All rights reserved.

The document or excerpts from the document may not be duplicated without the prior permission of Interactive Scape GmbH.

Interactive Scape GmbH shall not be liable for any errors contained in this document or any other incidental or consequential damages resulting from the delivery, use or application of this material.

All product names mentioned in this document are trademarks or registered trademarks of their respective owners.

1. General

This manual describes the safe installation, configuration and correct operation of the **Scape® Movable**.

If your device does not have an integrated PC, you can skip the chapters and notes about the integrated PC. All other notes and instructions continue to apply without restriction.

If necessary, pay attention to the supplementary documents, such as the installation instructions.

1.1. Safety instructions

Before using and operating your **Scape® Movable**, observe the following safety instructions to prevent you, your environment or the **Scape® Movable** from being damaged.

Fire and electric shock

Overloaded sockets, extension cords and power strips can cause fire and electric shock.

- Avoid using power strips and extension cords if possible.
- Do not chain multiple extension cords or power strips together.

Overheating

Heat build-up can overheat the screen and the integrated PC. This can damage the device.

- Ensure there is sufficient air circulation around the **Scape® Movable**.
- Make sure all the ventilation holes on around the screen and integrated PC are uncovered.

Excess voltage from lightning strikes

In the event of a thunderstorm there is a risk of excess voltage damage from lightning strikes electrical appliances that are plugged in.

- Do not install the **Scape® Movable** during a thunderstorm.
- Disconnect the devices from the mains during thunderstorms.

Moisture, liquid and steam

Moisture, liquid and steam inside the **Scape® Movable** can cause electric shocks or short circuits.

- Only use the **Scape® Movable** indoors.
- Do not allow liquids to get inside the **Scape® Movable**.
- Protect your **Scape® Movable** from steam and moisture.

Improper cleaning

Improper cleaning with harsh detergents and solvents or soaking wet cloths can damage the **Scape® Movable**.

- Observe the information on cleaning your **Scape® Movable** (see **Chapter 1.3 - Cleaning instructions**).

Improper opening and repair

Improper opening and improper repairs may be dangerous to users of the device.

- Do not open the housing of the device.
- In case of repair contact the manufacturer or a specialist dealer.

Radio interference

Radio interference can be generated by any device that emits electromagnetic signals. Due to the large number of devices that transmit and receive radio waves, interference from overlapping radio waves can occur.

- Do not use the **Scape® Movable** in locations where the use of radio equipment is prohibited.
- Always follow the instructions and instructions of authorized persons to switch off radio equipment, especially in hospitals, outpatient health centers, medical practices and other medical facilities, to avoid interference with sensitive medical equipment.
- Check with your doctor or the manufacturer of your medical device (pacemaker, hearing aid, implant with electronic control, etc.) to see if it can work your **Scape® Movable** without interference.
- If necessary, maintain the minimum distance of 15 cm recommended by medical device manufacturers to avoid interference with your medical device.

Hazardous environments

Under unfavorable conditions, radio waves near explosive atmospheres may lead to fire or explosions.

- Do not install and operate the **Scape® Movable** near explosive gases, flammable gases, areas where the air contains chemicals or particles such as grain, dust or metal powders, and near detonation zones.
- In places with potentially explosive gases and near detonation zones, follow the instructions for switching off the electronic devices to avoid disruption of the blasting and ignition systems.

Load and damage to the surface

Rough, hard or sharp-edged materials and heavy objects can damage the screen surface of the **Scape® Movable**.

- Do not place heavy objects on the screen.
- Use only objects with smooth or soft bottom surfaces on the screen.
- Clean the undersides of the objects before and after each use.

Notes on the lift frame

Improper or careless operation of the screen with the lift frame can result in damage to your **Scape® Movable** or its surroundings or to serious injury.

- The lift function of the **Scape® Movable** may only be operated by adults.
- Make sure that there are no equipment, other objects or people within the range of movement.
- Never reach into the rack during movement. There is an acute risk of injury.
- During movement, be aware of unusual noises or irregular movement of the device. Stop immediately if you observe anything unusual.
- If the control element of the lift frame makes an unusual smell or noise, stop operation immediately and disconnect the unit from the mains.
- Always leave the brakes on the lift frame castors engaged and only release them when the **Scape® Movable** has to be moved.
- After moving, reengage the brakes on the lift frame castors.
- Move the lift frame only when it is fully retracted (lowest position) and rotated vertically.
- Before moving the device, disconnect it from the mains supply – pull out the mains plug.

1.2. Scope of delivery

The following accessories are included with your **Scape® Movable**:

- IEC power connector to connect to the mains
- Wireless keyboard with trackpad
- Infrared remote control (receiver on the back panel)
- Screen cleaning kit
- Operating manual (possibly by email)

1.3. Cleaning instructions

The touch sensor of the **Scape® Movable** does not usually need to be serviced. Nevertheless, it is recommended to clean the glass surface of the screen regularly.

- Disconnect the device from the mains before cleaning.
- Typically, a solution of isopropyl alcohol and water (50:50 blend ratio) or the included screen cleaning kit are best for cleaning the touch sensor.
- Apply the solution to a soft, lint-free cloth. Avoid using rough cloths.
- Use the cloth to clean the glass surface. Apply the liquid only to the cloth and never directly to the device. This will prevent liquid from entering the inside of the device or causing marks on the frame.

1.4. Transportation instructions

The safest way to transport your device is in a **Scape® Movable** flight case (sold separately).

- Set the display to the fully vertical position for transport and move it to the lowest position.
- Apply the brakes on the castors of the lift frame during transportation.
- Secure the device or flightcase against slipping and tipping.

2. Specifications and set up

2.1. Specifications

Lift frame

	Prestop lift frame
	vertically / horizontally movable
	Maximum load 100 kg

Integrated PC


Zotac Silent PC	2.7 GHz Intel Core i5 7500T
	NVIDIA GeForce GTX 1070 8GB
	16 GB RAM
	256 GB SSD
	2x Gigabit-Lan, USB 2.0, 3.0 & 3.1
Operating system	Windows 10 Professional

Touch screen


Display	3840 x 2160 (UHD) 60 Hz
	16.7 million colors
	8 ms response time
Connections	2x HDMI (1x HDMI 2.0, 1x HDMI 1.2)
	1x DisplayPort
Touch sensor	3M – PCAP (80 touches)
	(optional) integrated Capore® Touch & Object Recognition

2.2. Connections and controls

2.2.1. Lift frame

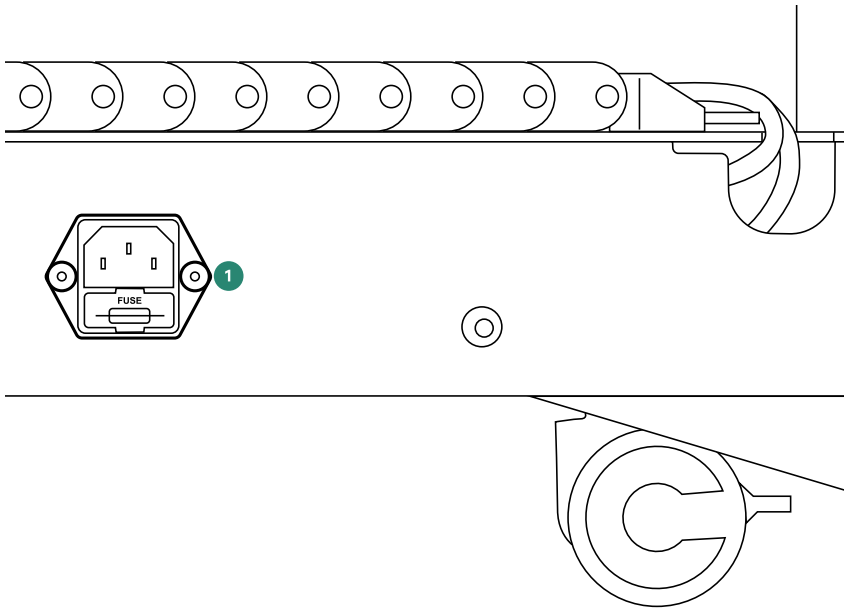


1	IEC power connection (230V / 50Hz) - fused
---	--

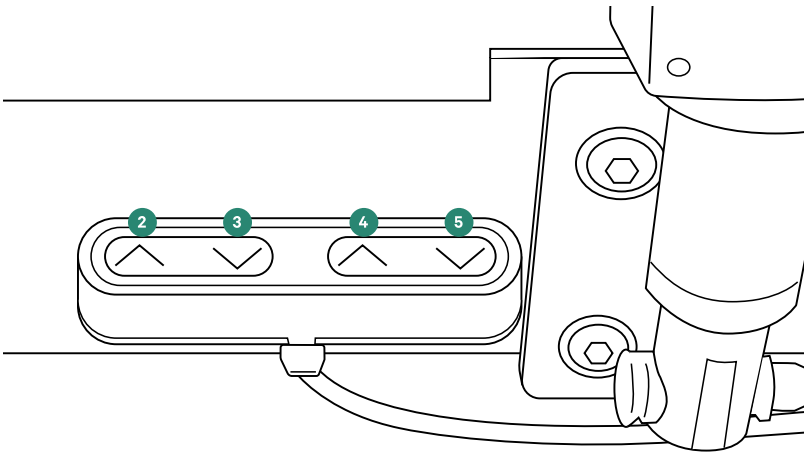


2	Adjust height - raise
3	Adjust height - lower
4	Adjust inclination - vertical
5	Adjust inclination – horizontal

2.2.2. Integrated PC

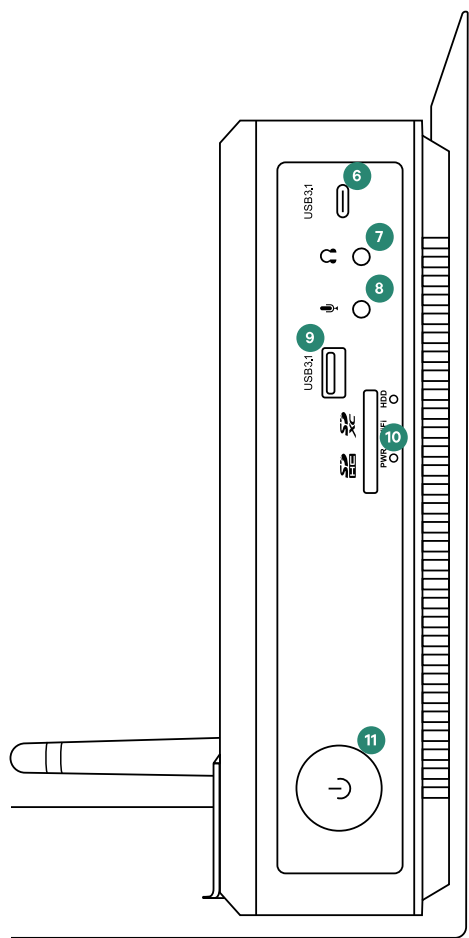


6	USB 3.1 (type C)
7	Audio output (3.5mm jack)
8	Microphone input (3.5mm jack)
9	USB 3.1 (type A)
10	SD(HC) slot
11	Switch PC on / off

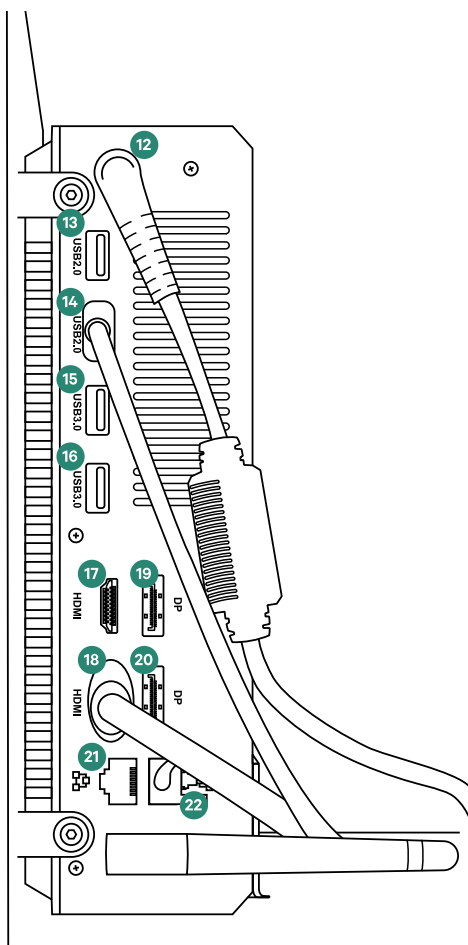

12	Power supply
13	USB 2.0 (type A)
14	USB 2.0 (type A)
15	USB 3.0 (type A)
16	USB 3.0 (type A)
17	HDMI out
18	HDMI out
19	DisplayPort out
20	DisplayPort out
21	Gigabit Ethernet (external)
22	Gigabit Ethernet (internal – Capore®)

2.2.3. Touch screen

The screen of the **Scape® Movable** comes preinstalled and connected to the integrated PC ready for operation.

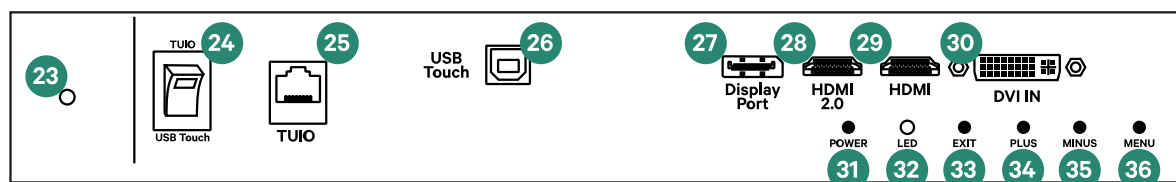


23	IR sensor for remote control
24	Switch between Touch TUIO / USB Touch
25	RJ-45 Lan interface – to use the Capore® Touch & Object Assistant
26	USB connection type B – for direct connection of touch and PC
27	DisplayPort input
28	HDMI 2.0 input (UHD 60 Hz)
29	HDMI input
30	DVI input
31	Stand-by *17
32	Status LED
33	Close OSD / back / show input selection *21
34	Plus / right *23
35	Minus / left *22
36	Open OSD / confirm selection *20

* analogous to button on remote control



37	IEC socket for connection to 230V 50Hz
38	Main power switch

2.2.4. Remote control

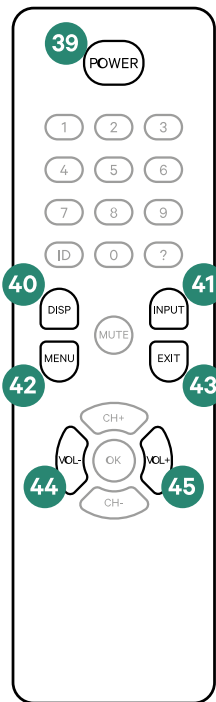

39	Stand-by *c9
40	Display mode selection
41	Show input selection
42	Show OSD / confirm selection *c14
43	Close OSD *c11
44	Left / minus *c13
45	Right / plus *c12

* analogous to button on the screen

All keys on the remote control which are not explained above are not required for operation of **Scape® Movable** and do not have any function.

The infrared remote control is located behind the Silent PC.

3. Installation

The **Scape® Movable** is delivered ready for operation. All units are fully assembled and wired. Place the device in a suitable location and connect it to the power supply.

3.1. Notes

Observe the following points when setting up the device:

- Give the **Scape® Movable** sufficient time to adapt to the ambient temperature. Otherwise the device may be damaged or destroyed by condensation inside the device.
- Only operate the **Scape® Movable** indoors.
- Do not expose the **Scape® Movable** to direct sunlight.
- Make sure that there is enough space around the **Scape® Movable** to move the lift frame.
- Before operating your **Scape® Movable**, remove the white or red plastic protection on the rollers of the lift frame. To do this, pull the white tab in the middle of each roller firmly. Note that the lift frame has 8 castors.

3.2. Connection to the power supply

Connect the **Scape® Movable** to the mains using the supplied IEC power cord via the power connection socket at the base of the device (see **Chapter 2.2.1 – Lift frame – item 1**).

To do this, first plug the IEC plug into the corresponding socket on the device and then the earthed plug into the mains socket.

When disconnecting the appliance from the mains, always pull the plug and do not pull the cable. Do not touch the plug with wet hands.

3.3. Connection to the network

The **Scape® Movable** works completely without an internet or other network connection. However, both WLAN and the Gigabit Ethernet port on the integrated PC (see **Chapter 2.2.2 – Integrated PC – item 21**) can be connected to the internet or another network.

To use Capore® object recognition or touch via TUIO, set the switch for the touch signal on the back of the display to "TUIO" (see **Chapter 2.2.3 – Touch screen – item 24**). For further information on setting up **Capore® Touch & Object** recognition, refer to the operating manual for the "**Capore® Touch & Object Assistant**".

The default IP address of the integrated **Capore® API Box** is 10.0.0.20, subnet 255.255.255.0. You can access the web interface of the **Capore® API Box** via that IP address. The Ethernet port of the **Scape® Movable** (see **Chapter 2.2.2 – Integrated PC – item 21**) is set to obtain its IP address from a DHCP server.

4. Switching on

Switch on the display using the main switch (see Chapter **2.2.4 – Remote control – item 38**). Then start the PC (see Chapter **2.2.2 – Integrated PC – item 11**).



Make sure that there are no objects on the display when the device is switched on.

Do not touch the touch screen during device startup, otherwise there will be errors in the touch and object detection.

The device will take about 1.5 hours to power up before it reaches its final operating temperature. During this time, the touch sensor of the device constantly adapts to its environment. This has a direct effect on long-term object recognition.



If your application requires the Capore® objects to remain on the screen for a long time, do not use object detection until the device has reached its operating temperature.

5. Display settings – OSD

5.1. OSD usage

The **Scape® Movable** OSD offers a variety of on-screen settings, such as signal input, display mode, and color and brightness settings. The factory settings are suitable for most applications.

Press the **Menu (42)** button to display the OSD (see Chapter 2.2.4 – Connections and controls – **Remote control**).

Use the **Plus (45)** and **Minus (44)** buttons to navigate through the individual menu items.

The **Menu (42)** button takes you to the next level of the selected menu item or setting.

Use the **Plus (45)** and **Minus (44)** buttons to adjust the values for each setting or to select the appropriate option.

The **Menu (42)** button activates the selected option and returns to the last selection level.

The **Exit (43)** button resets the setting to its original value and returns to the next higher menu level or closes the OSD when you are at the top menu level.

The OSD automatically shuts off after a few seconds of inactivity.



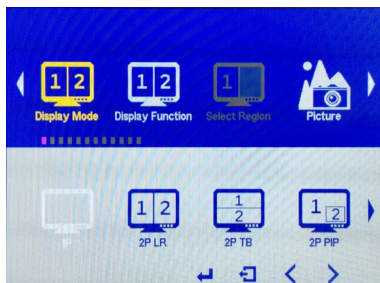


Abb. 1: Menu opened – select menu item

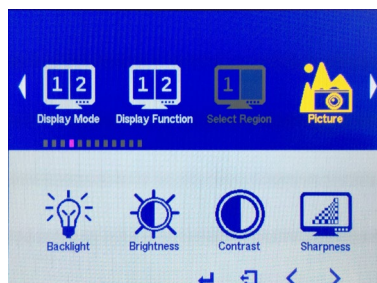

Menu item selected – confirm

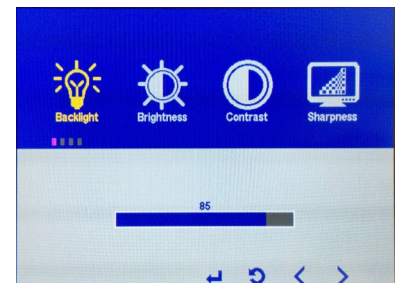

Menu item opened – set value

5.2. Select input source

If no active device is connected to the selected input of the screen, you can use the OSD only to a limited extent. Press **Input (41)** or **Exit (43)** on the IR remote control to open the input selection. Use the **Plus (45)** and **Minus (44)** buttons to select the appropriate input and confirm the selection with the **Menu (42)** button.



Abb. 2: Input selection

The signal source is set to "Auto" by default and automatically detects the input.

6. Integrated PC

Unless you have specified otherwise, the integrated PC with Windows 10 Professional is pre-installed, fully configured and ready to use.



**Be sure to create a backup before changing the configuration of the operating system and its components.
To do this, use the Windows backup tools (backup settings).**

Your **Scape® Movable** with integrated PC comes with a wireless keyboard with integrated trackpad. Follow the enclosed instructions to use the keyboard.

To switch on the integrated PC, press the power button on the front of the PC (see **Chapter 2.2.2 – Integrated PC – item 11**).

A system user with administrator rights and the following access data has already been set up.

User name: ias

Password: ias

For the security of your system, it is strongly recommended that you change the password of this account.

7. Troubleshooting tips

Do not open the housing of the **Scape® Movable** by yourself.

If your **Scape® Movable** does not work as intended, see **Chapter 7.2 – Problems and Solutions** to find out if there is a solution to your problem.

If you cannot find a solution, contact **Interactive Scape Hardware Support**. You can reach them on weekdays at **+49 30 698 094 150**.

7.1. Manufacturer – Support

Interactive Scape GmbH
Wilhelmine-Gemberg-Weg 6
10179 Berlin

+49 (0)30 698 094 150

7.2. Problems and solutions

Error	Possible cause	Possible solution
No picture is shown even though the PC is turned on.	The DisplayPort or HDMI cable has come loose.	Check the connection of the cable with the PC. Plug the cable into another connector on the PC.
	The screen is switched to the wrong input.	Set the input correctly (see Chapter 5.2 – Select input source).
The PC does not start up.	The PC is not receiving power.	On the back of the PC, check whether the PC is connected to the power supply.
The PC or the screen turns off unexpectedly.	Loose contact in the power supply.	Check whether the device is connected to the power supply and whether the IEC plug is correctly inserted.

8. Appendix

8.1. Technical data

8.1.1. Scape® Movable

Dimensions when the screen is horizontal (LxWxH min/H max)	43	988 x 700 x 916/1567* mm
	55	1278 x 749 x 945/1596* mm
	65	1525 x 898 x 950/1601* mm
Dimensions when the screen is vertical (LxWxH min/H max)	43	988 x 700 x 1068/1719* mm
	55	1278 x 700 x 1151/1802* mm
	65	1525 x 700 x 1227/1878* mm
Weight	43	84 kg
	55	108 kg (+ max. 7.2 kg for frame)
	65	126 kg
Maximum power consumption		650 W
Power supply		230 V AC 50 Hz

* Due to manufacturing tolerances in the hydraulic systems, the maximum heights can deviate slightly.

8.1.2. Touch screen

Screen diagonal	43	1079.5 mm (42.5")
	55	1397.0 mm (55")
	65	1639.1 mm (64.53")
Resolution		3840 x 2160 (UHD)
Brightness (panel)		700 cd/m ²
Contrast (panel)		3000:1
Latency		8 ms
Backlight		LED
Viewing angle		178° / 178°
Color gamut		16.7 million
Backlight - lifetime		60,000 h
Pixel class		ISO 9241-307 (Pixel Error Class II)
Touch controller	3M – PCAP	
	80 touches	
	Palm recognition	
	Object recognition possible (Capore®)	
Operating period		24 hours / 7 days

Max. ambient humidity	Operation	10 ~ 90 % (not condensing)
	Storage	10 ~ 90 % (not condensing)
Max. ambient temperature	Operation	0 ~ 35 °C / 32 ~ 95 °F
	Storage	-20 ~ 60 °C / -4 ~ 140 °F
Operating voltage		100 – 240 VAC
Power draw	43	154W
	55	180W
	65	245W
Dimensions (WxHxD)	43	990 x 587.5 x 81 mm
	55	1274 x 744 x 113 mm
	65	1521.5 x 896.4 x 94 mm
Weight	43	32 kg
	55	57 kg
	65	72 kg
Mounting		VESA 400 x 400 mm, 600 x 400 mm, 800 x 400 mm
Max. tipping angle		0° - 180°
Air flow cooling		0.5 m³ / min

8.1.3. Silent PC

Specifications	Processor	Intel Core i5 Quad Core
	RAM	16 GB
	Hard drive	250 GB SSD Samsung M.2
	Graphics card	NVIDIA Geforce GTX 1070 8GB
Ports	Display	2x HDMI 2.0
		2x DisplayPort 1.3
	Network	WLAN 802.11ac/b/g/n
		Bluetooth 4.2
		2x Gigabit Ethernet
	USB	2x USB 3.0
		2x USB 2.0
		1x USB 3.1
		1x USB 3.1 type C
Other	Dimensions (LxWxH)	210 x 203 x 62 mm
	Power supply	External power supply unit
	Operating system	Windows 10 Professional

Interactive Scape GmbH

Wilhelmine-Gemberg-Weg 6, D-10179 Berlin

T +49 30 69 809 41-00, F +49 30 69 809 429

www.interactive-scape.com, info@interactive-scape.com