


Scape X[®] Module

with a single Tile Pro

Getting Started

1. Cabling

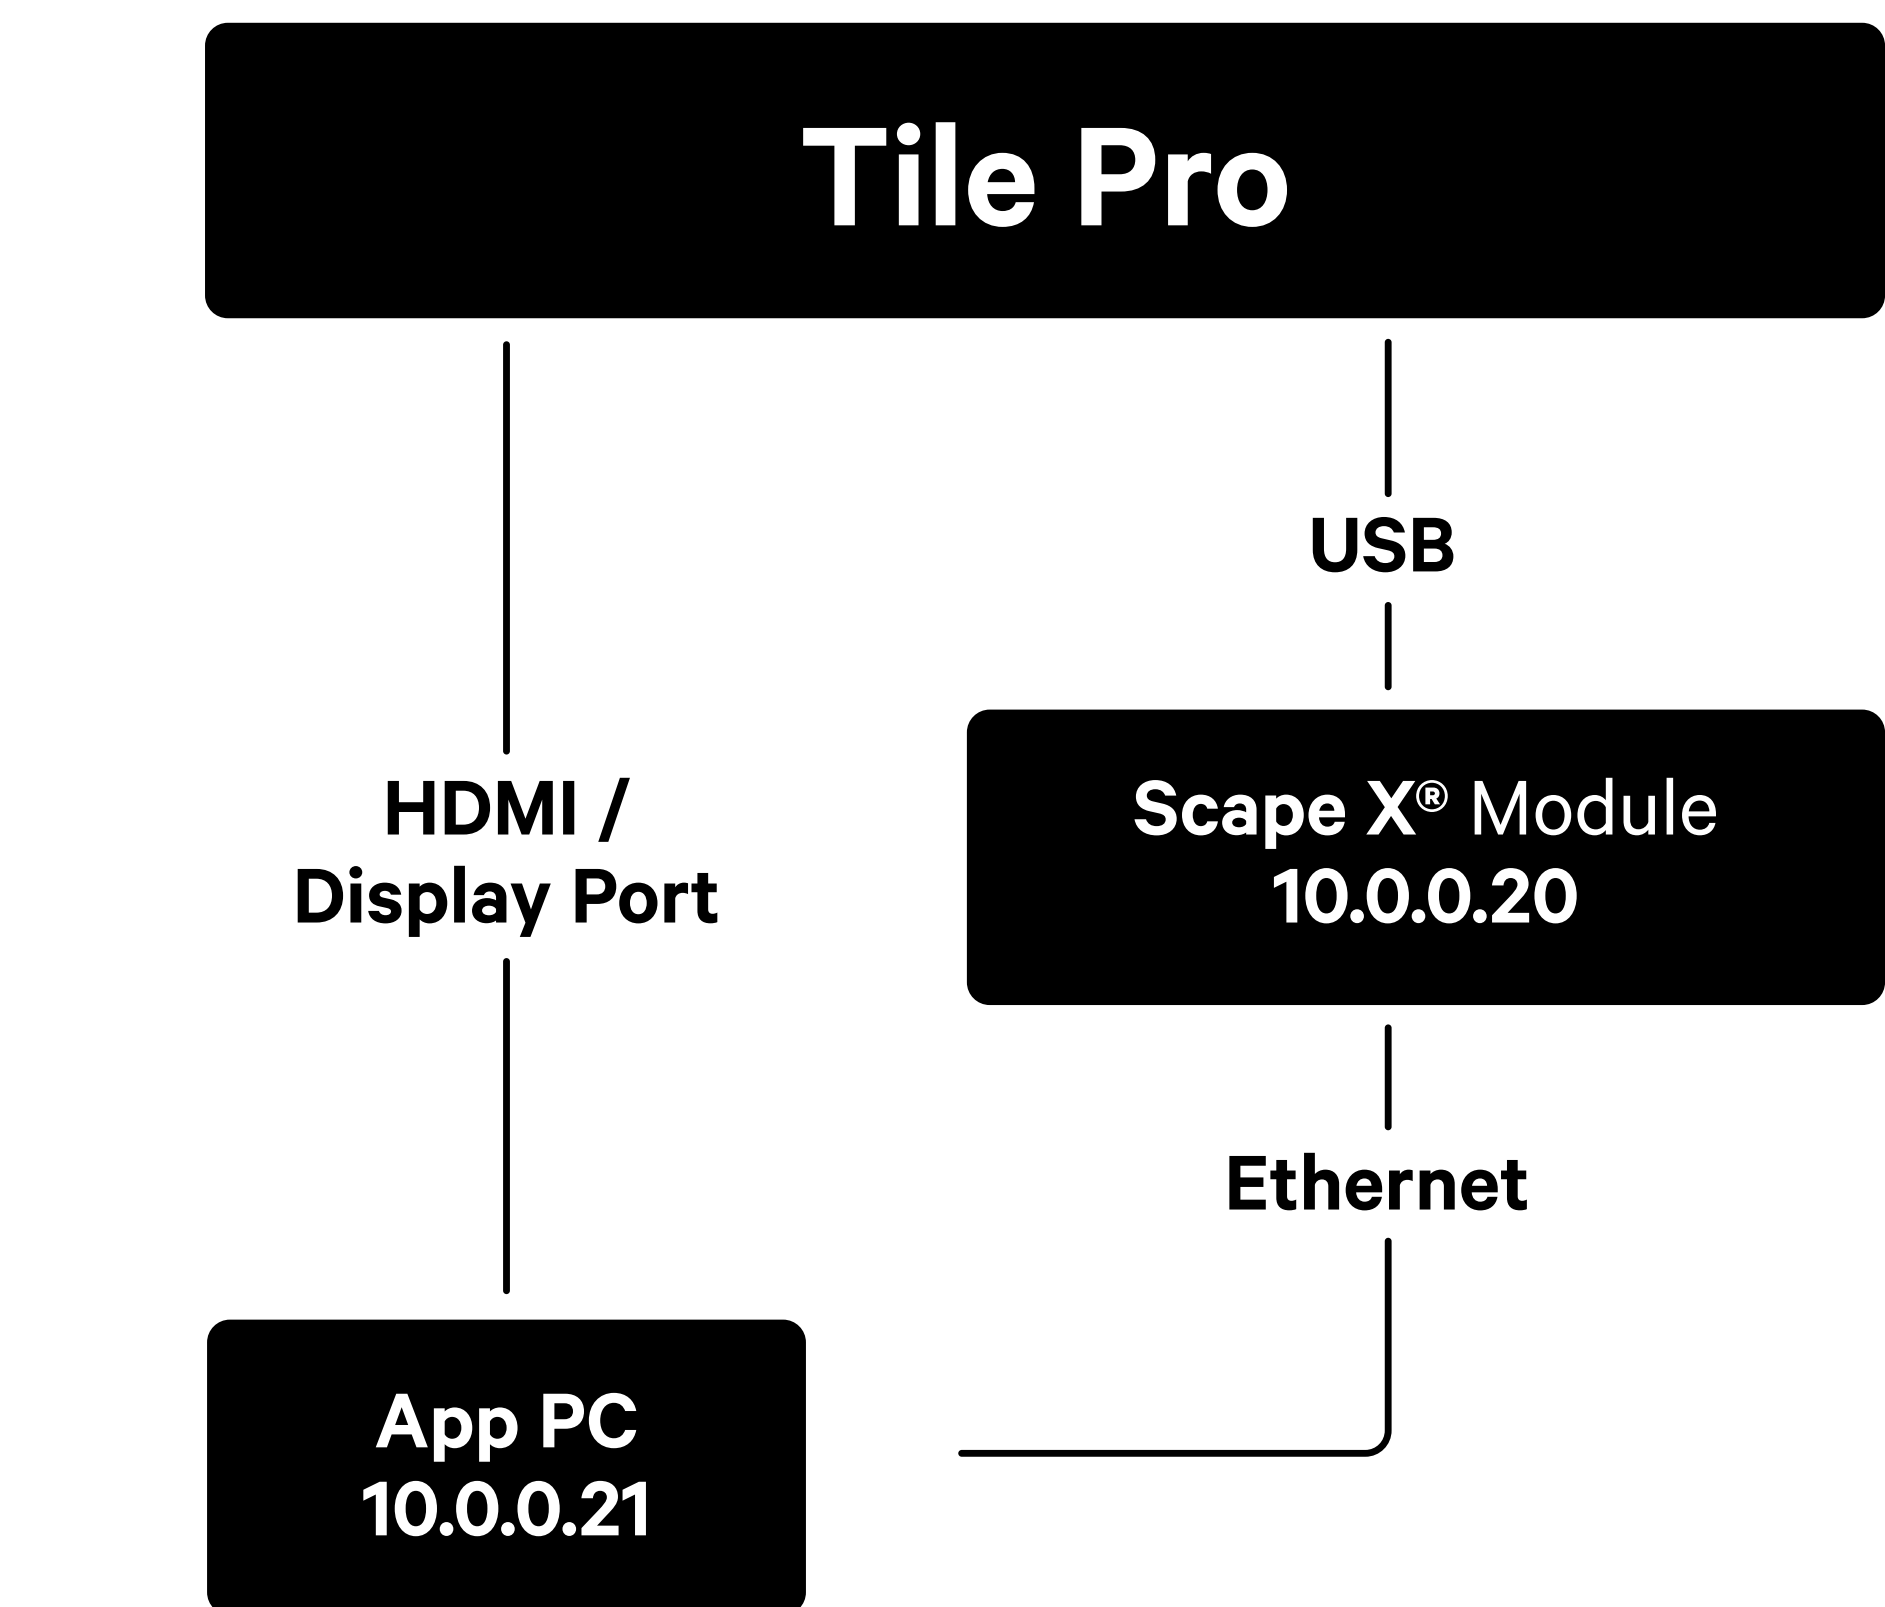


2. Configure the network adapter

Configure the network adapter of the App PC:

- IP address e.g.: 10.0.0.21
- netmask: 255.255.255.0

3. Activate License

- Connect only one Scape X[®] Module at a time for configuration
- Access the “Touch & Object Assistant” at 10.0.0.20
- Send the “Hardware ID” to info@interactive-scape.com and ask for a license key

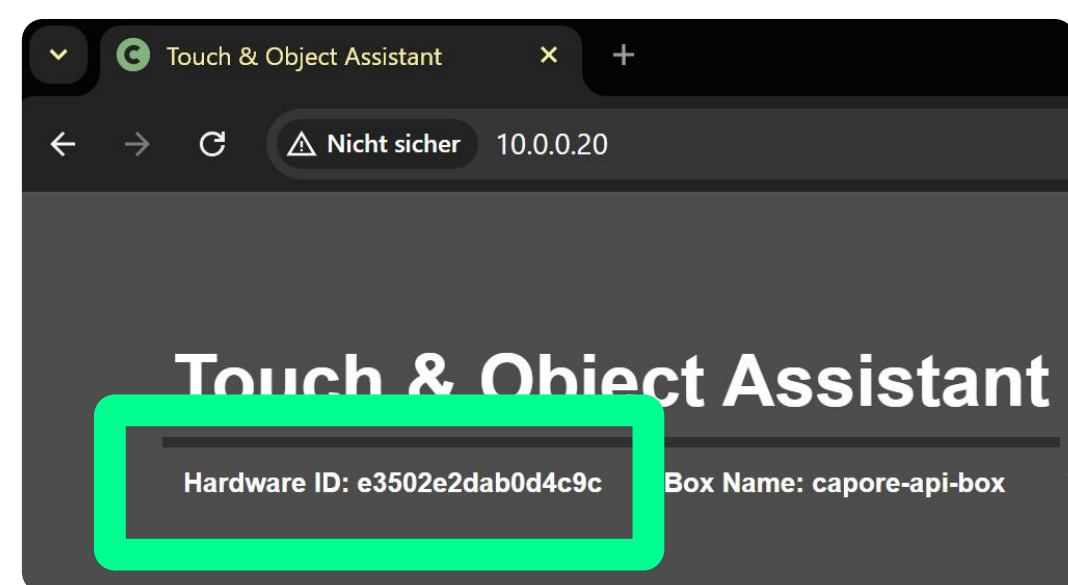


4. Activate Key

- Click to activate the license
- Or drag and drop the license key file



5. Calibrate

- Click “Show Expert-Options” at the bottom of the page
- Press “Start Calibration” and follow the on-screen instructions

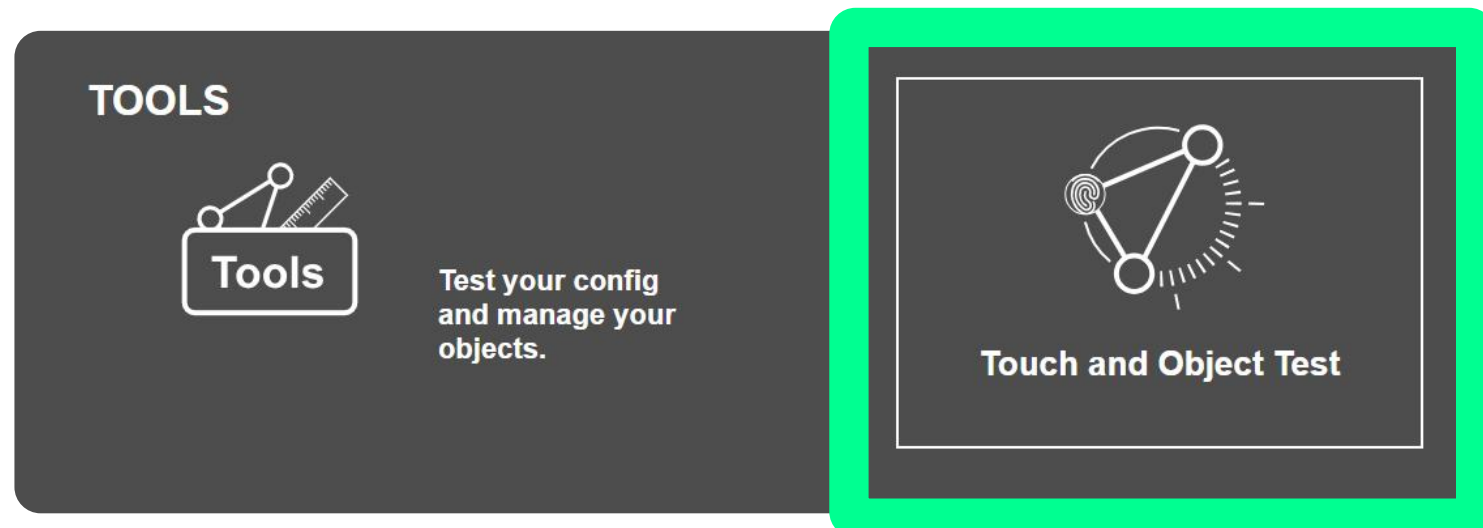

6. Test

Open the “Touch and Object Test” to check that everything works as expected.



7. Activate Windows Touch via TUIO (optional)

- Download Touch Injector:
<https://github.com/michaelosthege/TouchInjector>
- Start and configure Touch Injector on the APP PC

We recommend to use port 3334 with the Touch Injector so that applications can use the default TUIO port 3333. In the default configuration Scape X[®] Engine sends TUIO data to both ports.