

# Scape®

# Movable 65"

smo65-008-01

smo65-008-02

## Operating Manual

# Scape® Movable Operating Manual

## Contents

|                                                |           |
|------------------------------------------------|-----------|
| <b>1. General</b>                              | <b>5</b>  |
| 1.1. Safety instructions                       | 5         |
| 1.2. Scope of delivery                         | 7         |
| 1.3. Cleaning instructions                     | 8         |
| 1.4. Transportation instructions               | 8         |
| <b>2. Specifications and set up</b>            | <b>9</b>  |
| 2.1. Connections and controls                  | 9         |
| 2.1.1. Lift power connection                   | 9         |
| 2.1.2. Lift remote                             | 10        |
| 2.1.3. Integrated SilentPC 2060 (smo65-008-01) | 11        |
| 2.1.4. Integrated MiniPC 3060 (smo65-008-02)   | 12        |
| 2.1.5. Touch screen                            | 14        |
| 2.1.6. Remote control                          | 15        |
| <b>3. Installation</b>                         | <b>16</b> |
| 3.1. Notes                                     | 16        |
| 3.2. Connection to the power supply            | 16        |
| 3.3. Connection to the network                 | 16        |
| <b>4. Switching on</b>                         | <b>17</b> |
| <b>5. Display settings – OSD</b>               | <b>18</b> |
| 5.1. OSD usage                                 | 18        |
| 5.2. Select input source                       | 18        |
| <b>6. Integrated PC</b>                        | <b>19</b> |
| <b>7. Troubleshooting tips</b>                 | <b>20</b> |
| 7.1. Manufacturer – Support                    | 20        |
| 7.2. Problems and solutions                    | 20        |
| <b>8. Taking back old appliances</b>           | <b>21</b> |
| <b>9. Appendix</b>                             | <b>22</b> |
| 9.1. Technical data                            | 22        |
| 9.1.1. Scape® Movable 65                       | 22        |
| 9.1.2. Scape® Tangible 65                      | 23        |
| 9.1.3. Silent PC 2060                          | 25        |

|                                       |    |
|---------------------------------------|----|
| 9.1.4. Mini-PC 3060                   | 26 |
| 9.2. Technical Drawings smo65-008-01  | 27 |
| 9.2.1. Perspective                    | 27 |
| 9.2.2. Horizontal – Top view          | 28 |
| 9.2.3. Horizontal – Front view (high) | 29 |
| 9.2.5. Horizontal – Front view (low)  | 30 |
| 9.2.6. Horizontal – Right view (high) | 31 |
| 9.2.7. Horizontal – Right view (low)  | 32 |
| 9.2.8. Vertical – Top view            | 33 |
| 9.2.9. Vertical – Front view (high)   | 34 |
| 9.2.10. Vertical – Front view (low)   | 35 |
| 9.2.11. Vertical – Right view (high)  | 36 |
| 9.2.12. Vertical – Right view (low)   | 37 |
| 9.3. Technical Drawings smo65-008-02  | 38 |
| 9.3.1. Perspective                    | 38 |
| 9.3.2. Horizontal – Top view          | 39 |
| 9.3.3. Horizontal – Front view (high) | 40 |
| 9.3.5. Horizontal – Front view (low)  | 41 |
| 9.3.6. Horizontal – Right view (high) | 42 |
| 9.3.7. Horizontal – Right view (low)  | 43 |
| 9.3.8. Vertikal – Top view            | 44 |
| 9.3.9. Vertikal – Front view (high)   | 45 |
| 9.3.10. Vertikal – Front view (low)   | 46 |
| 9.3.11. Vertikal – Right view (high)  | 47 |
| 9.3.12. Vertikal – Right view (low)   | 48 |

## Notes

**This is a class A device according to EN55022.**

**For more information, please refer to Chapter 1.1 - Radio interference.**

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

**This Class A digital apparatus complies with Canadian ICES-003.**



This manual is applicable for the following devices:

- Scape® Movable 65" with SilentPC 2060 ( smo65-008-01 )
- Scape® Movable 65" with MiniPC 3060 ( smo65-008-02 )

Information in this document is subject to change without notice.

©2022 Interactive Scape GmbH. All rights reserved.

The document or excerpts from the document may not be duplicated without the prior permission of Interactive Scape GmbH.

Interactive Scape GmbH shall not be liable for any errors contained in this document or any other incidental or consequential damages resulting from the delivery, use or application of this material.

All product names mentioned in this document are trademarks or registered trademarks of their respective owners.

# 1. General

This manual describes the safe installation, configuration and correct operation of the **Scape® Movable**.

If your device does not have an integrated PC, you can skip the chapters and notes about the integrated PC. All other notes and instructions continue to apply without restriction.

If necessary, pay attention to the supplementary documents, such as the installation instructions.

## 1.1. Safety instructions

Before using and operating your **Scape® Movable**, observe the following safety instructions to prevent you, your environment or the **Scape® Movable** from being damaged.

### Fire and electric shock

Overloaded sockets, extension cords and power strips can cause fire and electric shock.

- Avoid using power strips and extension cords if possible.
- Do not chain multiple extension cords or power strips together.

### Overheating

Heat build-up can overheat the screen and the integrated PC. This can damage the device.

- Ensure there is sufficient air circulation around the **Scape® Movable**.
- Make sure all the ventilation holes on around the screen and integrated PC are uncovered.

### Excess voltage from lightning strikes

In the event of a thunderstorm there is a risk of excess voltage damage from lightning strikes electrical appliances that are plugged in.

- Do not install the **Scape® Movable** during a thunderstorm.
- Disconnect the devices from the mains during thunderstorms.

### Moisture, liquid and steam

Moisture, liquid and steam inside the **Scape® Movable** can cause electric shocks or short circuits.

- Only use the **Scape® Movable** indoors.
- Do not allow liquids to get inside the **Scape® Movable**.
- Protect your **Scape® Movable** from steam and moisture.

## Improper cleaning

Improper cleaning with harsh detergents and solvents or soaking wet cloths can damage the **Scape® Movable**.

- Observe the information on cleaning your **Scape® Movable** (see **Chapter 1.3 - Cleaning instructions**).

## Improper opening and repair

Improper opening and improper repairs may be dangerous to users of the device.

- Do not open the housing of the device.
- In case of repair contact the manufacturer or a specialist dealer.

## Radio interference

Radio interference can be generated by any device that emits electromagnetic signals. Due to the large number of devices that transmit and receive radio waves, interference from overlapping radio waves can occur.

- Do not use the **Scape® Movable** in locations where the use of radio equipment is prohibited.
- Always follow the instructions and instructions of authorized persons to switch off radio equipment, especially in hospitals, outpatient health centers, medical practices and other medical facilities, to avoid interference with sensitive medical equipment.
- Check with your doctor or the manufacturer of your medical device (pacemaker, hearing aid, implant with electronic control, etc.) to see if it can work your **Scape® Movable** without interference.
- If necessary, maintain the minimum distance of 15 cm recommended by medical device manufacturers to avoid interference with your medical device.

## Hazardous environments

Under unfavorable conditions, radio waves near explosive atmospheres may lead to fire or explosions.

- Do not install and operate the **Scape® Movable** near explosive gases, flammable gases, areas where the air contains chemicals or particles such as grain, dust or metal powders, and near detonation zones.
- In places with potentially explosive gases and near detonation zones, follow the instructions for switching off the electronic devices to avoid disruption of the blasting and ignition systems.

## Load and damage to the surface

Rough, hard or sharp-edged materials and heavy objects can damage the screen surface of the **Scape® Movable**.

- Do not place heavy objects on the screen.
- Use only objects with smooth or soft bottom surfaces on the screen.
- Clean the undersides of the objects before and after each use.

## Notes on the lift frame

Improper or careless operation of the screen with the lift frame can result in damage to your **Scape® Movable** or its surroundings or to serious injury.

- The lift function of the **Scape® Movable** may only be operated by adults.
- Make sure that there are no equipment, other objects or people within the range of movement.
- Never reach into the rack during movement. There is an acute risk of injury.
- During movement, be aware of unusual noises or irregular movement of the device. Stop immediately if you observe anything unusual.
- If the control element of the lift frame makes an unusual smell or noise, stop operation immediately and disconnect the unit from the mains.
- Always leave the brakes on the lift frame castors engaged and only release them when the **Scape® Movable** has to be moved.
- After moving, reengage the brakes on the lift frame castors.
- Move the lift frame only when it is fully retracted (lowest position) and rotated vertically.
- Before moving the device, disconnect it from the mains supply – pull out the mains plug.

## 1.2. Scope of delivery

The following accessories are included with your **Scape® Movable**:

- IEC power connector to connect to the mains
- Wireless keyboard with trackpad
- Infrared remote control (receiver on the back panel)
- Screen cleaning kit
- Operating manual (possibly by email)

### 1.3. Cleaning instructions

The touch sensor of the **Scape® Movable** does not usually need to be serviced. Nevertheless, it is recommended to clean the glass surface of the screen regularly.

- Disconnect the device from the mains before cleaning.
- Typically, a solution of isopropyl alcohol and water (50:50 blend ratio) or the included screen cleaning kit are best for cleaning the touch sensor.
- Apply the solution to a soft, lint-free cloth. Avoid using rough cloths.
- Use the cloth to clean the glass surface. Apply the liquid only to the cloth and never directly to the device. This will prevent liquid from entering the inside of the device or causing marks on the frame.

### 1.4. Transportation instructions

The safest way to transport your device is in a **Scape® Movable** flight case (sold separately).


- Set the display to the fully vertical position for transport and move it to the lowest position.
- Apply the brakes on the castors of the lift frame during transportation.
- Secure the device or flightcase against slipping and tipping.



## 2. Specifications and set up


### 2.1. Connections and controls

#### 2.1.1. Lift power connection

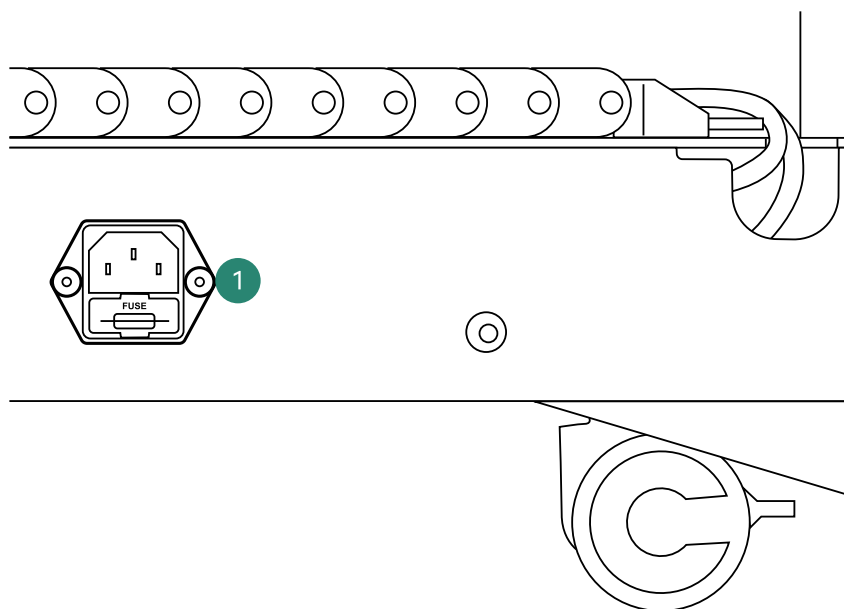

|   |                                            |
|---|--------------------------------------------|
| 1 | IEC power connection (230V / 50Hz) - fused |
|---|--------------------------------------------|

## 2.1.2. Lift remote

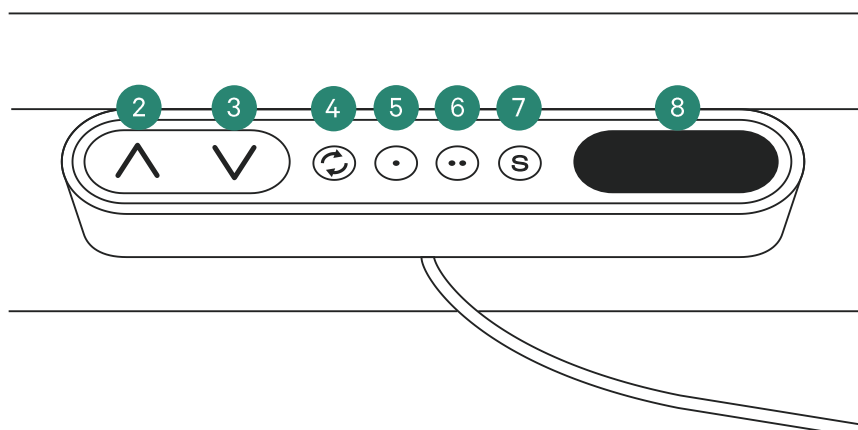

|   |                                                           |
|---|-----------------------------------------------------------|
| 2 | Raise height (mode 1) & - move to the vertical (mode 2)   |
| 3 | Lower height (mode 1) & - move to the horizontal (mode 2) |
| 4 | Switch modes                                              |
| 5 | Preset 1                                                  |
| 6 | Preset 2                                                  |
| 7 | Set presets                                               |
| 8 | Display                                                   |

On the **Scape® Movable** you can set the height of the screen as well as its inclination. Press the Mode button (4) to switch between the Height Adjustment (**Mode 1**) and Tilt Adjustment (**Mode 2**) modes. The display (8) will show you the respective number after changing the mode. Now set the desired height or tilt of the screen using the position moving buttons (2 & 3).

You have the possibility to save 2 positions and recall them later. Adjust height and inclination as desired. Press the memory button (7) for 3 seconds and then select the desired memory location I (5) or II (6).

To return to the stored position later, press and hold the button for the corresponding memory location until the screen is in the stored position.




**Make sure that there is enough space around the device and that the device does not touch anything during the procedure.**




**Do not touch the lift frame during the procedure!**

**During the procedure, touch the device only at the control element.**

### 2.1.3. Integrated SilentPC 2060 (smo65-008-01)

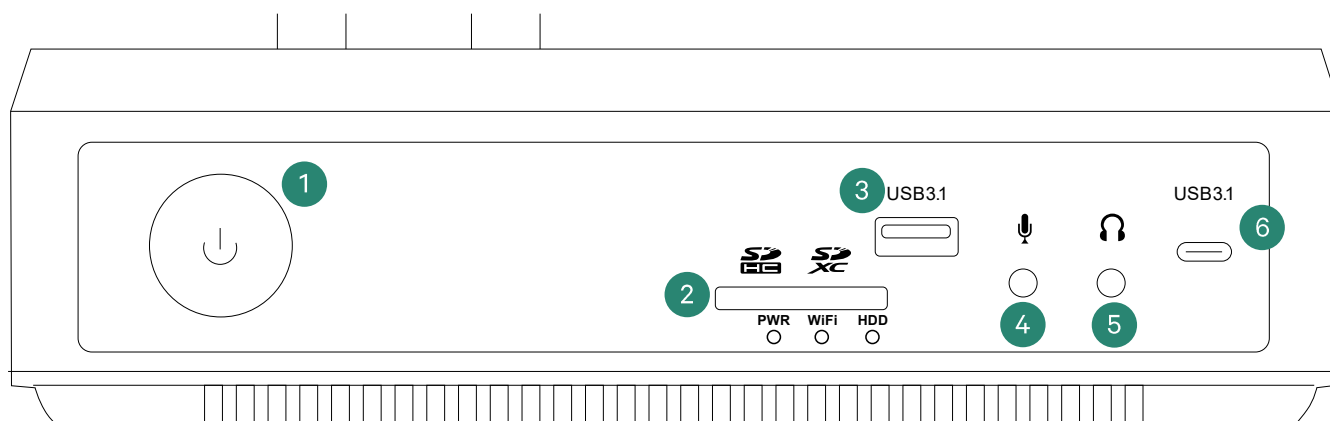


|   |                               |
|---|-------------------------------|
| 1 | Switch PC on / off            |
| 2 | SD(HC/XC)-Slot                |
| 3 | USB 3.1 (type A)              |
| 4 | Microphone input (3.5mm jack) |
| 5 | Audio output (3.5mm jack)     |
| 6 | USB 3.1 (type C)              |

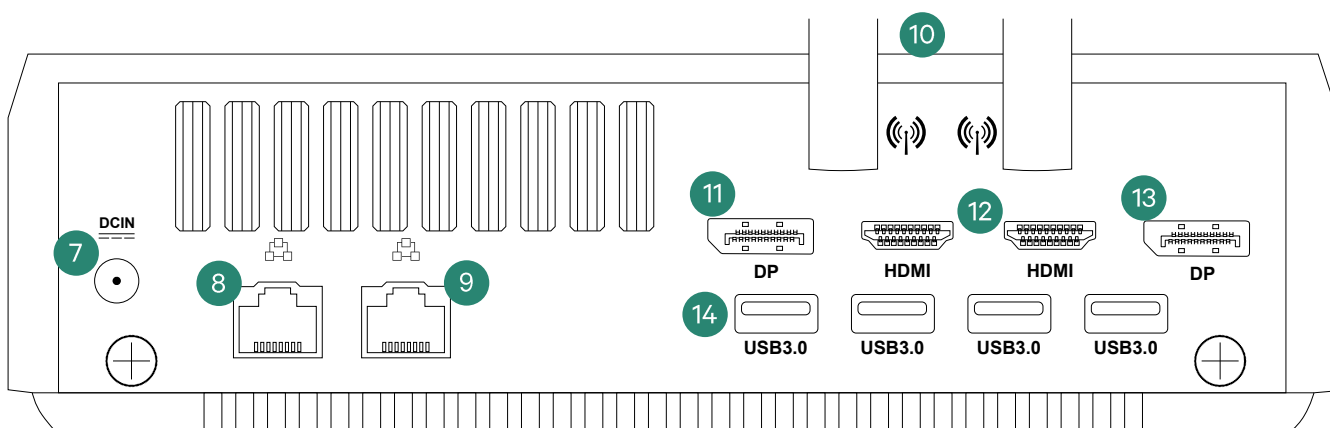


|    |                                    |
|----|------------------------------------|
| 7  | Power supply                       |
| 8  | Gigabit Ethernet (internal – TUIO) |
| 9  | Gigabit Ethernet (external)        |
| 10 | 2x external WIFI antennas          |
| 11 | DisplayPort out                    |
| 12 | HDMI 2.0 out                       |
| 13 | DisplayPort out                    |
| 14 | USB 3.0 (type A)                   |

2.1.4. Integrated MiniPC 3060 (smo65-008-02)

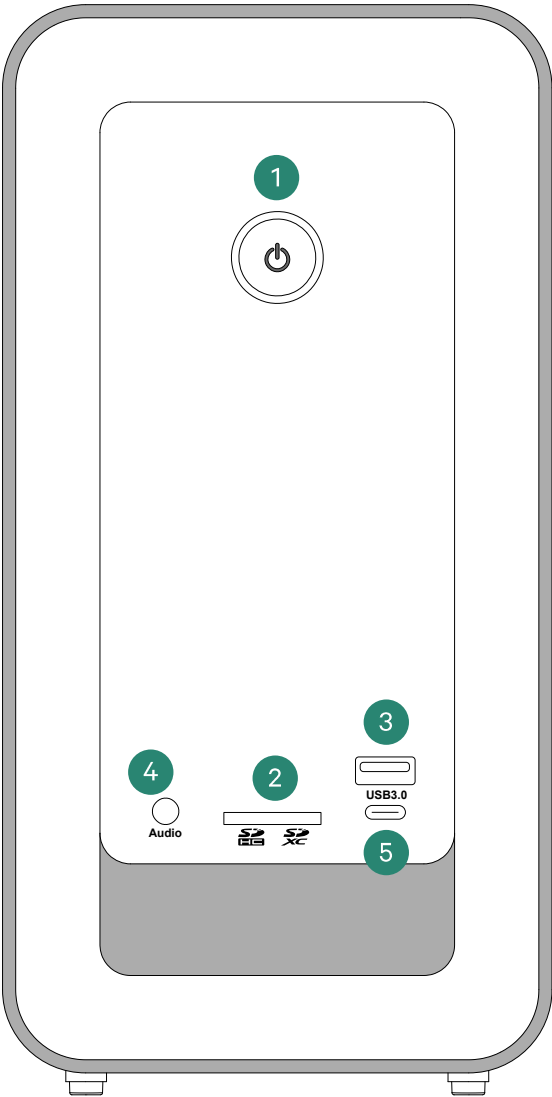


|   |                                 |
|---|---------------------------------|
| 1 | Switch PC on / off              |
| 2 | SD(HC/XC)-Slot                  |
| 3 | USB 3.1 (type A)                |
| 4 | Audio input/output (3.5mm jack) |
| 5 | USB 3.1 (type C)                |

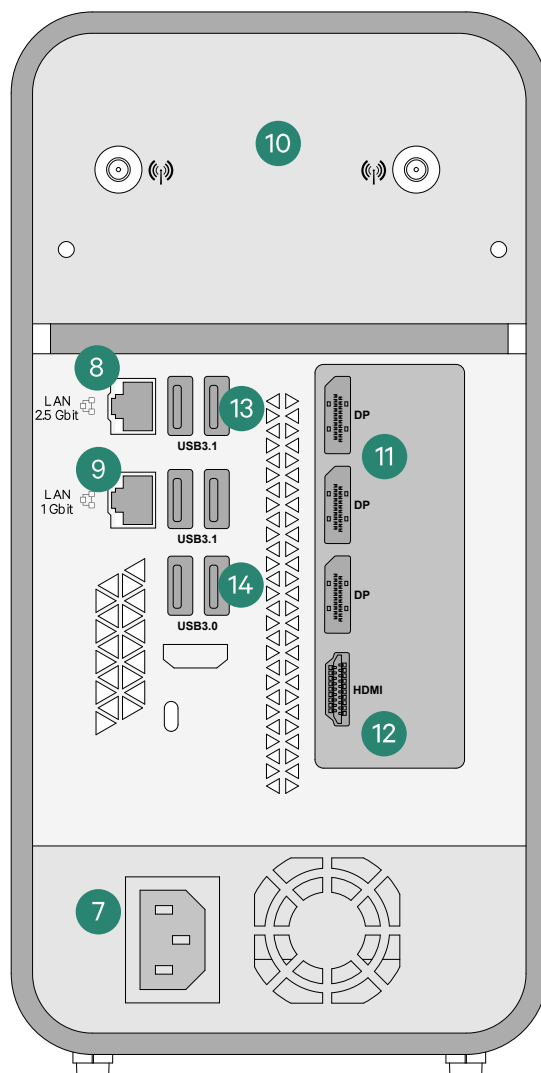

|    |                                    |
|----|------------------------------------|
| 7  | Power supply                       |
| 8  | Gigabit Ethernet (internal – TUIO) |
| 9  | Gigabit Ethernet (external)        |
| 10 | 2x external WIFI antennas          |
| 11 | DisplayPort out                    |
| 12 | HDMI 2.0 out                       |
| 13 | DisplayPort out                    |
| 14 | USB 3.0 (type A)                   |


### 2.1.5. Touch screen

The screen of the **Scape® Movable** comes preinstalled and connected to the integrated PC ready for operation.

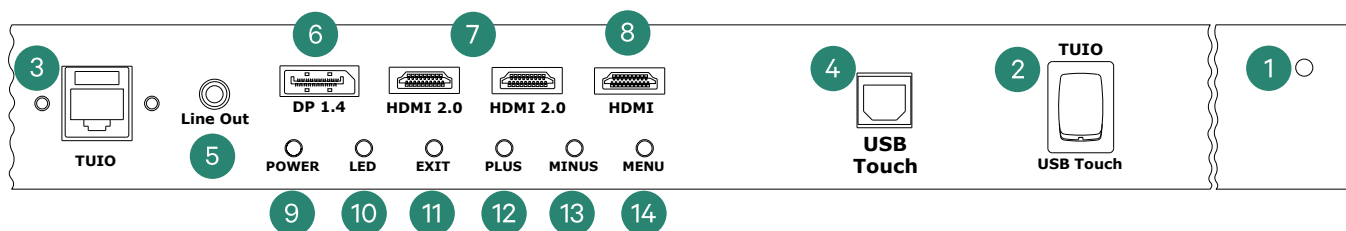


|    |                                                                      |
|----|----------------------------------------------------------------------|
| 1  | IR-Sensor for remote control                                         |
| 2  | Switch between Touch TUIO / USB Touch                                |
| 3  | RJ-45 Lan interface – to use the <b>Touch &amp; Object Assistant</b> |
| 4  | USB-Connection Type B – for direct connection of touch and PC        |
| 5  | Line Out Output                                                      |
| 6  | DisplayPort 1.2 input                                                |
| 7  | 2x HDMI 2.0 input (UHD 60 Hz)                                        |
| 8  | HDMI 1.4 input                                                       |
| 9  | Stand-by *(17)                                                       |
| 10 | Status LED                                                           |
| 11 | Close OSD / > back / > show input selection *(21)                    |
| 12 | Plus / Right *(23)                                                   |
| 13 | Minus / Left *(22)                                                   |
| 14 | Open OSD / confirm selection *(20)                                   |

\*analogue to button on remote control

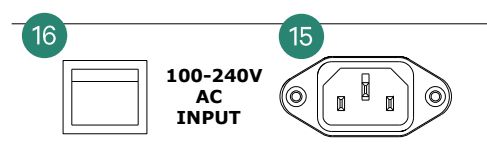

|    |                                        |
|----|----------------------------------------|
| 15 | IEC socket for connection to 230V 50Hz |
| 16 | Main power switch                      |

2.1.6. Remote control

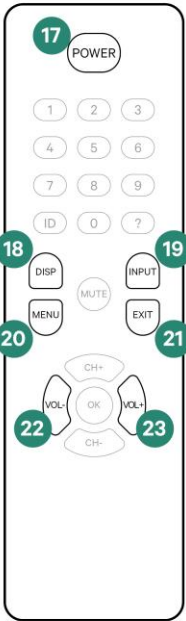

|    |                                              |
|----|----------------------------------------------|
| 17 | Stand-by <sup>(9)</sup>                      |
| 18 | Display mode selection                       |
| 19 | Show input-selection                         |
| 20 | Show OSD / confirm selection <sup>(14)</sup> |
| 21 | Close OSD <sup>(11)</sup>                    |
| 22 | Left / Minus <sup>(13)</sup>                 |
| 23 | Right / Plus <sup>(12)</sup>                 |

\* analogous to buttons on the screen

All keys on the remote control which are not explained above are not required for operation of **Scape® Movable** and do not have any function.

The infrared remote control is located behind the Silent PC.

## 3. Installation

The **Scape® Movable** is delivered ready for operation. All units are fully assembled and wired. Place the device in a suitable location and connect it to the power supply.

### 3.1. Notes

Observe the following points when setting up the device:

- Give the **Scape® Movable** sufficient time to adapt to the ambient temperature. Otherwise the device may be damaged or destroyed by condensation inside the device.
- Only operate the **Scape® Movable** indoors.
- Do not expose the **Scape® Movable** to direct sunlight.
- Make sure that there is enough space around the **Scape® Movable** to move the lift frame.
- Before operating your **Scape® Movable**, remove the white or red plastic protection on the rollers of the lift frame. To do this, pull the white tab in the middle of each roller firmly. Note that the lift frame has 8 castors.

### 3.2. Connection to the power supply

Connect the **Scape® Movable** to the mains using the supplied IEC power cord via the power connection socket at the base of the device (see **Chapter 2.1.1 – Lift frame – item 1**).

To do this, first plug the IEC plug into the corresponding socket on the device and then the earthed plug into the mains socket.

When disconnecting the appliance from the mains, always pull the plug and do not pull the cable. Do not touch the plug with wet hands.

### 3.3. Connection to the network

The **Scape® Movable** works completely without an internet or other network connection. However, both WLAN and the Gigabit Ethernet port on the integrated PC (see **Chapter 2.1.3 – Integrated PC – item 9**) can be connected to the internet or another network.

To use **Capore®** object recognition or touch via TUIO, set the switch for the touch signal on the back of the display to "TUIO" (see **Chapter 2.1.4 – Touch screen – item 2**). For further information on setting up **Capore®** Object recognition, refer to the operating manual for the "**Touch & Object Assistant**".

The integrated **Touch & Object Assistant** has the IP address 10.0.0.20 with the subnet 255.255.255.0 by default, but can also obtain IP addresses from a DHCP server. You can access the web interface of the **Touch & Object Assistant** via that IP address. The Ethernet port of the **Scape® Movable** (see **Chapter 2.1.3 – Integrated PC – item 9**) is set to obtain its IP address from a DHCP server.



## 4. Switching on

Switch on the display using the main switch (see Chapter **2.1.4 – Touch screen – item 16**). Then start the PC (see **Chapter 2.1.3 – Integrated PC – item 1**).

The device will take about 1.5 hours to power up before it reaches its final operating temperature. During this time, the touch sensor of the device constantly adapts to its environment. This has a direct effect on long-term object recognition.



**If the object recognition does not work correctly at any position of the unit, remove all objects from the unit for 2 seconds.**

## 5. Display settings – OSD

### 5.1. OSD usage

The **Scape® Movable** OSD offers a variety of on-screen settings, such as signal input, display mode, and color and brightness settings. The factory settings are suitable for most applications.

Press the **Menu (20)** button to display the OSD (see **Chapter 2.1.5 – Connections and controls – Remote control**).

Use the **Plus (23)** and **Minus (22)** buttons to navigate through the individual menu items.

The **Menu (20)** button takes you to the next level of the selected menu item or setting.

Use the **Plus (23)** and **Minus (22)** buttons to adjust the values for each setting or to select the appropriate option.

The **Menu (20)** button activates the selected option and returns to the last selection level.

The **Exit (21)** button resets the setting to its original value and returns to the next higher menu level or closes the OSD when you are at the top menu level.

The OSD automatically shuts off after a few seconds of inactivity.



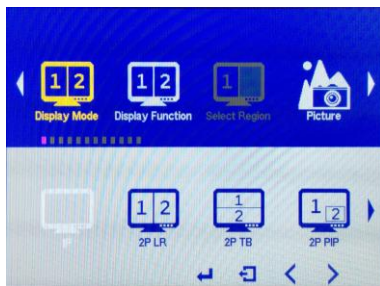


Abb. 1: Menu opened – select menu item

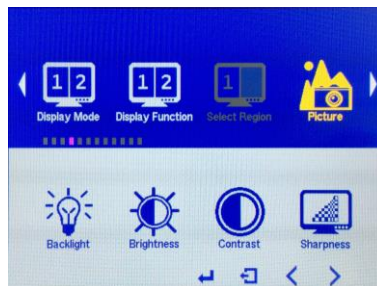

Menu item selected – confirm

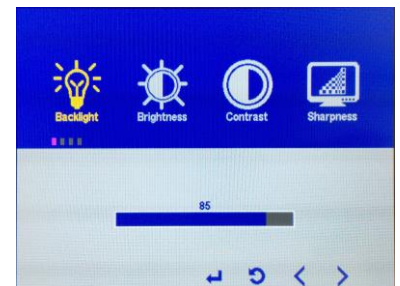

Menu item opened – set value

### 5.2. Select input source

If no active device is connected to the selected input of the screen, you can use the OSD only to a limited extent. Press **Input (19)** or **Exit (21)** on the IR remote control to open the input selection. Use the **Plus (23)** and **Minus (22)** buttons to select the appropriate input and confirm the selection with the **Menu (20)** button.



Abb. 2: Input selection

The signal source is set to "Auto" by default and automatically detects the input.

## 6. Integrated PC

Unless you have specified otherwise, the integrated PC with Windows 10 Professional is pre-installed, fully configured and ready to use.



**Be sure to create a backup before changing the configuration of the operating system and its components.  
To do this, use the Windows backup tools (backup settings).**

Your **Scape® Movable** with integrated PC comes with a wireless keyboard with integrated trackpad. Follow the enclosed instructions to use the keyboard.

To switch on the integrated PC, press the power button on the front of the PC (see **Chapter 2.1.3 – Integrated PC – item 1**).

A system user with administrator rights and the following access data has already been set up.

User name: ias

Password: ias

For the security of your system, it is strongly recommended that you change the password of this account.

## 7. Troubleshooting tips

Do not open the housing of the **Scape® Movable** by yourself.

If your **Scape® Movable** does not work as intended, see **Chapter 7.2 – Problems and Solutions** to find out if there is a solution to your problem.

If you cannot find a solution, contact **Interactive Scape Hardware Support**. You can reach them on weekdays at **+49 30 698 094 150**.

### 7.1. Manufacturer – Support

Interactive Scape GmbH  
Wilhelmine-Gemberg-Weg 6  
10179 Berlin

+49 (0)30 698 094 150

### 7.2. Problems and solutions

| Error                                                       | Possible cause                                | Possible solution                                                                                         |
|-------------------------------------------------------------|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| <b>No picture is shown even though the PC is turned on.</b> | The DisplayPort or HDMI cable has come loose. | Check the connection of the cable with the PC.<br>Plug the cable into another connector on the PC.        |
|                                                             | The screen is switched to the wrong input.    | Set the input correctly (see <b>Chapter 5.2 – Select input source</b> ).                                  |
| <b>The PC does not start up.</b>                            | The PC is not receiving power.                | On the back of the PC, check whether the PC is connected to the power supply.                             |
| <b>The PC or the screen turns off unexpectedly.</b>         | Loose contact in the power supply.            | Check whether the device is connected to the power supply and whether the IEC plug is correctly inserted. |

## 8. Taking back old appliances

As a supplier and manufacturer, we are obliged under the Electrical and Electronic Equipment Act (ElektroG) to take back all electrical and electronic equipment we put on the market and to recycle it in accordance with certain ecological standards.

You can register all devices and system solutions placed on the market by Interactive Scape in Germany for return at the end of their service life by sending an email to [support@interactive-scape.com](mailto:support@interactive-scape.com) or by calling Interactive Scape.

We will send you an order confirmation for the return. You can then return the goods to us and we will ensure that they are disposed of in an environmentally friendly and legally compliant manner.

- Old batteries and accumulators that are not permanently installed with the old electrical appliance must be removed from the appliance and completely discharged before they are returned (ElektroG 3 § 10 Paragraph 2 Sentence 2).
- When returning old appliances containing batteries and/or accumulators, please observe the respective shipping regulations.
- When returning lithium batteries, please mark the consignment with the inscription LITHIUM BATTERIES FOR RECYCLING



The symbol of a crossed-out dustbin displayed on electrical and electronic equipment indicates that the respective device must be collected separately from unsorted municipal waste at the end of its service life.

## 9. Appendix

### 9.1. Technical data

#### 9.1.1. Scape® Movable 65

|                                        |                                                            |
|----------------------------------------|------------------------------------------------------------|
| Article Number                         | smo65-008-01<br>smo65-008-02                               |
| <b>Specifications</b>                  |                                                            |
| footprint (LxBxH) 0°                   | 152.5 x 89.6 cm                                            |
| height 0°                              | 95.0 - 160.1 cm                                            |
| footprint (LxBxH) 90°                  | 152.1 x 70.0 cm                                            |
| height 90°                             | 122.7 - 187.8 cm                                           |
| Weight                                 | 126 kg                                                     |
| material                               | steel, powder coated, deep black RAL9005 fine structure    |
| <b>Features</b>                        |                                                            |
| Display height / tilt angle adjustable | 65 cm, 0° - 90°                                            |
| integrated PC                          | SilentPC 2060 (smo65-008-01)<br>MiniPC 3060 (smo65-008-02) |
| Rollers                                | 4 lockable rollers                                         |
| <b>Electrical Specifications</b>       |                                                            |
| Operating voltage                      | 230 VAC                                                    |
| Power draw                             | max. 770 W                                                 |
| Certifications                         | CE compliant                                               |

**9.1.2. Scape® Tangible 65****Display**

|                          |           |                                         |
|--------------------------|-----------|-----------------------------------------|
| Display diagonal         |           | 64.5 inches                             |
| Resolution               |           | 3840 x 2160 (UHD) @60 Hz                |
| Format                   |           | 16:9                                    |
| Brightness (Panel)       |           | 700 cd/m²                               |
| Contrast (Panel)         |           | 4000:1                                  |
| Backlight                |           | LED                                     |
| Viewing angle            |           | 178° / 178°                             |
| Color gamut              |           | 16.7 million                            |
| Latency (on/off)         |           | 8 ms                                    |
| Backlight – lifetime     |           | 50,000 h                                |
| Pixel class              |           | ISO 9241-307 (Pixel Error Class II)     |
| Operational period       |           | 24/7                                    |
| Max. ambient humidity    | Operation | 10 ~ 90% (not condensing)               |
| Max. ambient humidity    | Storage   | 10 ~ 90% (not condensing)               |
| Max. ambient temperature | Operation | 0 ~ 35 °C / 32 ~ 95 °F                  |
| Max. ambient humidity    | Storage   | -20 ~ 60 °C / -4 ~ 140 °F               |
| Dimensions (W x H x D)   |           | 1521,5 x 896,4 x 97 mm                  |
| Weight                   |           | < 80 kg                                 |
| Mounting                 |           | VESA 400x400 mm, 600x400 mm, 800x400 mm |
| Max. tipping angle       |           | 0° - 180°                               |
| Panel orientation        |           | Landscape / Portrait / Flat (table)     |
| Air flow cooling         |           | 0.5 m³ / min                            |
| Material                 |           | steel, powder-coated, matt black        |

**Touch controller**

|            |                                    |
|------------|------------------------------------|
| Sensor     | 65" Metal Mesh Touch Sensor (PCAP) |
| USB Touch  | 80 touches                         |
| TUIO Touch | >100 touches                       |

**Interfaces**

|       |                                             |
|-------|---------------------------------------------|
| Touch | HID USB / TUIO 1.1 / 2.0                    |
| Video | 2x HDMI 2.0 / 1x HDMI 1.4 / DisplayPort 1.4 |

**Electrical specifications**

|                   |                              |
|-------------------|------------------------------|
| Operating voltage | 100 – 240 VAC                |
| Power draw        | 270 W                        |
| Certifications    | CE certified, RoHS compliant |



**9.1.3. Silent PC 2060****Specifications**

|               |                                                             |
|---------------|-------------------------------------------------------------|
| Processor     | Intel Core i5-10300H Quad-core 2.5 - 4.5 GHz                |
| RAM           | 16 GB (Dual Channel)                                        |
| Hard drive    | 250 GB SSD M.2                                              |
| Graphics Card | NVIDIA Geforce RTX 2060 6GB GDDR6                           |
| Sound         | Onboard 8 Channel Digital Audio via HDMI Mic/Speaker output |

**Ports**

|         |                                                                              |
|---------|------------------------------------------------------------------------------|
| Display | 2x HDMI 2.0 / 2x DisplayPort 1.4                                             |
| Network | WIFI 6 Killer AX1650 / 1x Killer 2.5 Gbps LAN / 1x Gigabit LAN / Bluetooth 5 |
| USB     | 4x USB 3.0 Type A, 1x USB 3.1 Type A, 1x USB 3.1 Type C                      |

**Other**

|                    |                                 |
|--------------------|---------------------------------|
| Dimensions (LxWxH) | 210 x 203 x 62.2 mm             |
| Power Supply       | External power supply unit      |
| Operating voltage  | 100 – 240 VAC                   |
| Power draw         | 330 W                           |
| Operating System   | Windows 10 Professional         |
|                    | not suitable for 24/7 operation |

**9.1.4. Mini-PC 3060****Specifications**

|               |                                                             |
|---------------|-------------------------------------------------------------|
| Processor     | Intel Core i5-10400 6-core 2.9 - 4.3 GHz                    |
| RAM           | 16 GB (Dual Channel)                                        |
| Hard drive    | 250 GB SSD M.2                                              |
| Graphics Card | NVIDIA Geforce RTX 3060 12GB GDDR6                          |
| Sound         | Onboard 8 Channel Digital Audio via HDMI Mic/Speaker output |

**Ports**


|         |                                                                              |
|---------|------------------------------------------------------------------------------|
| Display | 1x HDMI 2.1 / 3x DisplayPort 1.4a                                            |
| Network | WIFI 6 Killer AX1650 / 1x Killer 2.5 Gbps LAN / 1x Gigabit LAN / Bluetooth 5 |
| USB     | 4x USB 3.1 Type A, 3x USB 3.0 Type A, 1x USB 3.0 Type C                      |

**Other**


|                    |                                 |
|--------------------|---------------------------------|
| Dimensions (LxWxH) | 265.5 x 126 x 249 mm            |
| Power Supply       | internal power supply unit      |
| Operating voltage  | 100 – 240 VAC                   |
| Power draw         | 500 W                           |
| Operating System   | Windows 10 Professional         |
|                    | not suitable for 24/7 operation |

## 9.2. Technical Drawings smo65-008-01


### 9.2.1. Perspective

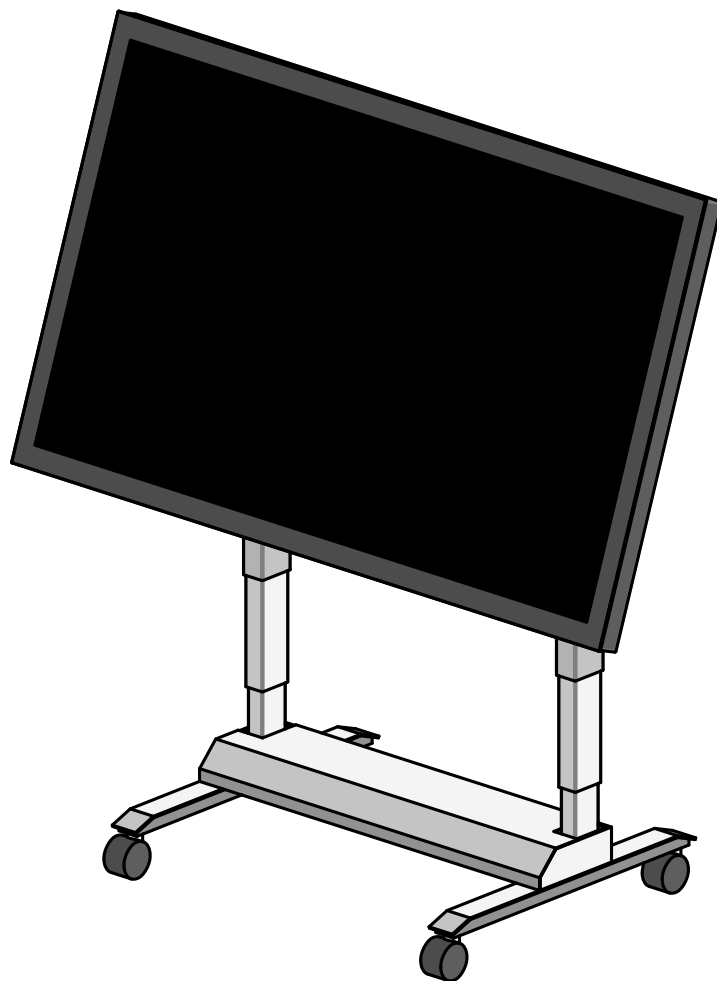


### 9.2.2. Horizontal – Top view

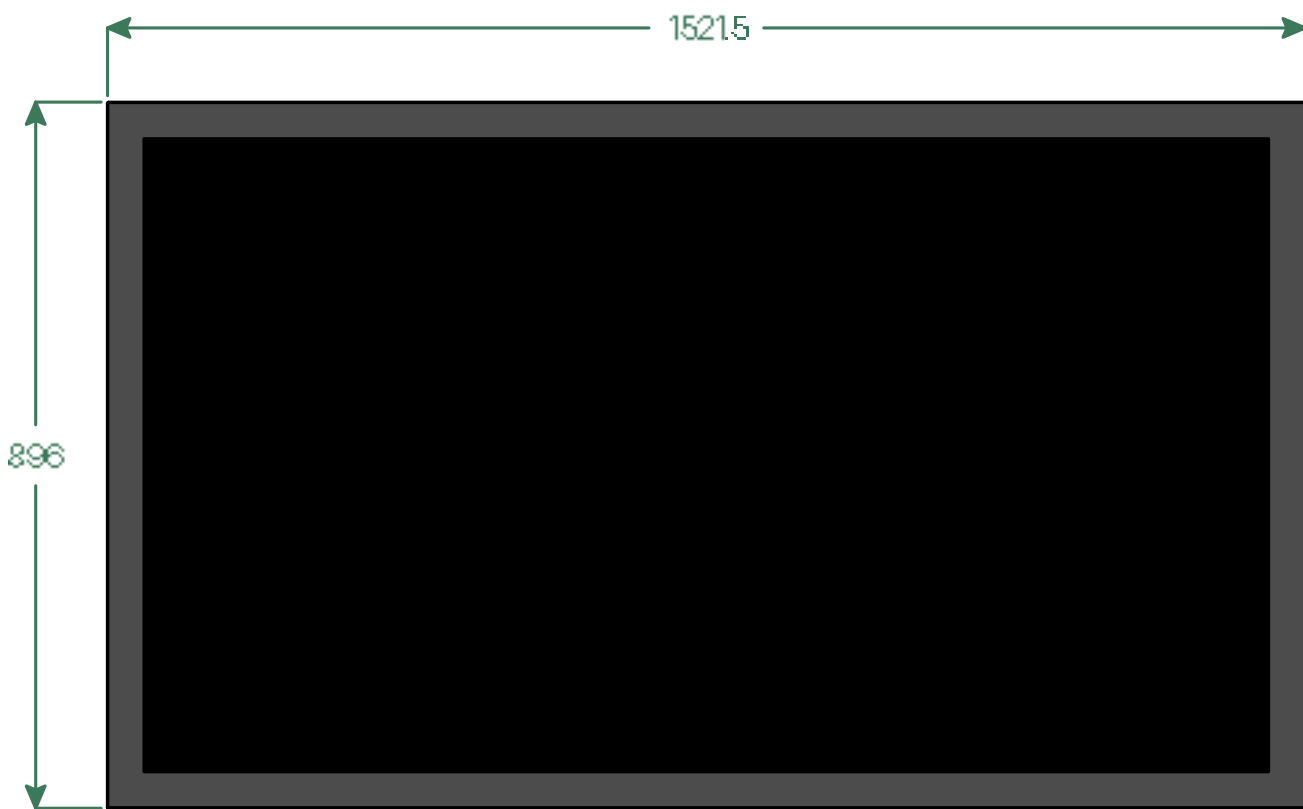


### 9.2.3. Horizontal – Front view (high)

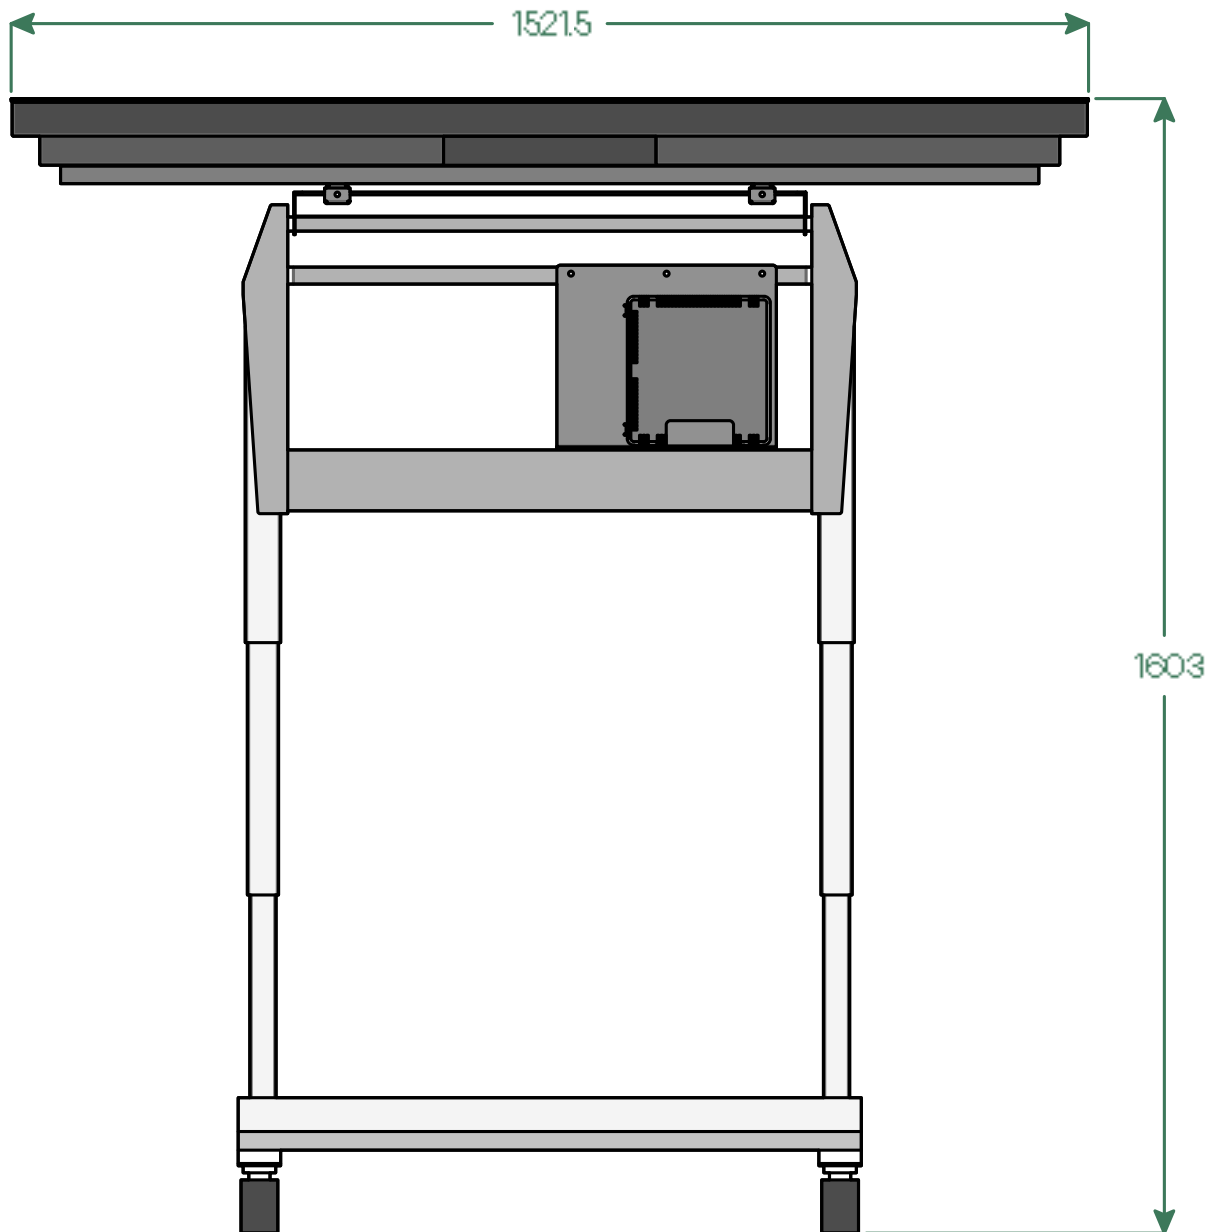


### 9.2.5. Horizontal – Front view (low)

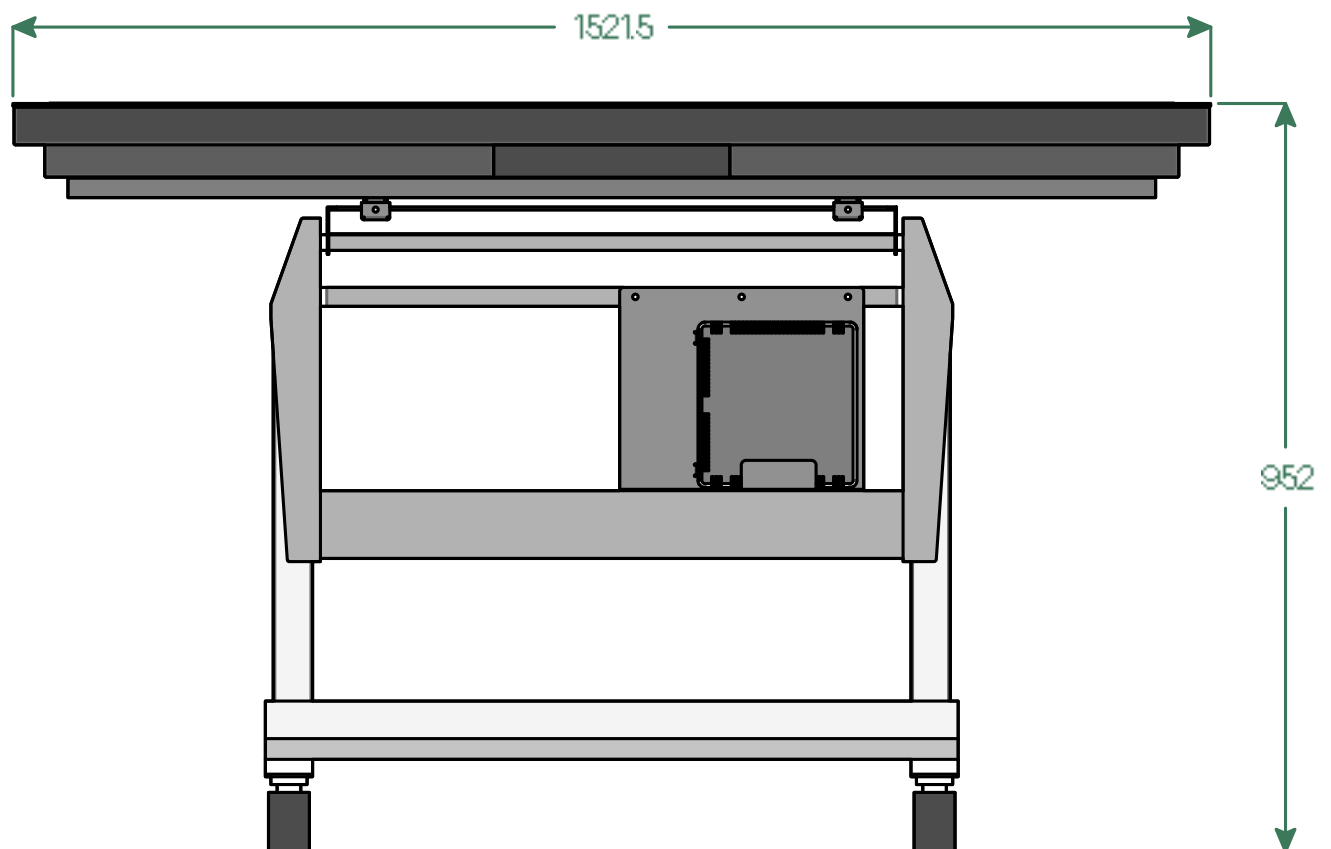

### 9.2.6. Horizontal – Right view (high)

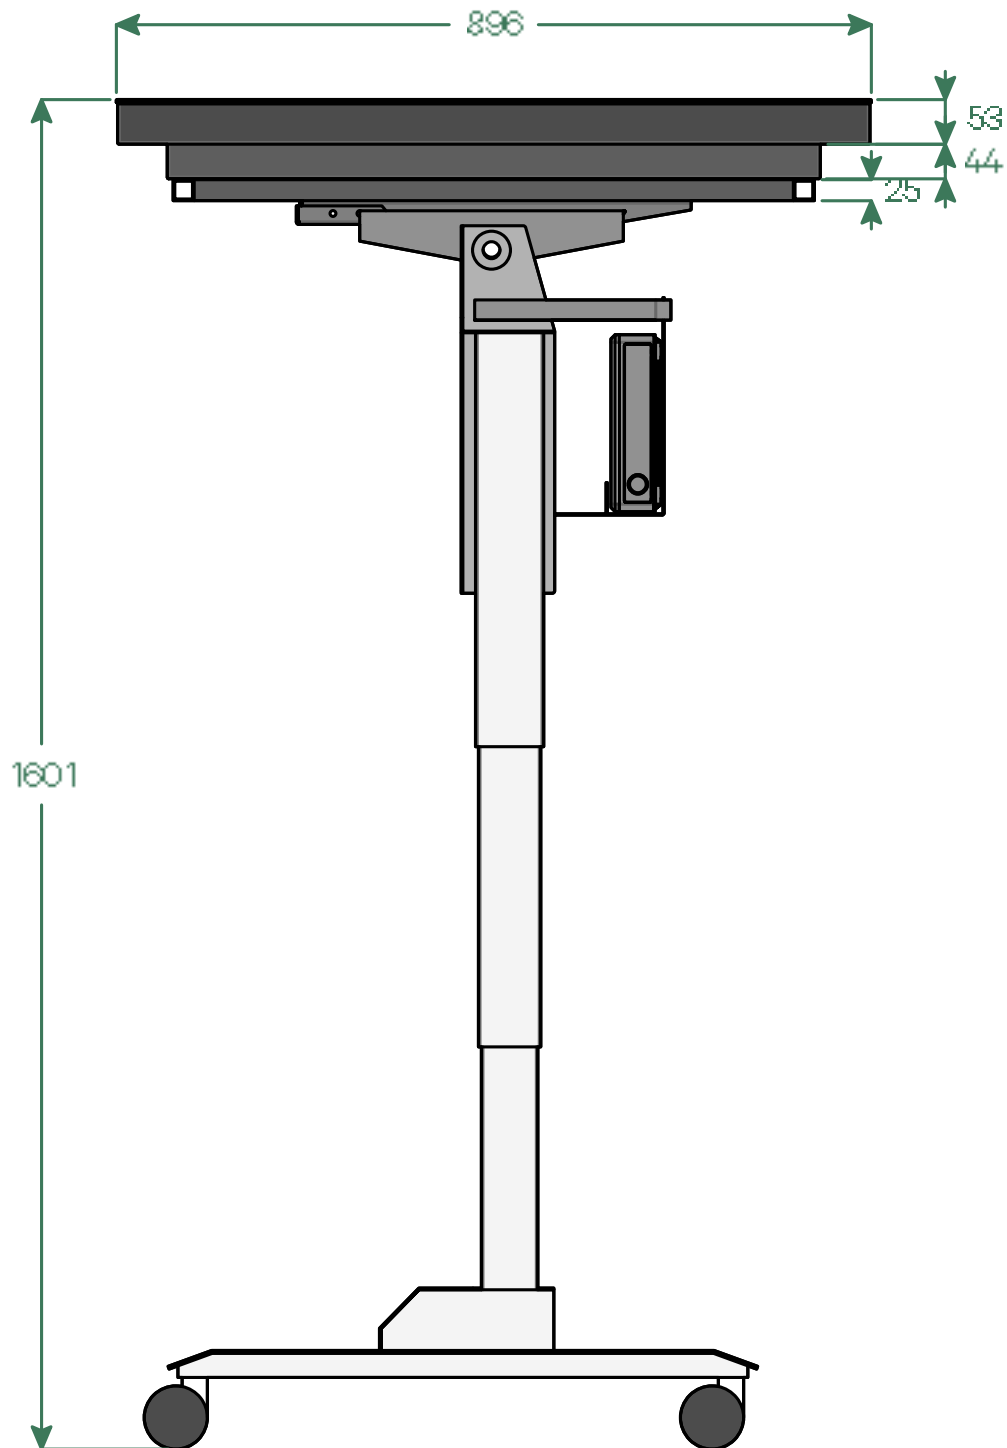


### 9.2.7. Horizontal – Right view (low)

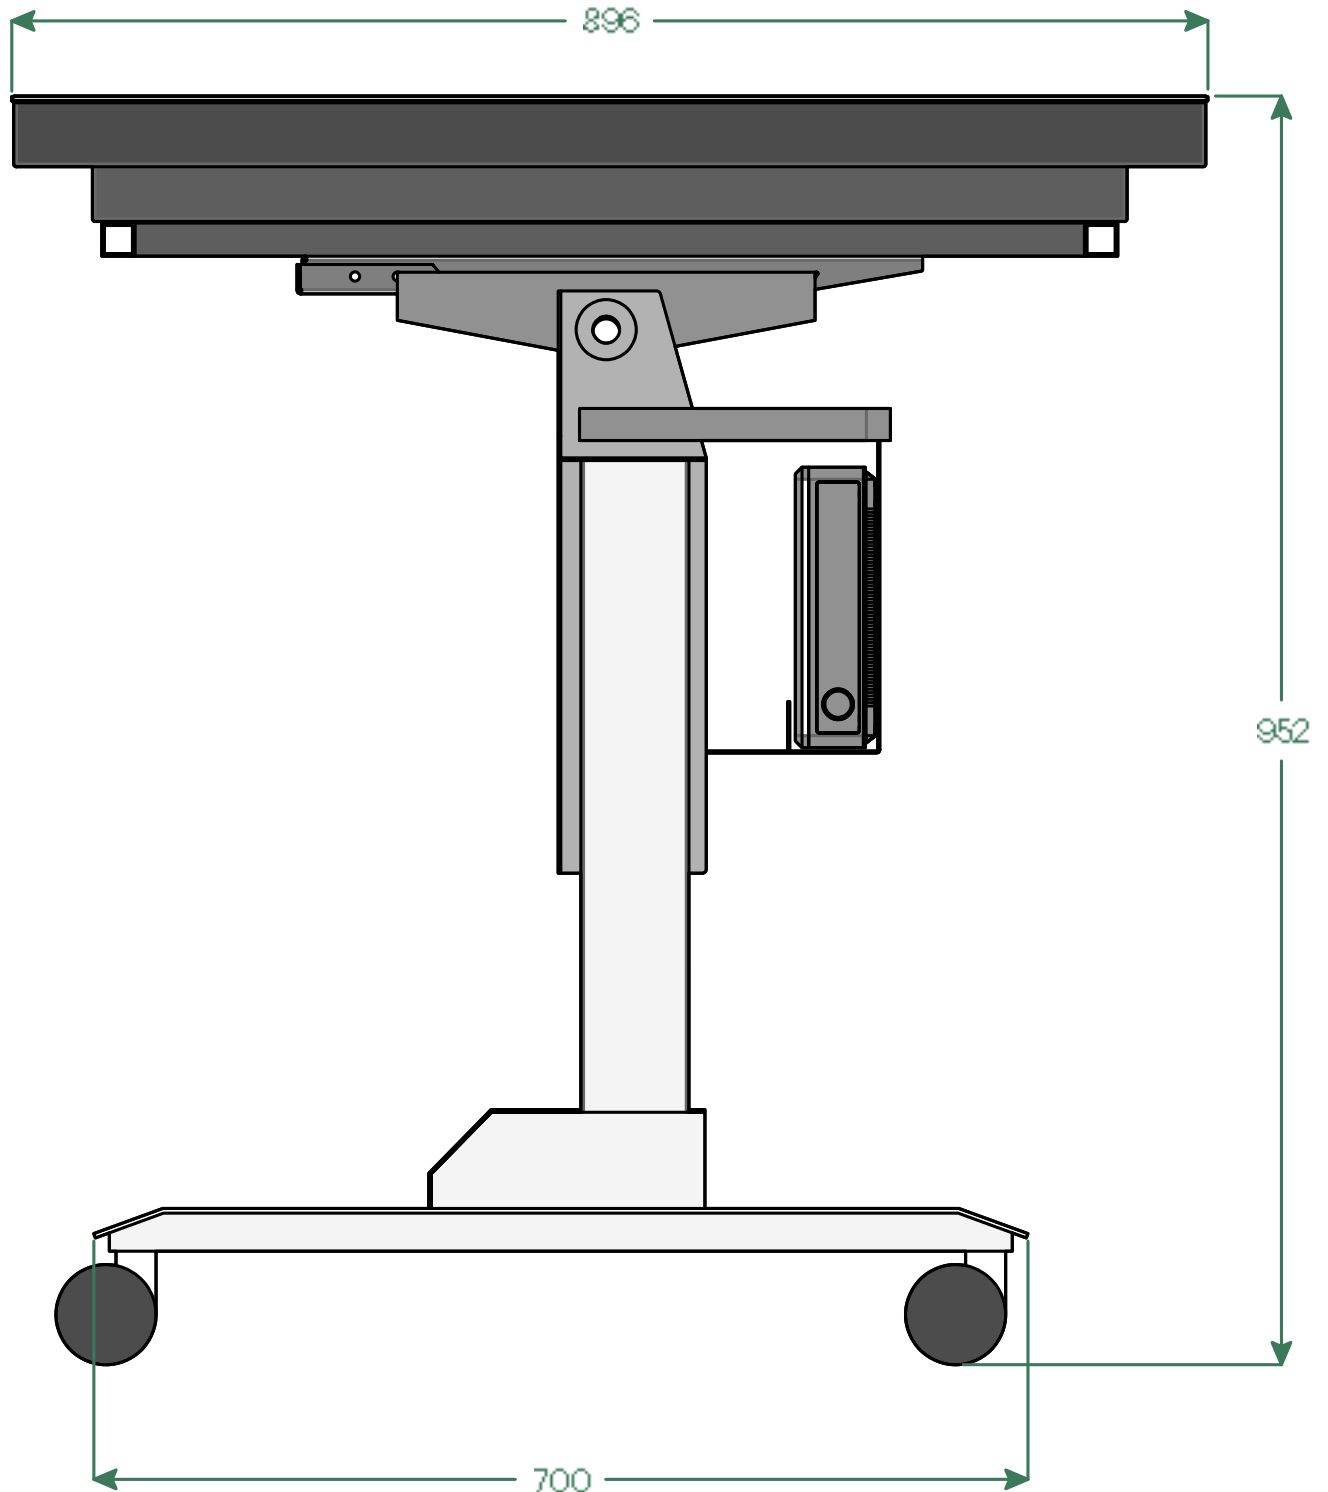





### 9.2.8. Vertical – Top view

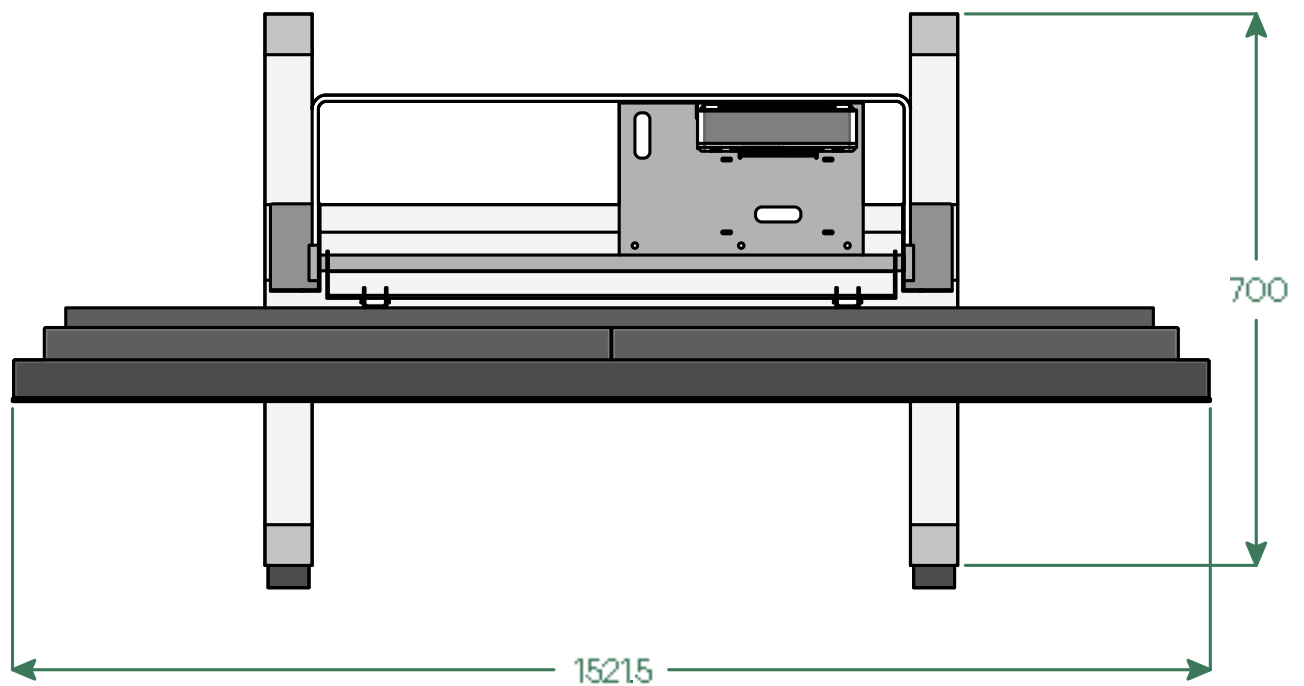


### 9.2.9. Vertical – Front view (high)

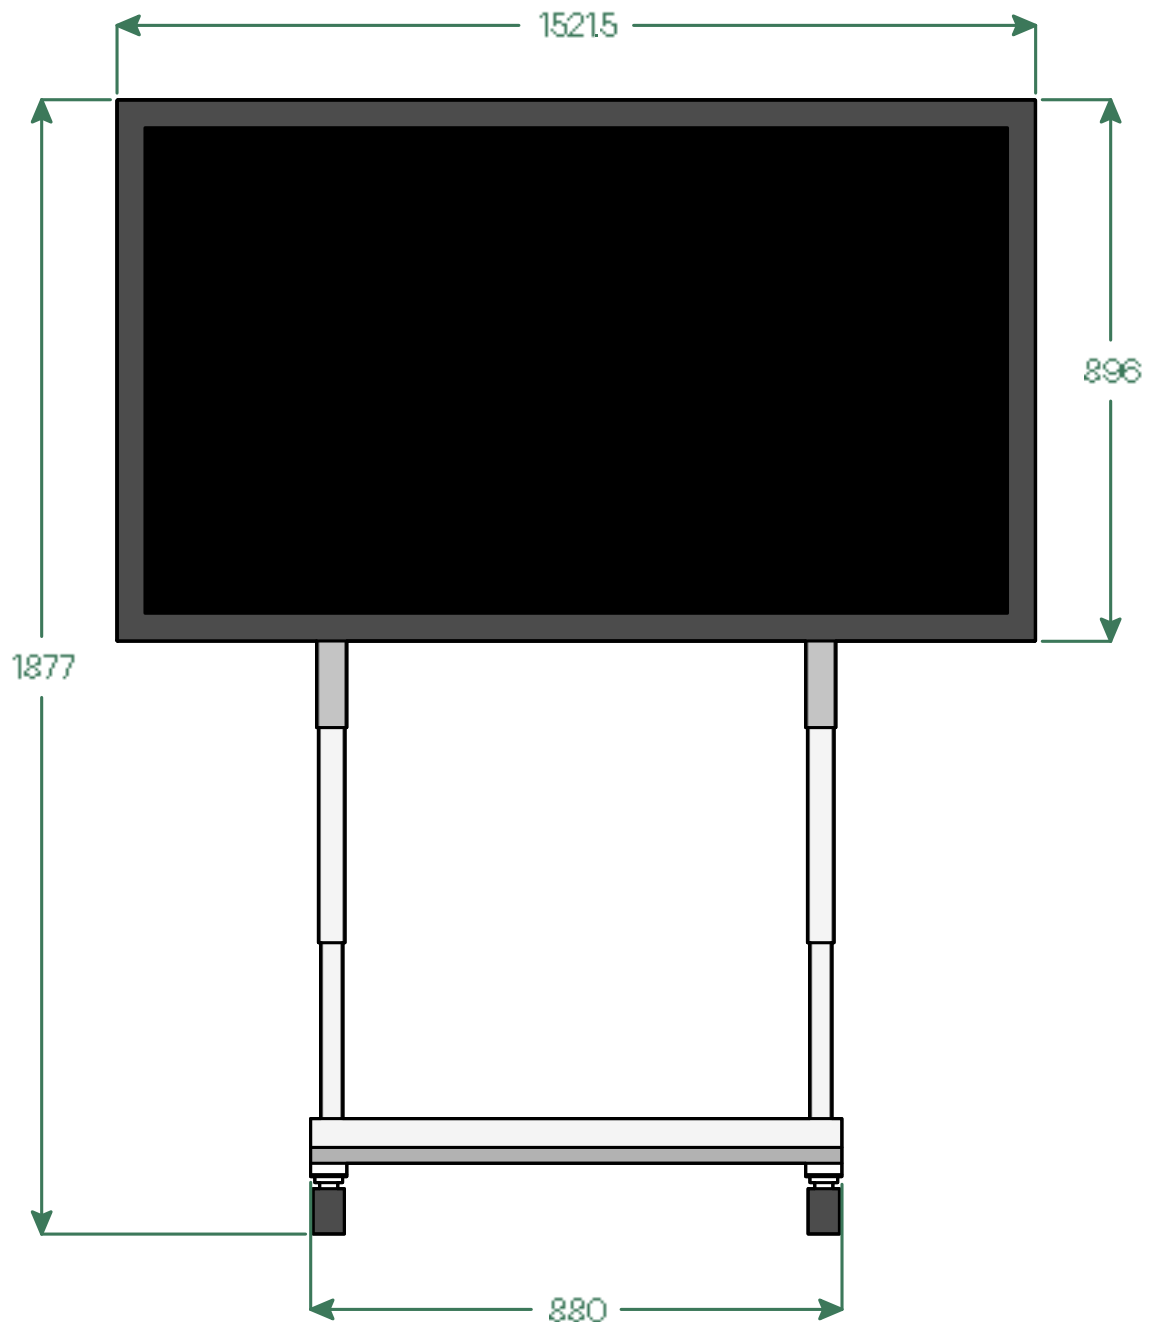


### 9.2.10. Vertical – Front view (low)

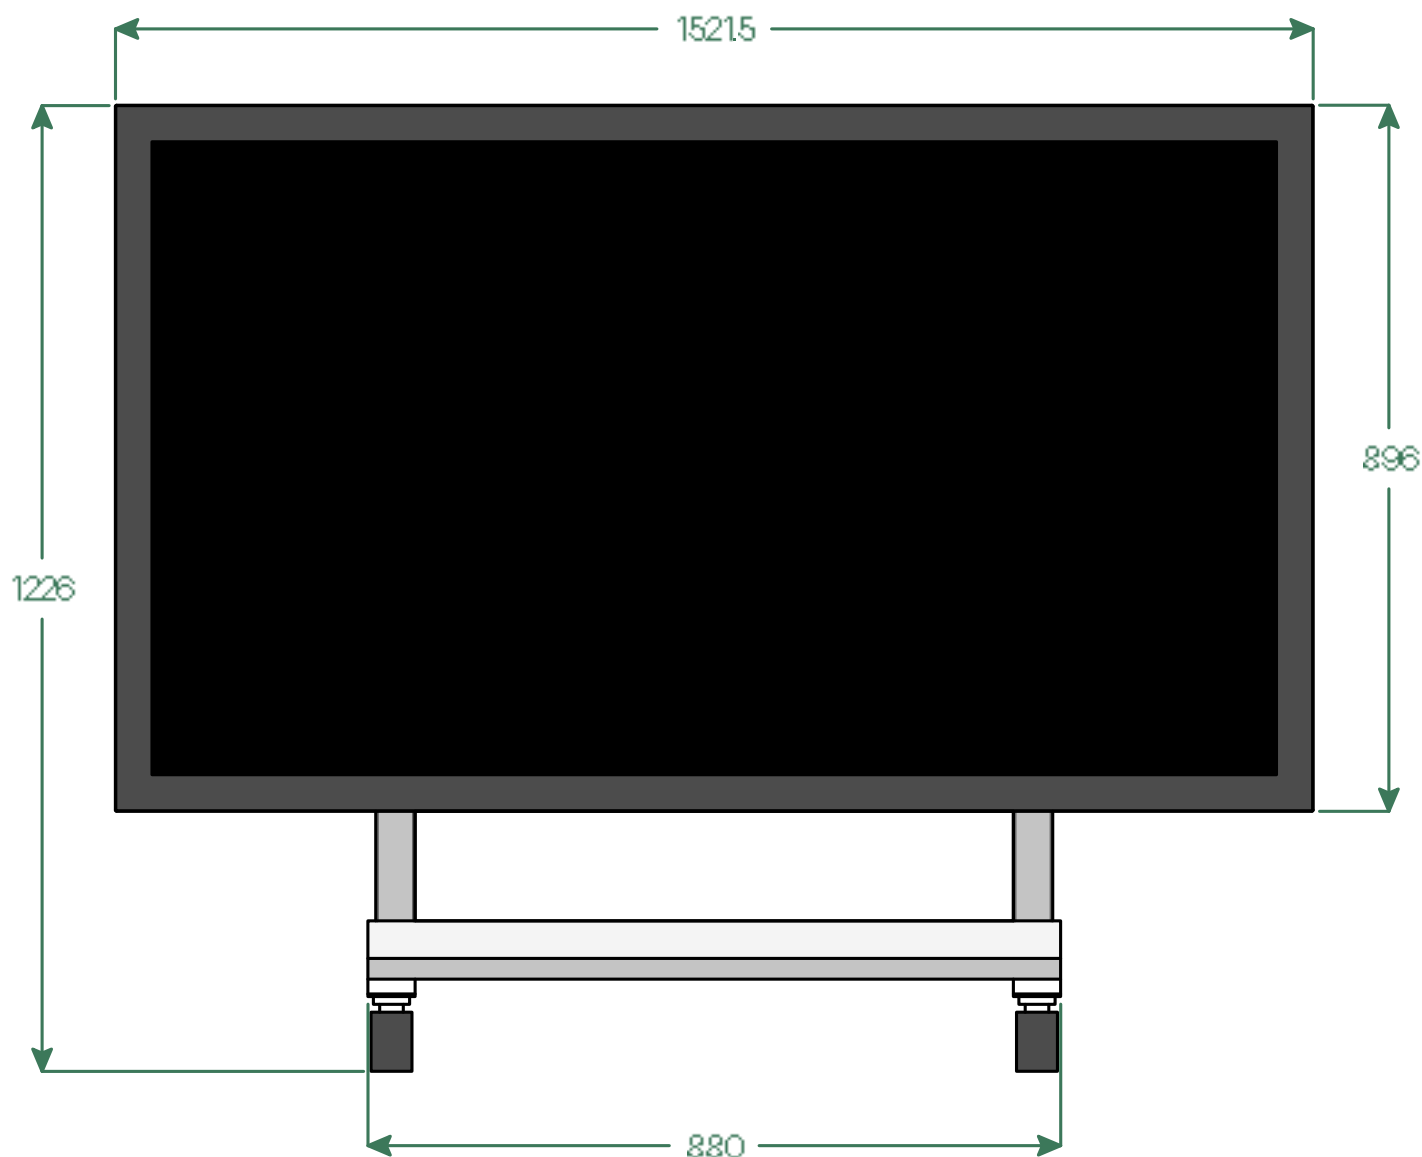

### 9.2.11. Vertical – Right view (high)

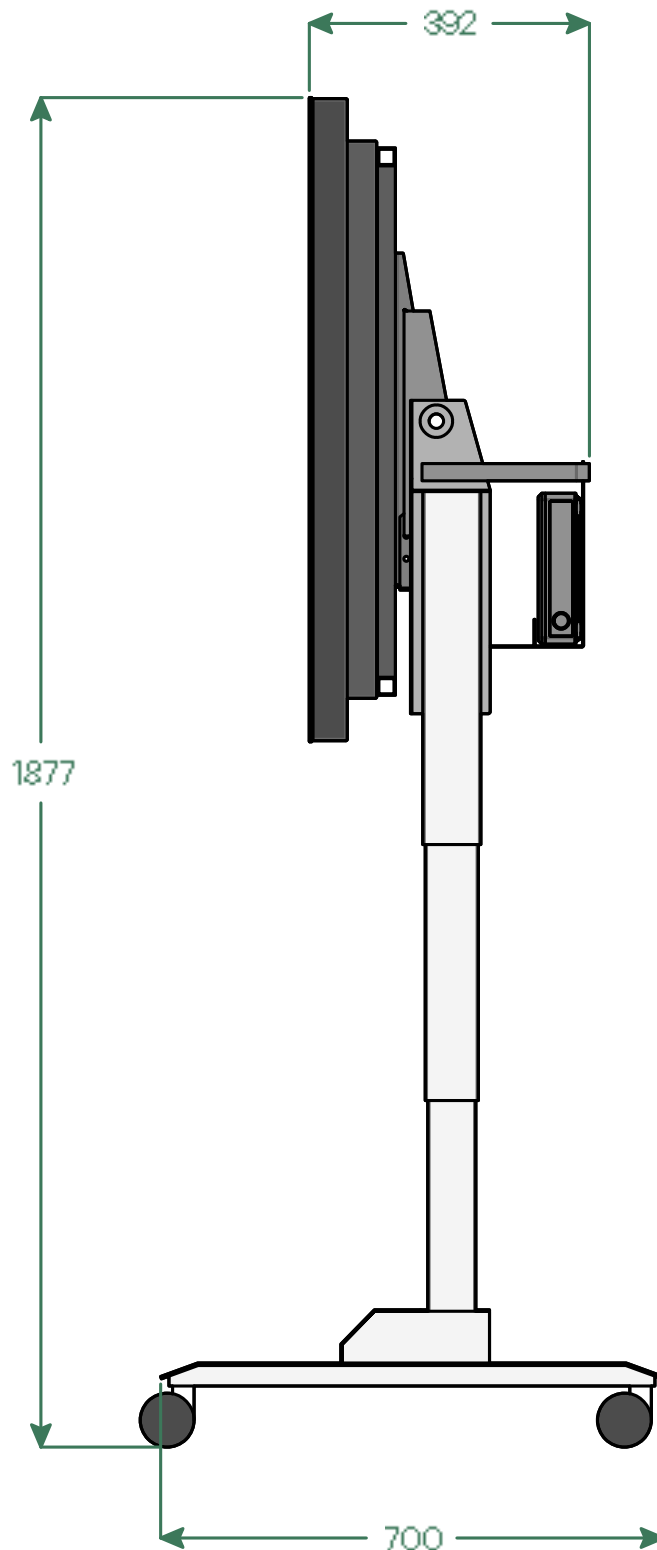


### 9.2.12. Vertical – Right view (low)

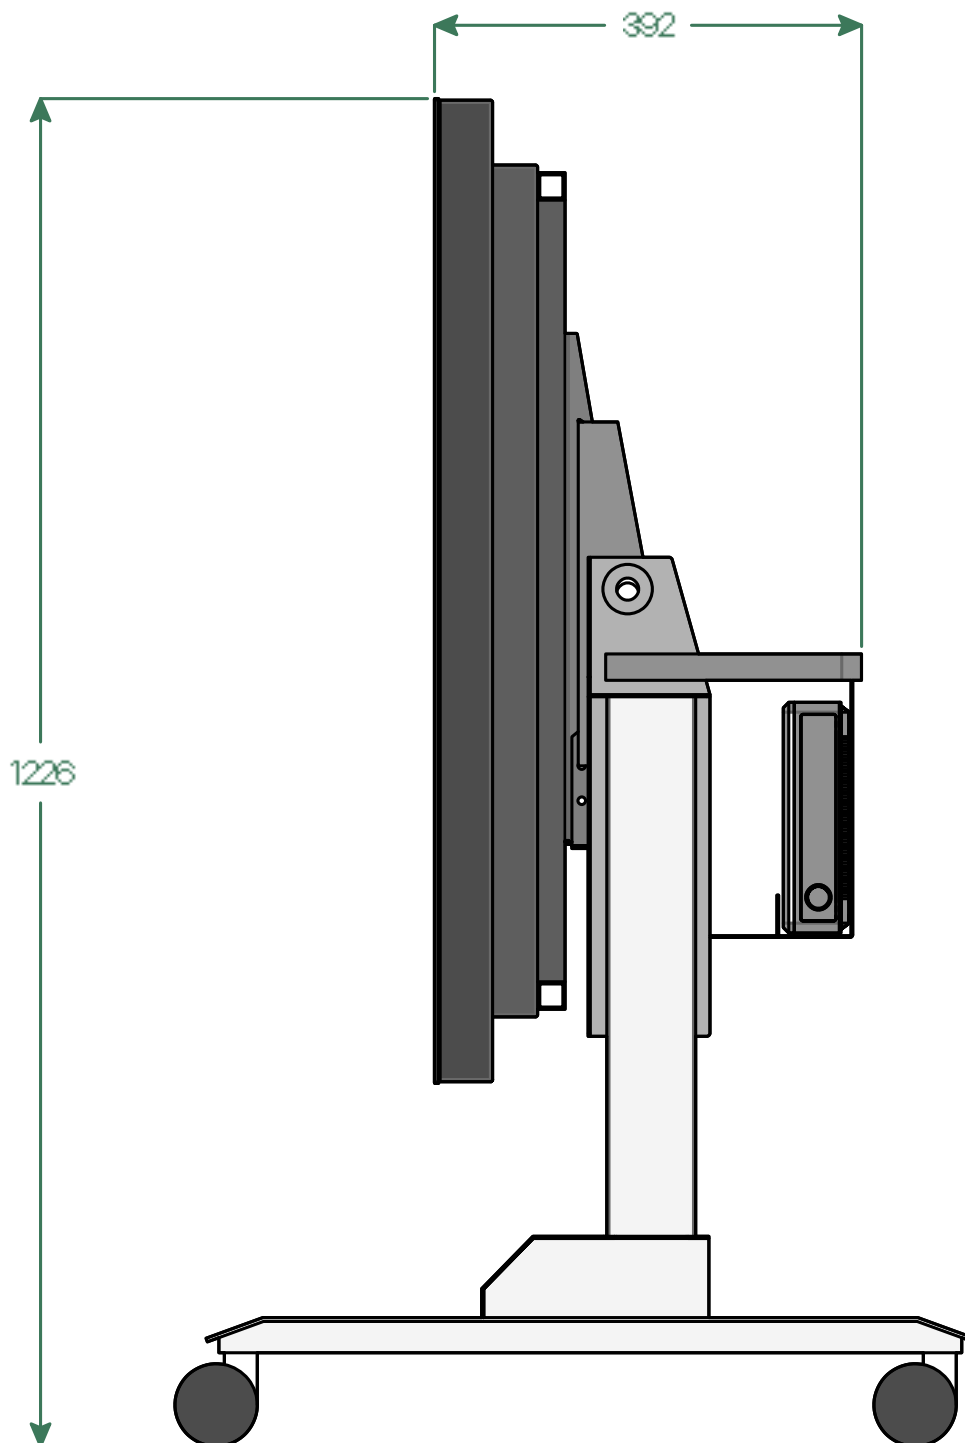


## 9.3. Technical Drawings smo65-008-02


### 9.3.1. Perspective

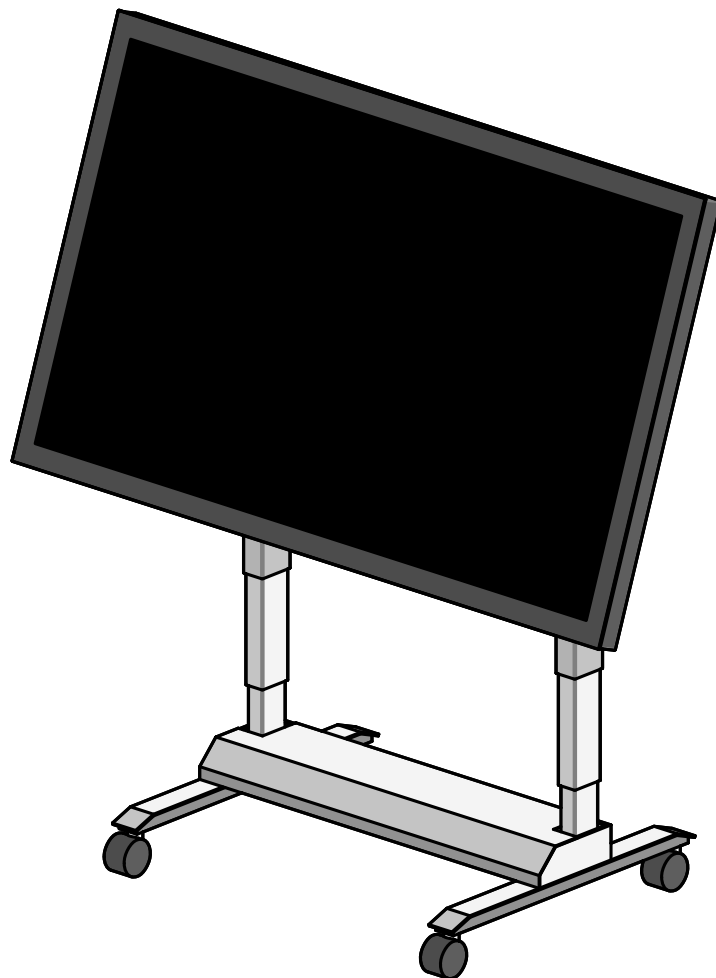

### 9.3.2. Horizontal – Top view

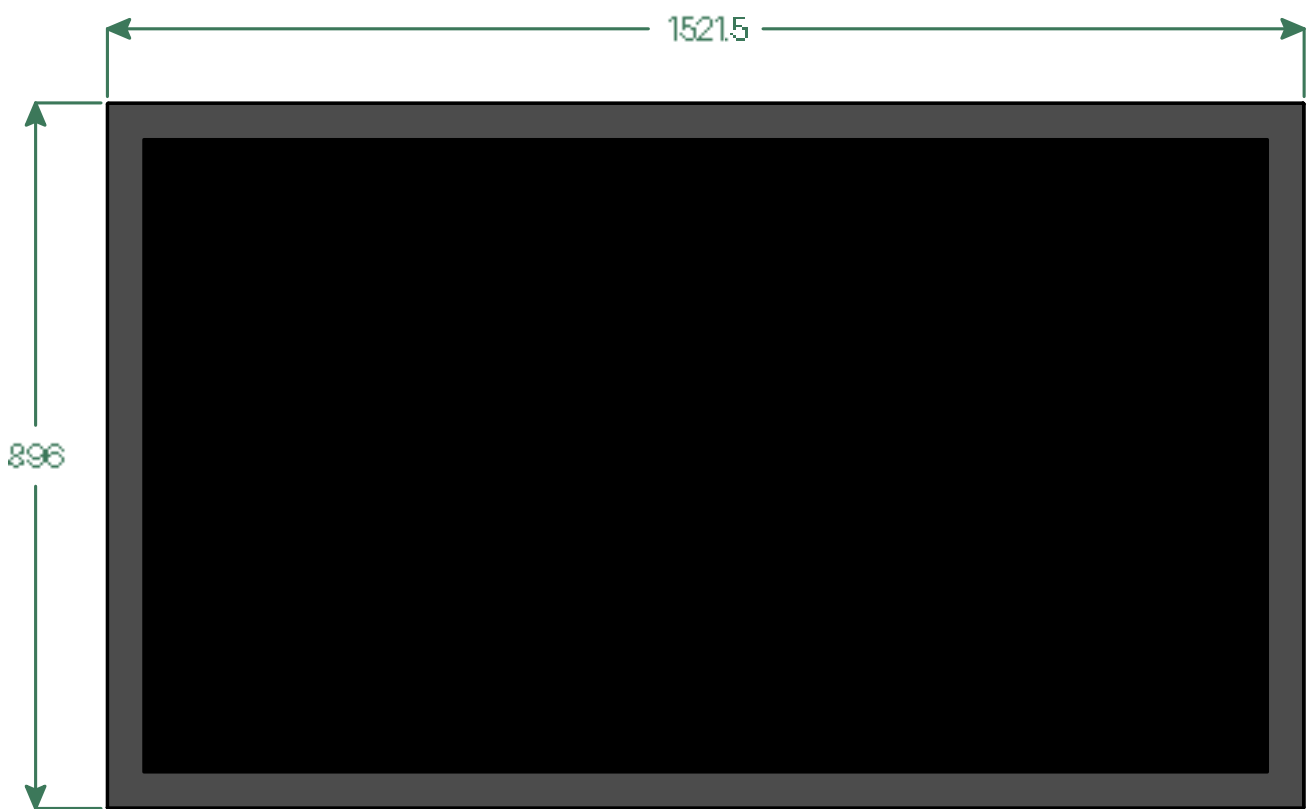


### 9.3.3. Horizontal – Front view (high)

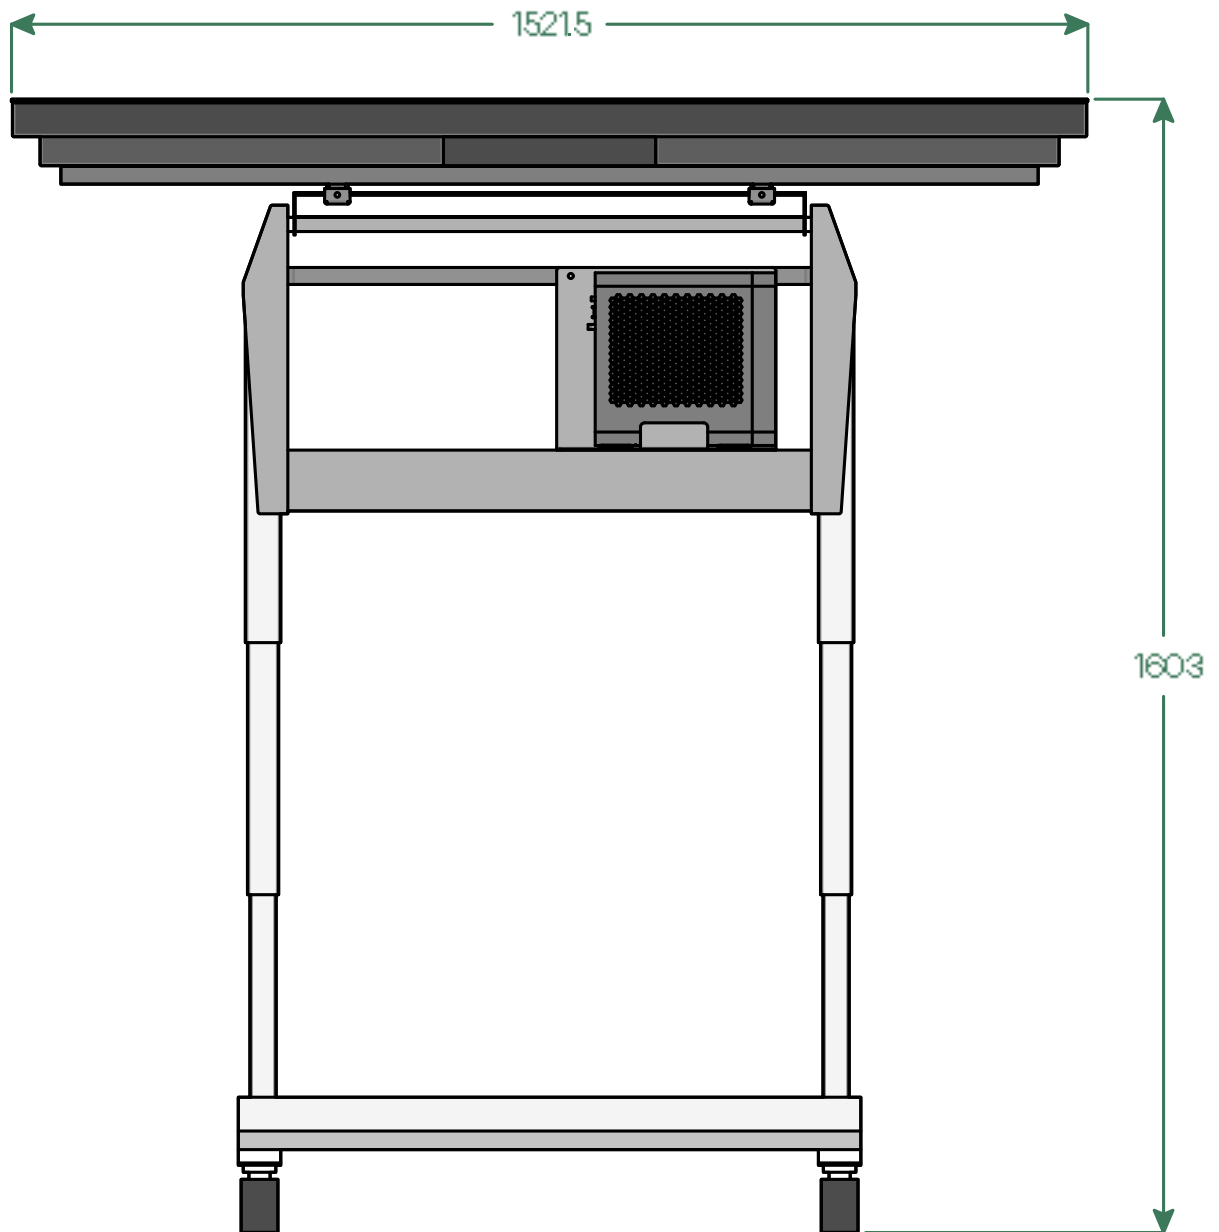





### 9.3.5. Horizontal – Front view (low)

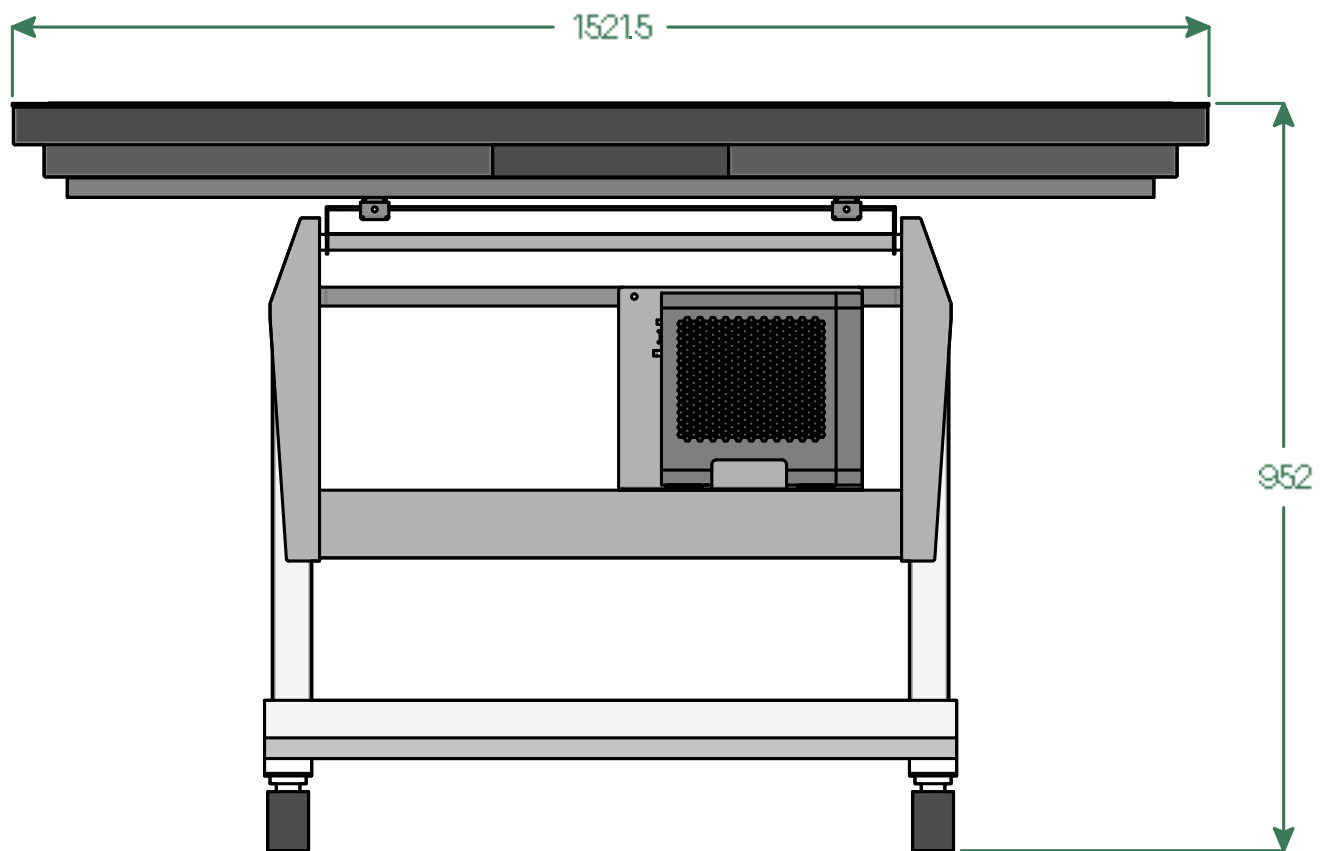


### 9.3.6. Horizontal – Right view (high)

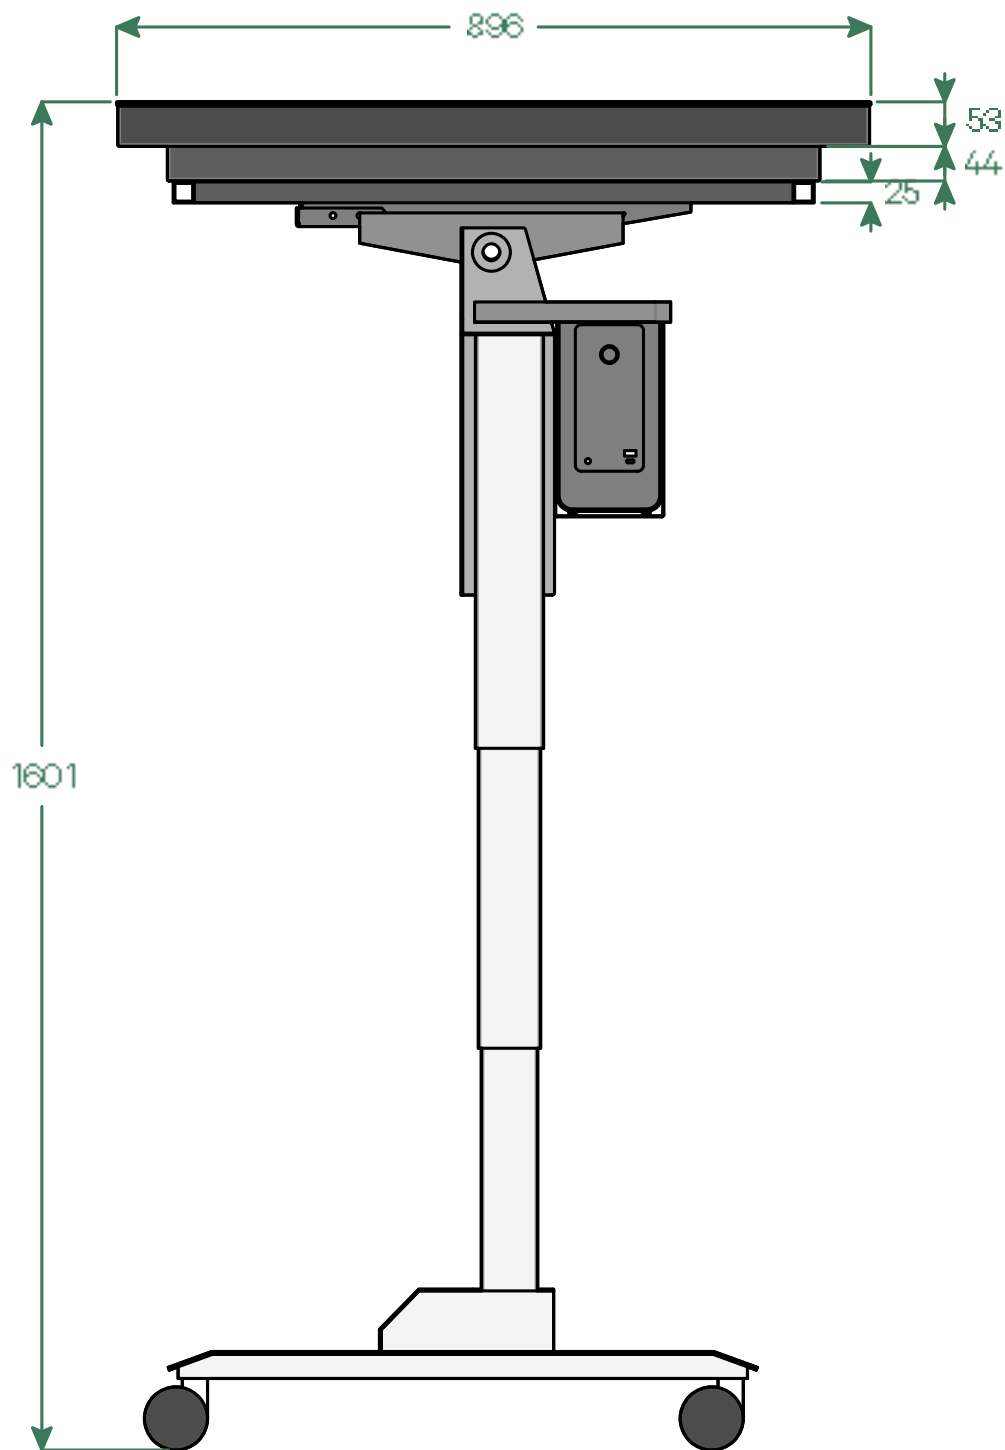


### 9.3.7. Horizontal – Right view (low)

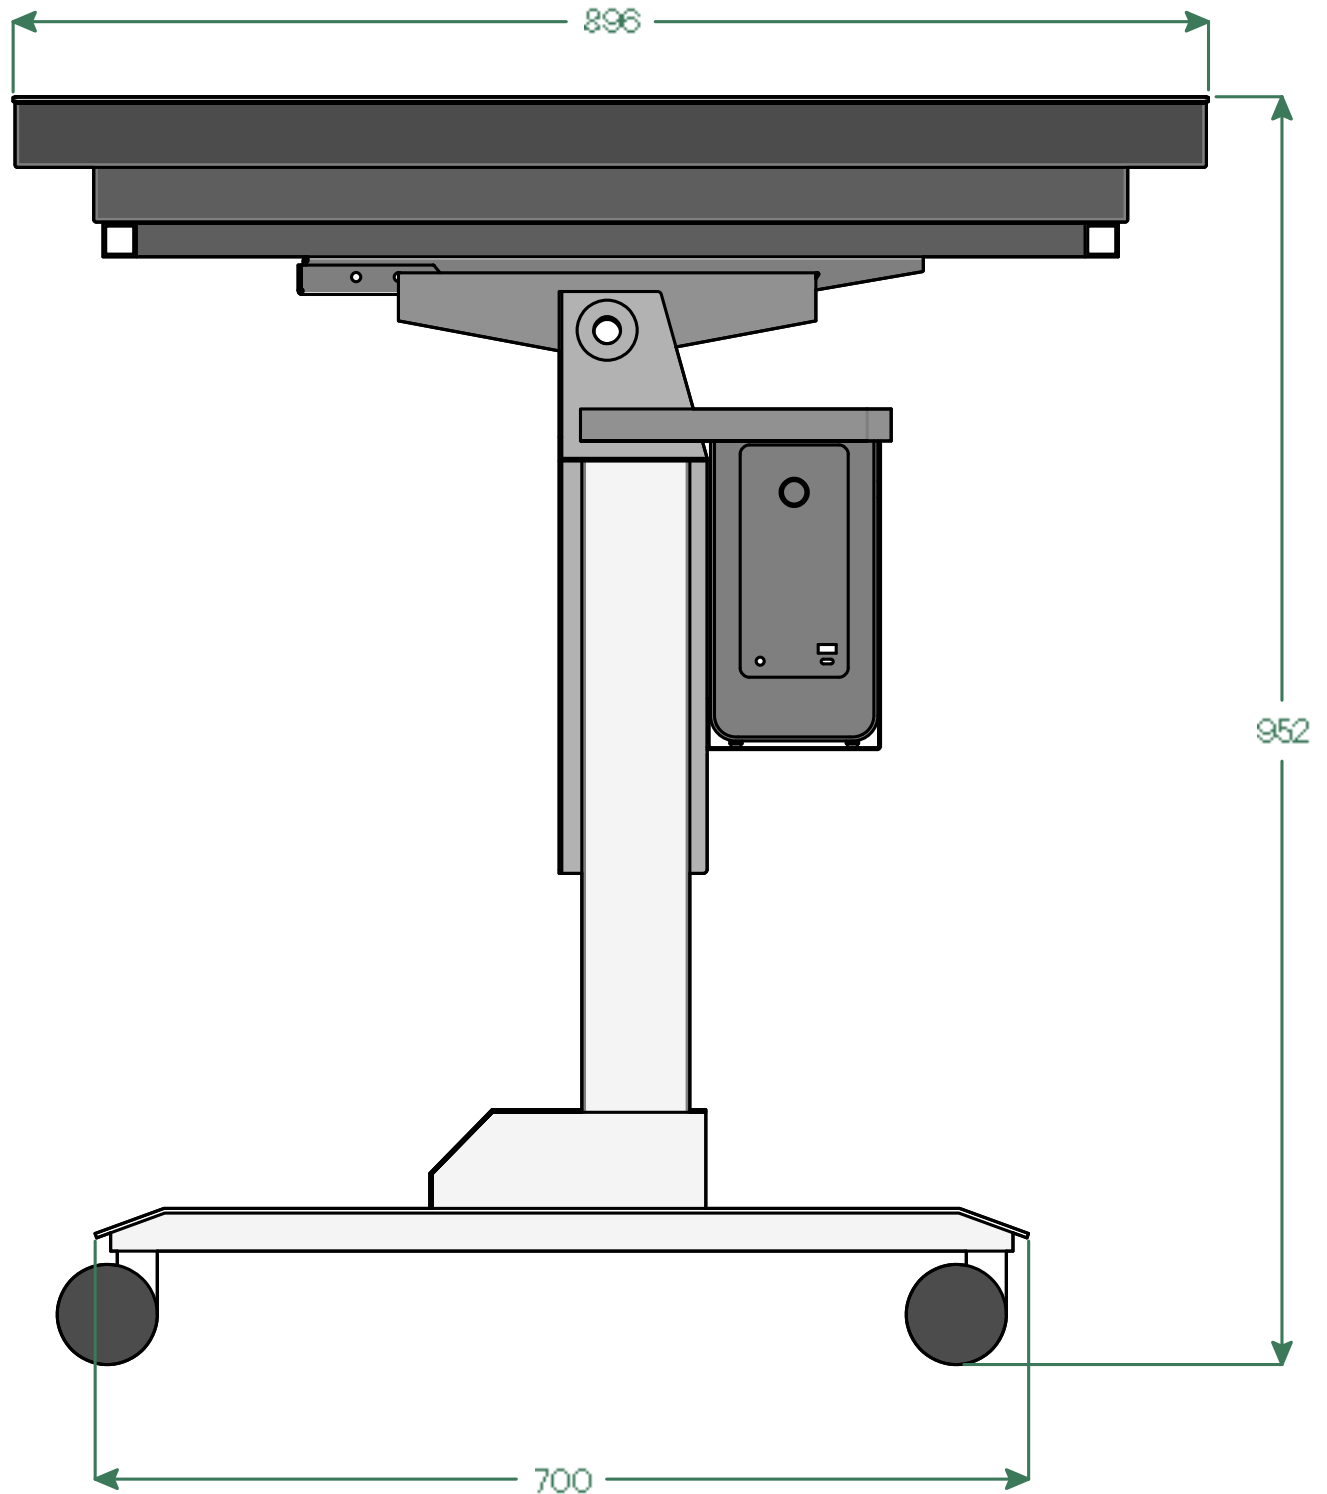


### 9.3.8. Vertikal – Top view

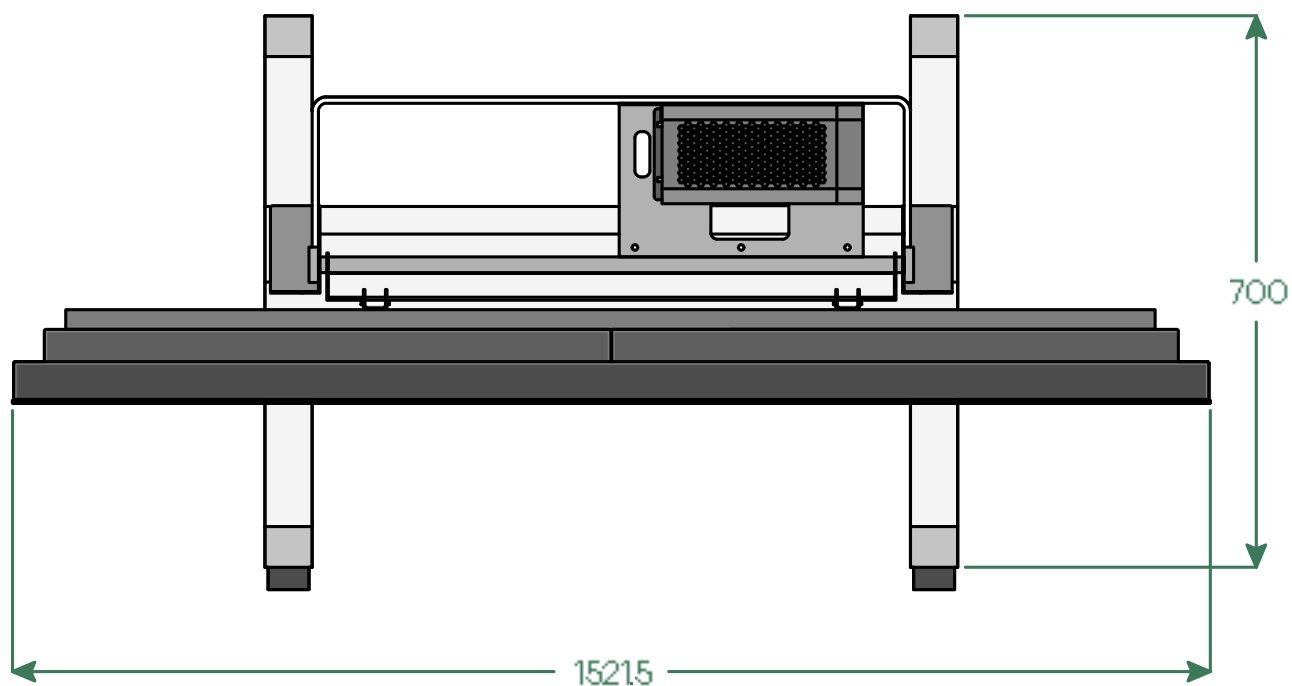


### 9.3.9. Vertikal – Front view (high)

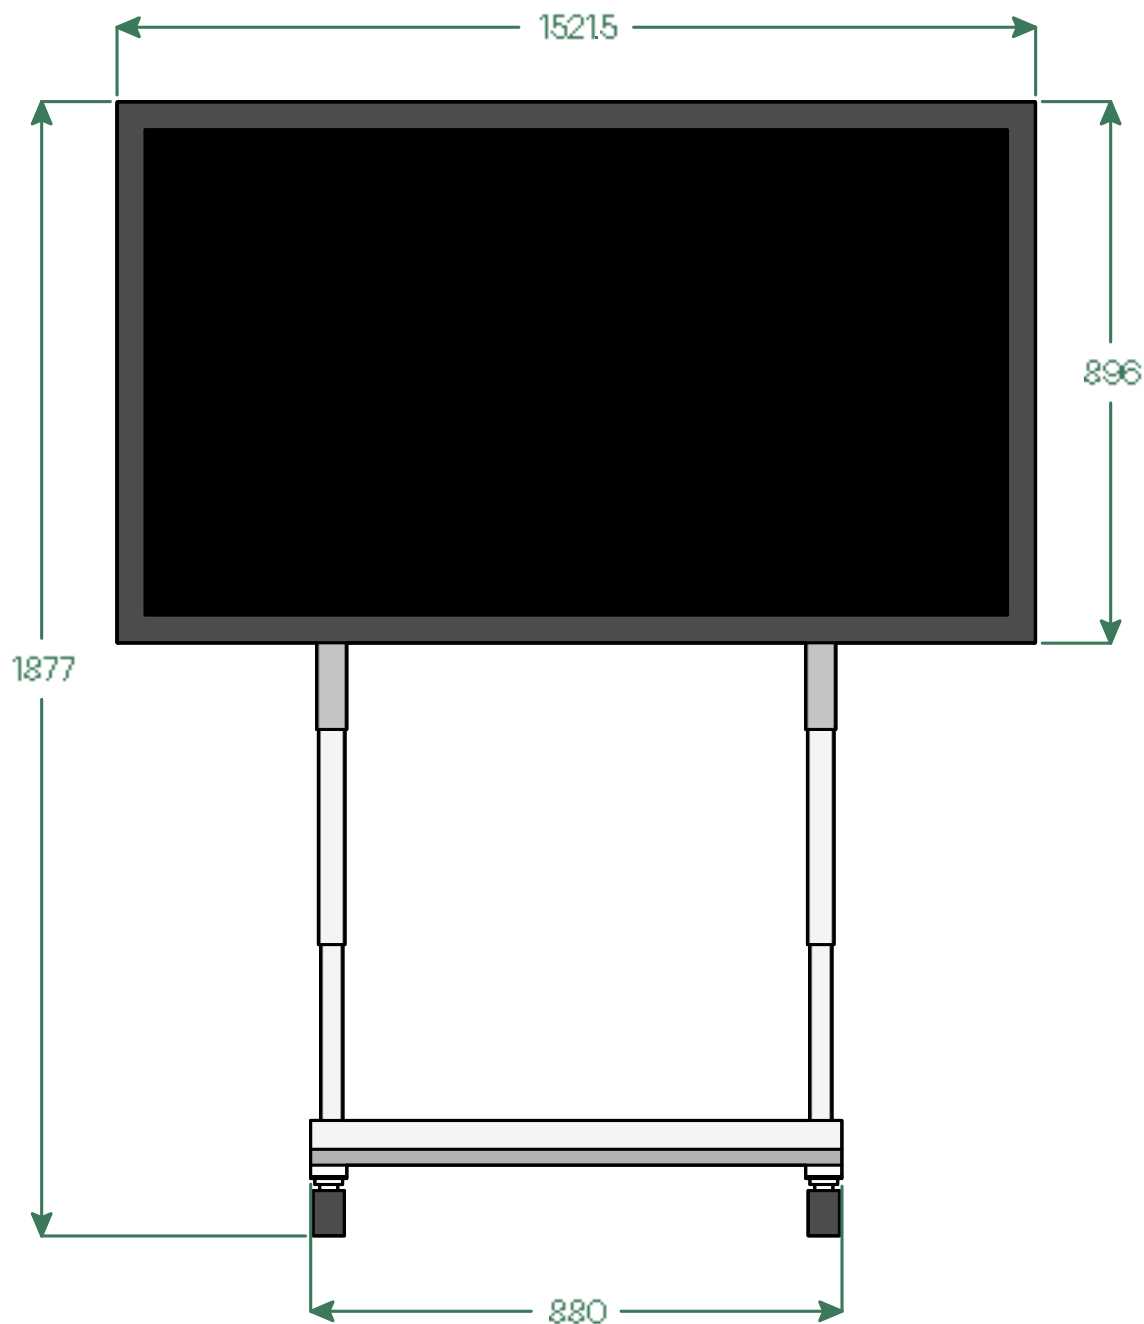


### 9.3.10. Vertikal – Front view (low)

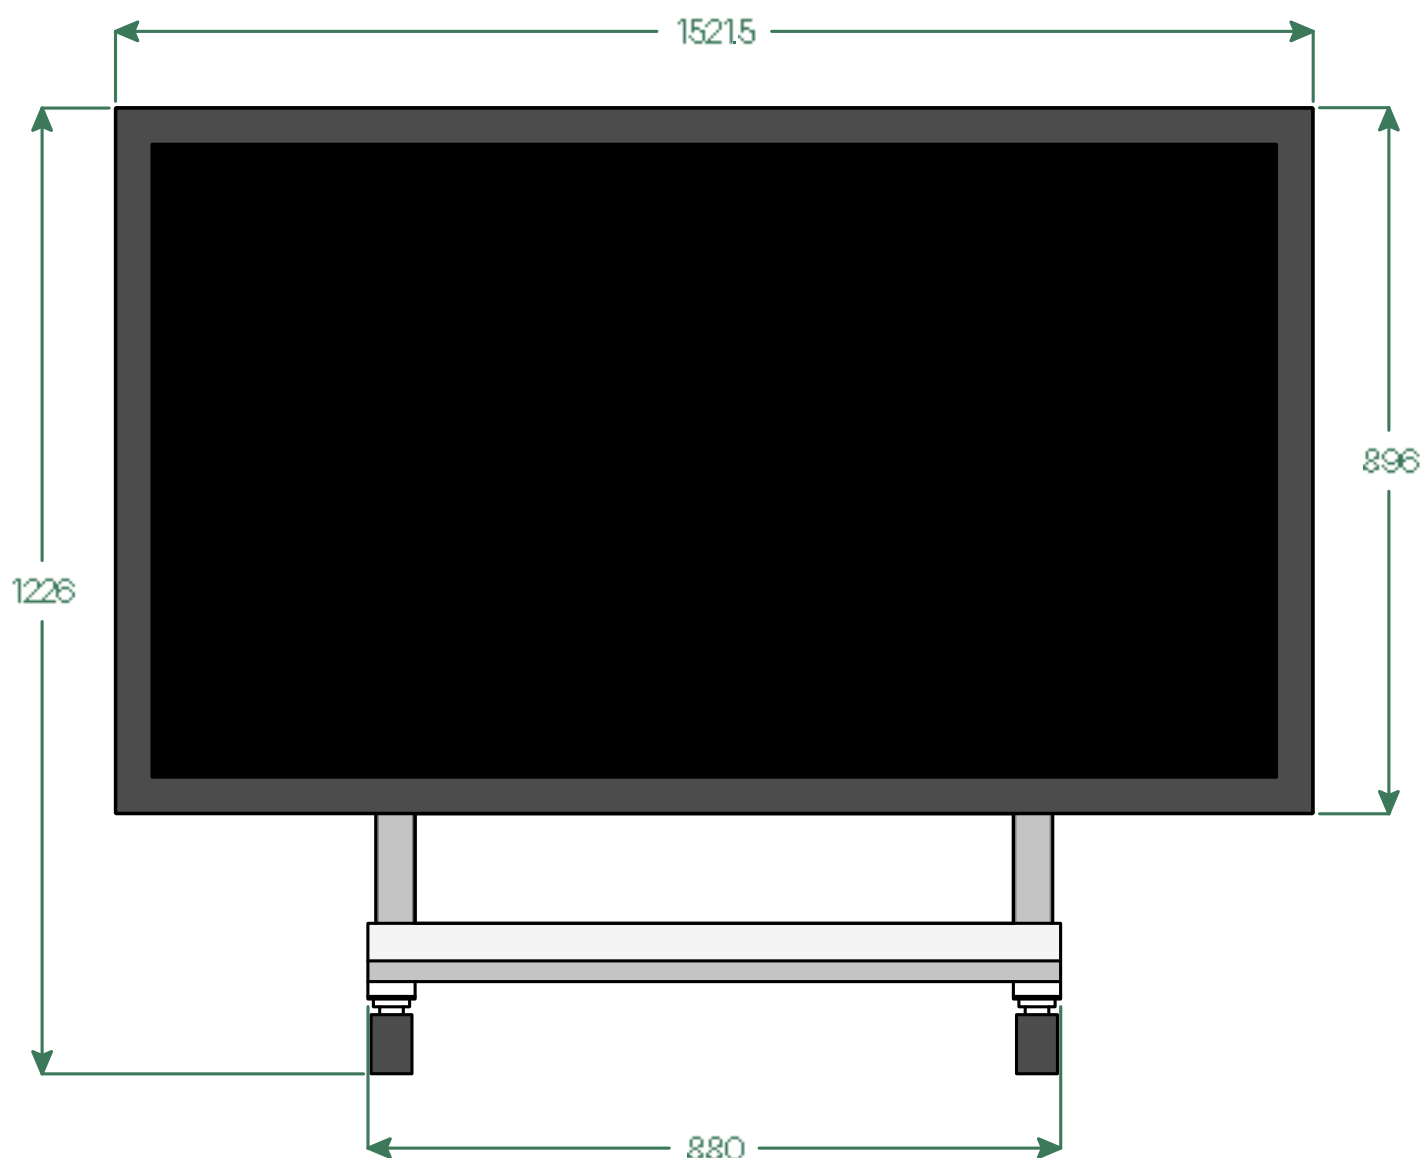

### 9.3.11. Vertikal – Right view (high)

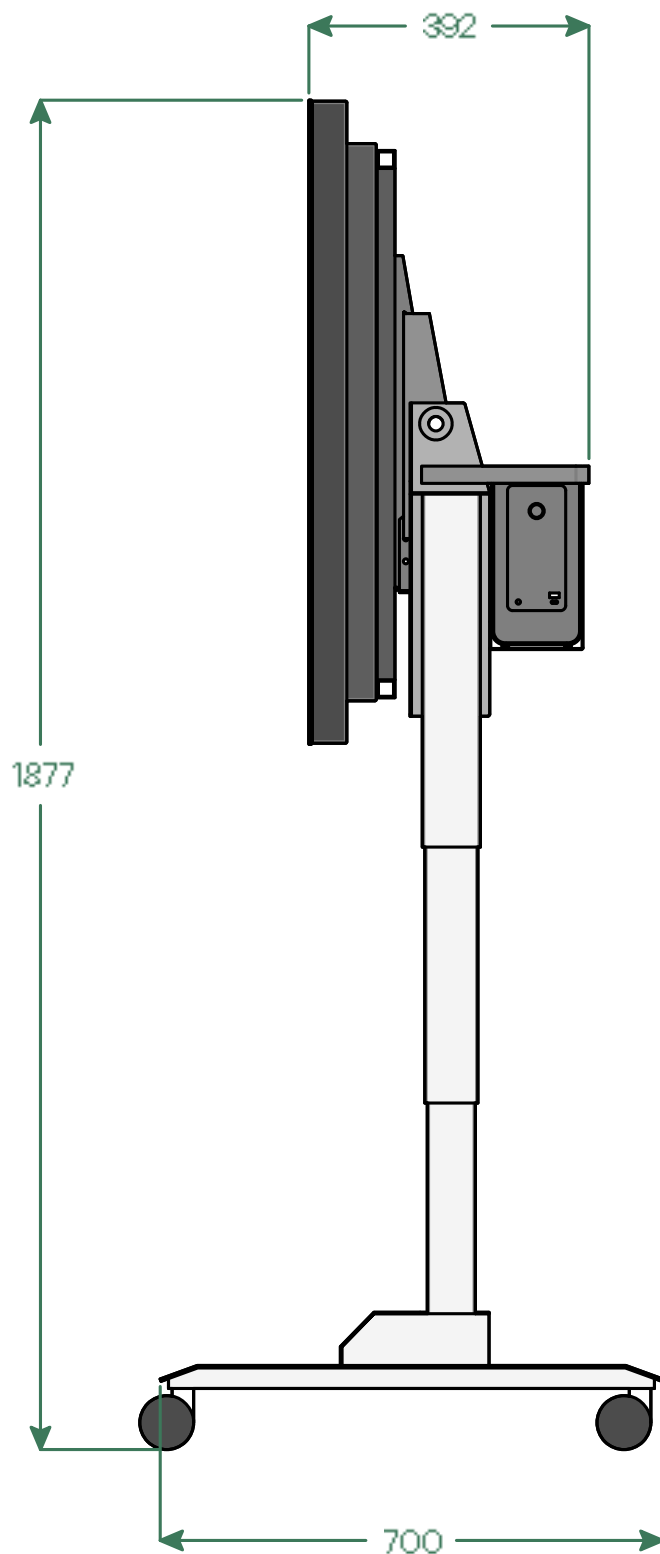

### 9.3.12. Vertikal – Right view (low)

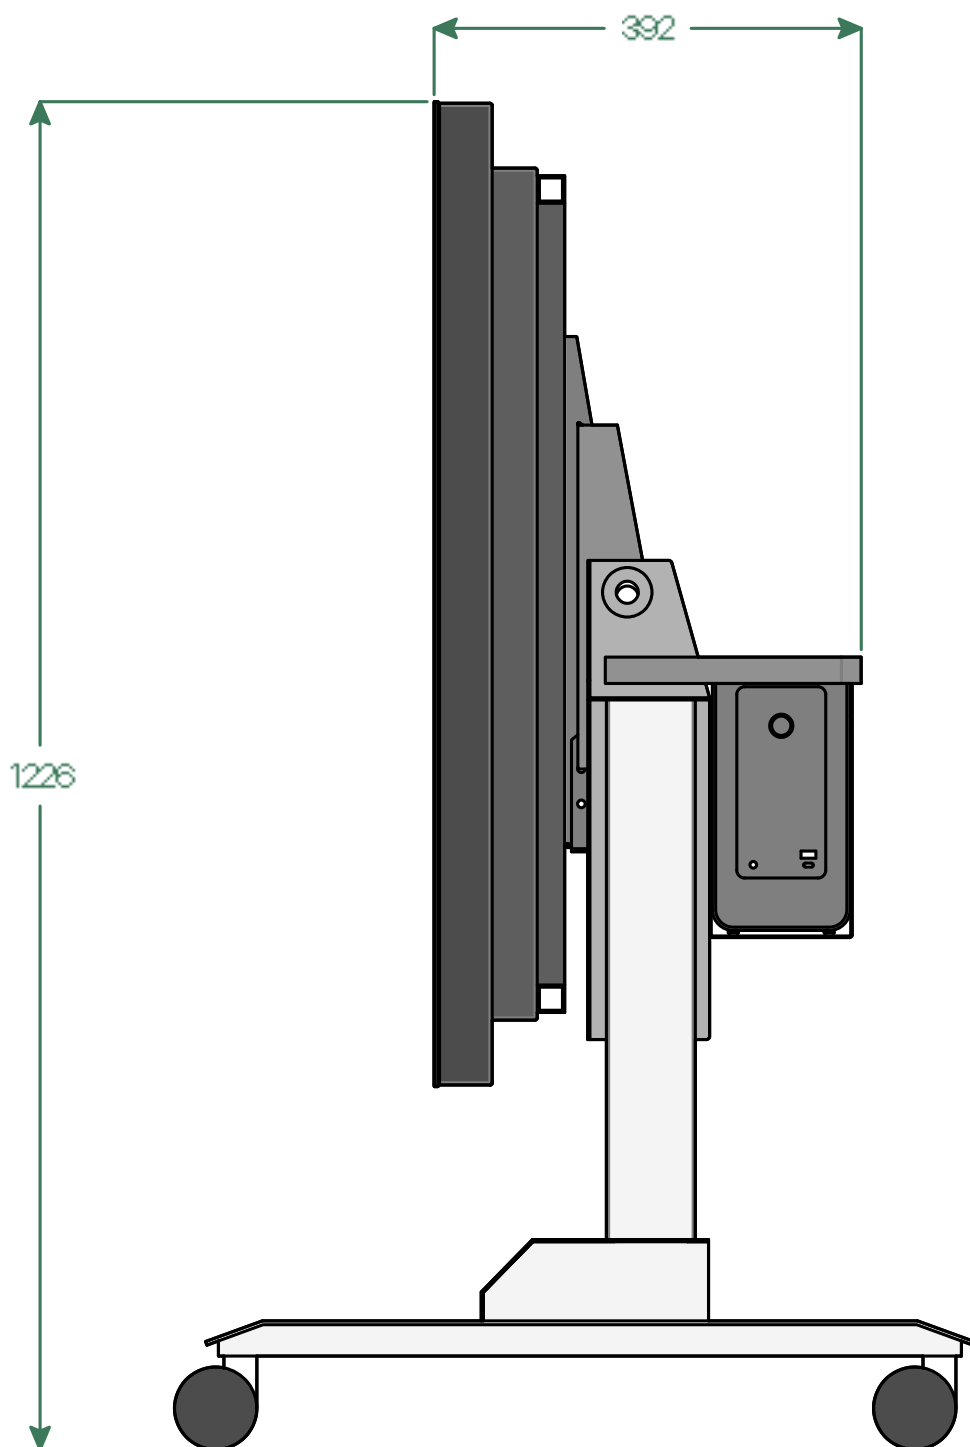



**Interactive Scape GmbH**

Wilhelmine-Gemberg-Weg 6, D-10179 Berlin

T +49 30 69 809 41-00, F +49 30 69 809 429

[www.interactive-scape.com](http://www.interactive-scape.com), [info@interactive-scape.com](mailto:info@interactive-scape.com)